

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [KUNPHY](#) /

› [KUNPHY Ultrasonic Jewelry Cleaner BCM-187 Instruction Manual](#)

## KUNPHY BCM-187

# KUNPHY Ultrasonic Jewelry Cleaner BCM-187

Instruction Manual

## 1. INTRODUCTION

This manual provides essential information for the safe and effective use of your KUNPHY Ultrasonic Jewelry Cleaner, model BCM-187. This device utilizes ultrasonic waves to clean various items such as jewelry, eyeglasses, and small accessories, offering a thorough cleaning process.



The KUNPHY Ultrasonic Jewelry Cleaner, designed for effective cleaning of various items.

## 2. SAFETY INFORMATION

Please read all safety instructions before operating the device to prevent injury or damage.

- Do not immerse the main unit in water or other liquids.
- Ensure the power cord is not damaged and is properly connected to a suitable power outlet.
- Keep the device out of reach of children.
- Do not operate the cleaner without water in the tank.
- Avoid cleaning items that are sensitive to ultrasonic vibrations, such as certain types of pearls, emeralds, or glued items. Consult a jeweler if unsure.
- Unplug the device when not in use and before cleaning.

### 3. PACKAGE CONTENTS

Verify that all items are present in the package:

- KUNPHY Ultrasonic Jewelry Cleaner (BCM-187)

### 4. PRODUCT OVERVIEW

The KUNPHY Ultrasonic Jewelry Cleaner features a compact design with a stainless steel cleaning tank and a simple one-touch operation button. It is equipped with a transparent lid to observe the cleaning process.




The compact and portable design of the KUNPHY Ultrasonic Jewelry Cleaner, with dimensions indicated.

### 5. SETUP AND OPERATION

Follow these steps for initial setup and to operate your ultrasonic cleaner:

1. **Fill the Tank:** Open the lid and pour tap water into the stainless steel tank. Do not exceed the maximum water level indicator.
2. **Place Items:** Carefully place the items you wish to clean into the water. Ensure items are fully submerged but not overcrowded.
3. **Add Cleaning Solution (Optional):** For enhanced cleaning results, add a few drops of liquid dish soap or a specialized KUNPHY cleaning solution to the water.
4. **Start Cleaning:** Close the lid and press the one-touch ON/OFF button. The indicator light will illuminate, and the cleaning cycle will begin. The device operates with a 3-minute cleaning cycle.
5. **Finish Cleaning:** Once the cycle is complete, the device will automatically stop. Open the lid, carefully remove your items, and rinse them under clean water. Dry with a soft cloth.

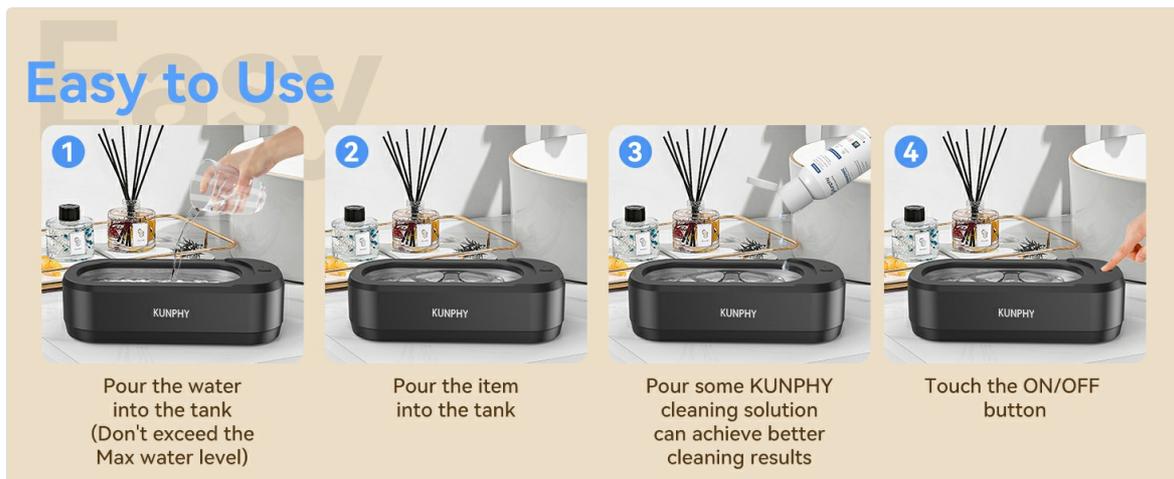


Step-by-step guide for operating the KUNPHY Ultrasonic Jewelry Cleaner.

### Items Suitable for Cleaning:

- Jewelry (rings, necklaces, earrings, bracelets)
- Eyeglasses and sunglasses
- Watch coins (waterproof watches only)
- Dentures and retainers
- Small metal items

# Multi-purpose Ultrasonic Cleaner

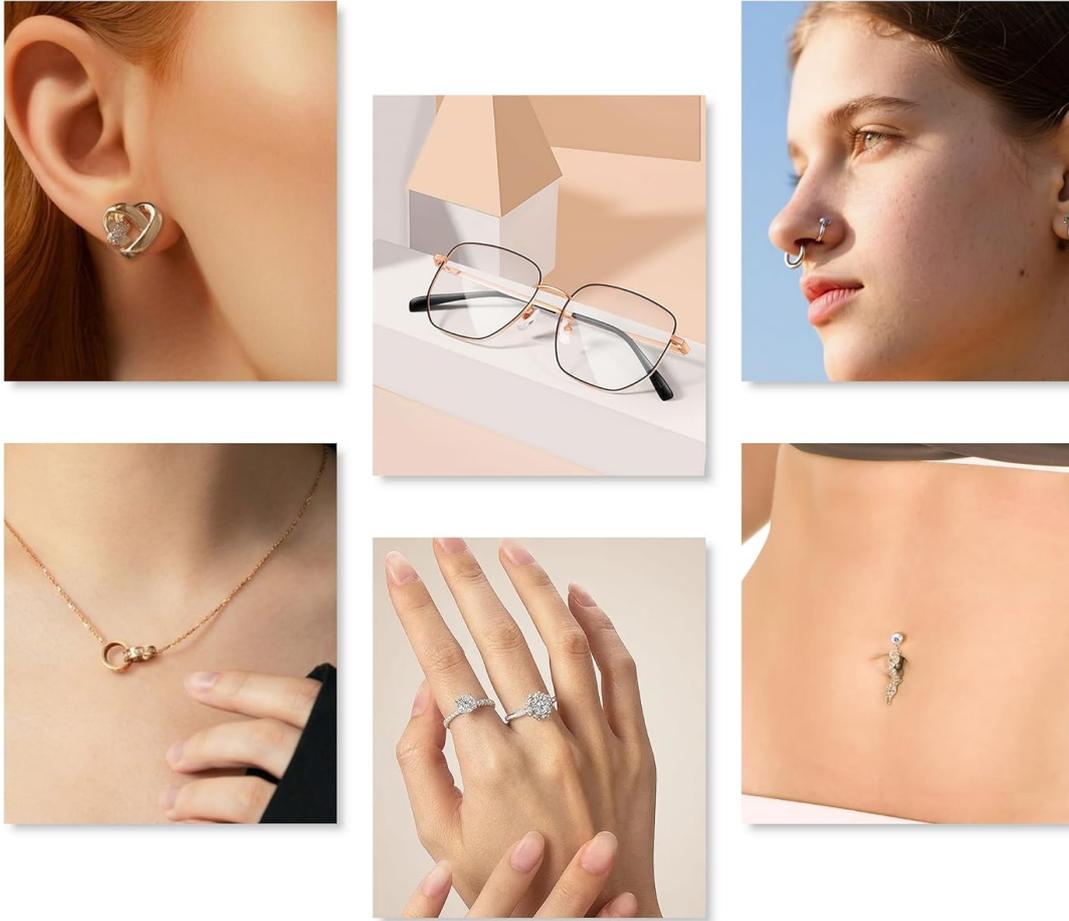

Examples of items that can be cleaned using the KUNPHY Ultrasonic Jewelry Cleaner.

## Cleaning Performance:

The cleaner operates at 46KHz, providing 360-degree deep cleaning. The process is designed to be gentle yet effective, removing dirt and grime from hard-to-reach areas without causing damage.

## 46000Hz for Powerful & Safe Cleaning

Provides 360° deep cleaning without damage



Illustration of the 46000Hz ultrasonic cleaning frequency and its effectiveness on eyeglasses.

## 6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your cleaner.

- **After Each Use:** Unplug the device. Empty the water from the tank and wipe the interior with a soft, dry cloth.
- **Exterior Cleaning:** Wipe the exterior of the unit with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Storage:** Store the cleaner in a cool, dry place when not in use.

## 7. TROUBLESHOOTING

If you encounter issues with your KUNPHY Ultrasonic Jewelry Cleaner, refer to the following common

problems and solutions:

Problem	Possible Cause	Solution
Device does not turn on.	No power supply.	Ensure the power cord is securely plugged into both the device and a working electrical outlet.
Cleaning performance is poor.	Insufficient water or no cleaning solution.	Ensure the tank is filled to the appropriate level. Consider adding a few drops of liquid dish soap or KUNPHY cleaning solution.
Red indicator light is flashing.	Overheat protection activated.	Unplug the device and allow it to cool down for a few minutes before attempting to use it again.

## 8. SPECIFICATIONS

- **Model:** BCM-187
- **Tank Capacity:** 12 oz (350ml)
- **Ultrasonic Frequency:** 46KHz
- **Cleaning Cycle:** 3 minutes (one-touch operation)
- **Product Dimensions:** 7 x 3 x 3 inches
- **Weight:** 1.1 Pounds
- **Tank Material:** SUS 304 Stainless Steel
- **Noise Level:** Less than 45dB (low-noise design)

## Low Noise Design



The low-noise design of the KUNPHY Ultrasonic Jewelry Cleaner, operating at less than 45dB.

### 9. WARRANTY AND SUPPORT

KUNPHY provides a **12-month warranty** for this product. For any questions or support needs, please contact KUNPHY customer service.

To contact support, navigate to your Amazon account:

1. Go to **Account**.
2. Select **Orders**.
3. Find your order for the KUNPHY Ultrasonic Jewelry Cleaner and click on **Order Detail**.
4. Locate the 'Sold by: KUNPHY' section and click **Ask a question**.

