



[Manuals.plus](#) /

› [BOXPUT](#) /

› [BOXPUT BPR1S Air Mouse Remote Control User Manual](#)

BOXPUT BPR1S

BOXPUT BPR1S Air Mouse Remote Control User Manual

INTRODUCTION

Welcome to your BOXPUT BPR1S Air Mouse Remote Control. This manual will guide you through the setup, operation, and maintenance of your device. Please read these instructions carefully before use to ensure optimal performance and longevity of your remote control.

PRODUCT OVERVIEW

The BOXPUT BPR1S is a versatile remote control designed for use with PCs and most Android devices. It features Bluetooth connectivity, voice input, a 6-axis gyroscope for air mouse functionality, and infrared (IR) learning capabilities.



This image illustrates the front and back of the BOXPUT BPR1S remote control, highlighting its various buttons and the QR code for the electronic manual on the reverse side.

SETUP

1. Battery Installation

The remote control requires two AAA batteries (not included). Open the battery compartment cover on the back of the remote and insert the batteries, ensuring correct polarity (+/-). Replace the cover securely.

2. Bluetooth Pairing

To pair the remote control with a new device via Bluetooth:

1. Press and hold the **OK** button and the **Back** button simultaneously until the indicator light flashes.
2. Place the remote control within 1 meter of your device to facilitate faster pairing.
3. On your device, open Bluetooth settings, search for "BOXPUT BPR1S Plus", and select it to complete pairing.

3. PC Firmware Switch

The remote has two firmware modes: one for Android devices and one for PCs. The default setting is for Android devices.

1. To switch to PC firmware: Press and hold the **OK** button and the **Mouse** button simultaneously until the indicator light flashes. This indicates the switch to PC-specific firmware is complete.
2. To switch back to Android firmware: Press and hold the **OK** button and the **Mouse** button simultaneously again.

OPERATING INSTRUCTIONS

1. Voice Input

The BPR1S supports voice input for convenient control, search, and navigation on Android TV and media players.

To use voice input, press the **Voice** button (microphone icon) and speak your command. This allows for text input, channel search, and video/app control.

Note: Voice search functionality is typically limited to the built-in voice search box or compatible applications. It does not function across all applications.



This image shows a family using the remote to control a TV with voice commands, demonstrating its ease of use for tasks like playing music, opening YouTube, checking the weather, or adjusting volume.

2. 6-Axis Gyroscope (Air Mouse)

The remote features a built-in 6-axis gyroscope sensor, enabling precise air mouse control for Android TV boxes and PCs.

Move your wrist to control the cursor on the screen, allowing for remote operation of computers and projectors.



This image illustrates the remote control being used from a distance, highlighting its effective operating range of 10 meters and a quick response time of 0.2 seconds, enabled by the 6-axis gyroscope.

3. IR Learning Function

All buttons on the BPR1S remote support infrared (IR) learning. This allows you to program functions from other IR remotes onto the BPR1S.

1. Place the BPR1S and the original IR remote on a flat surface, facing each other, with their IR emitters as close as possible.
2. Press and hold the desired button on the BPR1S that you wish to program. The indicator light will flash slowly.

3. Press the corresponding button on the original IR remote. The indicator light on the BPR1S will flash rapidly, then stay solid, indicating successful learning.
4. Repeat for other buttons as needed.
5. After IR learning is complete, the power button will prioritize sending the IR signal in Bluetooth mode.

Note: For Samsung TVs, only the Power, Mute, Volume+, and Volume- buttons can be programmed via IR learning. Other buttons do not support IR learning for Samsung TVs.



This image illustrates the process of infrared learning, where the BPR1S remote is positioned opposite an original remote to copy its functions.

4. Button Functions

Refer to the diagram below for an overview of the remote's buttons and their primary functions.



This diagram provides a visual guide to each button on the BOXPOT BPR1S remote, including Power, Home, Menu, Mute, Voice, Directional Pad (Up, Down, Left, Right, OK), Delete, Mouse toggle, Back, Volume Up, and Volume Down. The back of the remote shows the model number and a QR code for the electronic manual.

COMPATIBILITY

This multi-functional remote control is compatible with PCs and most Android devices, serving as a replacement for many media player remotes.

Compatible Devices: Android TV boxes, Android TV sticks, and other Android devices.

Incompatible Devices: Secondary customized Android devices and Linux devices (e.g., Fire TV Stick, DVB set-top boxes, ROKU set-top boxes, MAG set-top boxes, Apple TV, and some TVs).

If you have concerns about compatibility, please inquire before purchase.

互換デバイス:

Androidテレビボックス、Androidテレビスティック、その他のAndroidデバイス



互換性のないデバイス:

アマゾンFireテレビスティック、DVBケース、ROKUケース、MAGケース、アップルケース、一部のLG、サムスンテレビ



This image displays various streaming devices and set-top boxes, categorizing them into compatible (Android TV boxes, Android TV sticks) and incompatible (Fire TV Stick, Apple TV, Roku, etc.) devices for the BPR1S remote.

MAINTENANCE

To ensure the longevity and optimal performance of your remote control:

- Keep the remote clean by wiping it with a soft, dry cloth.
- Avoid exposing the remote to extreme temperatures, humidity, or direct sunlight.
- Do not drop or subject the remote to strong impacts.
- Remove batteries if the remote will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

Common Issues and Solutions

- **OK button not working in Google login screen (Mouse mode):** This is a known limitation. Use the directional keys or switch out of mouse mode if possible.

- **IR learning issues:** Ensure Bluetooth is disconnected before performing IR learning.
- **Initial TV connection:** An original TV remote may be required for the initial connection setup.
- **Bluetooth disconnection:** If Bluetooth frequently disconnects, try reconnecting Bluetooth or restarting the device.
- **Battery cover loose:** If the battery cover feels loose, ensure it is properly seated. If the issue persists, contact customer support.
- **Electronic Manual QR code unreadable:** If the QR code on the remote is unreadable, refer to the product page for instructions or contact customer support.

SPECIFICATIONS

Attribute	Detail
Brand	BOXPUT
Model Number	BPR1S
Color	Black
Features	Dual-sided 6-axis gyroscope, Wide compatibility with Android devices, IR & Bluetooth, Voice search
Max Number of Supported Devices	1
Compatible Devices	Streaming devices
Connectivity Interface	Bluetooth
Number of Buttons	10
Controller Type	Button Control
Maximum Range	10 meters
Battery Type	AAA x 2 (not included)
Manufacturer Model Number	10500009

WARRANTY AND SUPPORT

The BOXPUT BPR1S Air Mouse Remote Control comes with a 1-year warranty from the date of purchase. For support, please refer to the electronic manual accessible via the QR code on the back of the remote, or contact BOXPUT customer service through the retailer where you purchased the product.

The electronic manual is provided in English by default but can be translated into your preferred language using your browser's translation functions.