

[Manuals.plus](#) /

> [Lenovo](#) /

> [Lenovo IdeaPad Slim 3i Laptop User Manual](#)

Lenovo IdeaPad Slim 3i

Lenovo IdeaPad Slim 3i Laptop User Manual

Model: IdeaPad Slim 3i

1. INTRODUCTION

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Lenovo IdeaPad Slim 3i Laptop. Designed for portability and efficiency, this laptop features an Intel Core i3-N305 processor, a 15.6" FHD display, 8GB LPDDR5 RAM, and a 256GB SSD, running on Windows 11 Home in S mode. Please read this manual thoroughly to ensure optimal performance and longevity of your device.



Figure 1: Lenovo IdeaPad Slim 3i Laptop

2. SETUP

2.1 Unboxing and Initial Inspection

Carefully remove all components from the packaging. Verify that all items listed in the packing slip are present and inspect the laptop for any physical damage. Retain the packaging for future transport or service needs.

2.2 Powering On and Initial Configuration

1. Connect the AC adapter to the laptop's power connector and then to a power outlet.
2. Open the laptop lid and press the power button, typically located on the top-right of the keyboard.
3. Follow the on-screen instructions to complete the Windows 11 Home in S mode setup. This includes selecting your region, language, connecting to a Wi-Fi network, and creating a user account.



Figure 2: Keyboard and Display

2.3 Connecting Peripherals

Your IdeaPad Slim 3i supports various connectivity options:

- **Wi-Fi 6:** Connect to wireless networks for internet access.
- **Bluetooth 5:** Pair with compatible devices such as mice, keyboards, and headphones.
- **USB Ports:** Two USB 3.2 Gen 1 ports for connecting external devices.
- **USB-C 3.2 Gen 1:** Supports data transfer, Power Delivery, and DisplayPort 1.2 for external displays.
- **HDMI 1.4:** Connect to external monitors or TVs.
- **Headphone/Microphone Combo Jack (3.5mm):** For audio input/output.
- **Card Reader:** For reading SD cards (a 64GB SD card is included).



Figure 3: Left Side Ports



Figure 4: Right Side Ports

3. OPERATING INSTRUCTIONS

3.1 Keyboard and Touchpad

The laptop features a full-size chiclet keyboard with a numeric keypad for efficient data entry. The precision touchpad supports multi-touch gestures for navigation and control.

3.2 Camera with Privacy Shutter

The integrated 720p HD camera includes a physical privacy shutter. Slide the shutter to cover the camera lens when not in use to ensure your privacy.

3.3 Audio

The laptop is equipped with user-facing speakers for clear audio output. Adjust volume using the dedicated function keys on the keyboard or through the Windows sound settings.

3.4 Windows 11 Home in S Mode

Your laptop operates in Windows 11 Home in S mode, which is designed for security and performance. In S mode, you can only install apps from the Microsoft Store and must use Microsoft Edge for safe browsing. If you need to install apps from outside the Microsoft Store, you can switch out of S mode permanently. This process is irreversible.

4. MAINTENANCE

4.1 Battery Care

The 3-cell, 47Whr Lithium-Ion battery provides up to 8 hours of usage. To maximize battery lifespan:

- Avoid extreme temperatures.
- Do not fully discharge the battery frequently.
- Utilize the Rapid Charge Boost feature for quick charging when needed.
- Unplug the AC adapter once the battery is fully charged if you plan to use the laptop on battery power.

4.2 Cleaning Your Laptop

- Use a soft, lint-free cloth slightly dampened with water or a screen cleaner for the display.
- For the keyboard and chassis, use a soft cloth. Avoid harsh chemicals.
- Ensure the laptop is powered off and unplugged before cleaning.

4.3 Software Updates

Regularly check for and install Windows updates to ensure your system has the latest security patches and performance improvements. You can find update settings in the Windows Settings menu.

5. TROUBLESHOOTING

5.1 Common Issues and Solutions

- **Laptop not powering on:** Ensure the AC adapter is securely connected and the power outlet is functional. Try holding the power button for 10-15 seconds to perform a hard reset.
- **No Wi-Fi connection:** Check if Wi-Fi is enabled in Windows settings. Restart your router and modem. Ensure your Wi-Fi drivers are up to date.
- **Slow performance:** Close unnecessary applications. Check for background processes consuming resources. Ensure your system is up to date. Consider running a disk cleanup.
- **Camera not working:** Verify the privacy shutter is open. Check camera permissions in Windows settings. Ensure camera drivers are installed and updated.

For more detailed troubleshooting, refer to the Lenovo support website or the eSupport QR code found on your laptop's palm rest.

6. SPECIFICATIONS

Feature	Detail
Brand	Lenovo
Model Name	Lenovo IdeaPad Slim 3i
Screen Size	15.6 Inches

Feature	Detail
Display Resolution	1920 x 1080 Pixels (FHD)
Display Type	TN LCD, Anti-glare, 250 nits
Processor	Intel Core i3-N305 (8-Core, up to 3.8 GHz)
Graphics	Integrated Intel UHD Graphics
RAM	8GB LPDDR5-4800
Storage	256GB SSD M.2 2242 PCIe 4.0x4 NVMe
Operating System	Windows 11 Home in S mode
Wireless Connectivity	Wi-Fi 6 (802.11ax), Bluetooth 5
Ports	2x USB 3.2 Gen 1, 1x USB-C 3.2 Gen 1 (Data, PD, DP 1.2), 1x HDMI 1.4, 1x Headphone/Mic Combo, 1x Card Reader, 1x Power Connector
Camera	720p HD with Privacy Shutter
Battery Life	Up to 8 Hours
Dimensions (WxDxH)	14.15" x 9.25" x 0.70"
Weight	3.42 lbs
Color	Arctic Grey
Included Accessories	64GB SD card

7. WARRANTY AND SUPPORT

7.1 Product Warranty

Your Lenovo IdeaPad Slim 3i Laptop comes with a **1-Year Limited Warranty**. This warranty covers manufacturing defects and hardware malfunctions under normal use. For full terms and conditions, please refer to the warranty documentation included with your product or visit the official Lenovo support website.

7.2 Technical Support

For technical assistance, driver downloads, or further troubleshooting, please visit the official Lenovo Support website. You can also scan the eSupport QR code located on the palm rest of your laptop for direct access to support resources.



Figure 5: eSupport QR Code on Palm Rest