

## Zulay Kitchen B0DQ22GPKD

# Zulay Magia Super Automatic Espresso Maker User Manual

Model: B0DQ22GPKD

## INTRODUCTION

The Zulay Magia Super Automatic Espresso Maker is designed to provide a wide range of coffee beverages with ease and convenience. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your machine to ensure optimal performance and longevity.

## 1. SETUP

### 1.1 Unpacking and Component Identification

Carefully remove all components from the packaging. Ensure all parts are present and undamaged. Refer to the diagram below for component identification.

# SPECIALTY COFFEE AT HOME

at the touch of a button



An exploded diagram of the Zulay Magia espresso maker, highlighting key components such as the Touch Screen Control Panel, Cup Warmer, Coffee Bean Container, Water Tank, Pre-ground Coffee Funnel, Brewing Unit, Waste Bin, and Drip Tray.

This illustration helps in understanding the machine's internal structure and removable parts for maintenance.

## 1.2 Initial Cleaning

Before first use, wash the water tank, drip tray, and coffee waste bin with warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the machine with a damp cloth.

## 1.3 Water Tank Filling

Remove the water tank from the back of the machine. Fill it with fresh, cold water up to the MAX line. Reinsert the tank securely.

## 1.4 Coffee Bean Hopper Filling

Open the lid of the coffee bean hopper located on top of the machine. Fill with fresh, whole coffee beans. Close the lid securely.

## 1.5 Power Connection

Plug the power cord into a grounded electrical outlet. The machine will power on and initiate a self-check cycle.

## 2. OPERATING INSTRUCTIONS

### 2.1 Touchscreen Interface

The Zulay Magia features an intuitive 7-inch touchscreen for easy navigation and selection of coffee options.



The Zulay Magia Super Automatic Espresso Maker, shown in silver, features a large touchscreen interface displaying a selection of coffee beverages such as Espresso, Ristretto, Long Espresso, Americano, Cappuccino, Latte, Flat White, and Cortado. Two glasses of espresso are placed on the drip tray, and a latte is shown to the side.

### 2.2 Customizing Coffee Options

The machine offers 19 fully customizable coffee options. You can adjust:

- **Coffee Strength:** Adjust the amount of coffee grounds used.
- **Coffee Volume:** Control the liquid volume of your beverage.
- **Temperature:** Set your preferred brewing temperature.
- **Milk Volume:** For milk-based drinks, adjust the amount of hot milk.

- **Milk Froth Volume:** Customize the amount of foam for lattes and cappuccinos.



A detailed view of the Zulay Magia's touchscreen, illustrating the customization settings for a Cappuccino. Users can adjust coffee strength, coffee volume, temperature control, hot milk volume, and milk froth volume, with sliders for precise control.

You can save up to 10 user profiles with your preferred settings.

## 2.3 Brewing a Beverage

1. Place your cup(s) under the coffee dispenser.
2. Select your desired beverage from the touchscreen menu.
3. Adjust settings if necessary, then press the 'Start' button.

The machine can brew two cups simultaneously using the dual coffee drip feature.

# BREW IT YOUR WAY

## 19 specialty drinks with fully customizable recipes



The Zulay Magia espresso maker is depicted with an array of different coffee beverages, including lattes, cappuccinos, and espressos, showcasing the machine's ability to prepare 19 specialty drinks with fully customizable recipes.

### 2.4 Using Pre-Ground Coffee

The machine supports both fresh coffee beans and pre-ground coffee. To use pre-ground coffee, open the pre-ground coffee funnel and add the appropriate amount before selecting your drink.

### 2.5 Adjusting Grind Fineness

The integrated stainless steel conical burr grinder allows for grind fineness adjustment. Locate the fineness adjustment knob within the bean hopper and turn it to your desired setting. Finer grinds typically result in stronger espresso.

# PRE-GROUND COFFEE TO WHOLE BEANS

at the touch of a button



A close-up image showing the coffee bean container of the Zulay Magia espresso maker, filled with whole coffee beans. An arrow points to the fineness adjustment knob, indicating how users can tailor the grind for their coffee.

## 2.6 Adjustable Coffee Drip System

The coffee drip system can be adjusted to accommodate various mug sizes, from 3.5 inches to 5.1 inches in height.

# ADJUSTABLE COFFEE DRIP



The Zulay Magia espresso maker is shown with its adjustable coffee drip system. One image displays a cup fitting under a 3.5-inch clearance, while the other shows a taller mug fitting under a 5.1-inch clearance, illustrating the flexibility for various mug sizes.

## 3. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Zulay Magia espresso maker.

### 3.1 Auto-Cleaning Function

The machine features an auto-cleaning function that simplifies daily upkeep. The system will prompt you for cleaning cycles as needed.

### 3.2 Removable Parts Cleaning

The drip tray, water tank, and coffee waste bin are all removable and dishwasher safe for easy cleaning. Refer to the component diagram in Section 1.1 for location of these parts.

### 3.3 Descaling

The machine will indicate when descaling is required. Follow the on-screen instructions for the descaling process. Use a descaling solution recommended for espresso machines.

## 4. TROUBLESHOOTING

This section addresses common issues you might encounter with your Zulay Magia espresso maker.

Problem	Possible Cause	Solution
Coffee is not hot enough.	Temperature setting is too low.	Increase the temperature setting via the touchscreen customization options.
Milk frother not producing foam or milk tube issues.	Milk tube is clogged or not properly connected.	Ensure the milk tube is clean and free of blockages. Verify it is securely connected. Run the milk system cleaning cycle.
Machine not brewing or grinding.	Grind fineness setting is incorrect for the beans used; water tank empty; coffee bean hopper empty.	Adjust the grind fineness knob. Refill the water tank. Refill the coffee bean hopper. Check for on-screen error messages.
Descaling warning persists.	Descaling cycle not completed or hard water buildup.	Perform a full descaling cycle as per the machine's instructions. Consider adjusting water hardness settings if available.

If the issue persists after attempting these solutions, please refer to the Warranty and Support section for further assistance.

## 5. SPECIFICATIONS

- **Brand:** Zulay Kitchen
- **Model:** B0DQ22GPKD
- **Color:** Silver
- **Product Dimensions:** 19"D x 25"W x 34"H
- **Special Features:** Adjustable Brew Strength, Auto Clean Function, Cup Warmer, Integrated Coffee Grinder, Milk Frother
- **Coffee Maker Type:** Espresso Machine
- **Filter Type:** Reusable
- **Item Weight:** 33 pounds
- **UPC:** 195702026738

## 6. WARRANTY AND SUPPORT

The Zulay Magia Super Automatic Espresso Maker comes with a **one-year warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical support, or any questions not covered in this manual, please contact Zulay Kitchen customer service. Refer to your product packaging or the official Zulay Kitchen website for the most current contact information.

When contacting support, please have your product model number (B0DQ22GPKD) and proof of purchase readily available.

