

[Manuals.plus](#) /

› [kiecky squirrel](#) /

› kiecky squirrel Visual Timer ML6300 User Manual

kiecky squirrel ML6300

kiecky squirrel Visual Timer ML6300 User Manual

Model: ML6300

1. INTRODUCTION

The kiecky squirrel Visual Timer ML6300 is a 60-minute countdown device designed to assist with time management. Its visual display helps users, particularly children, understand the passage of time. The silent operation makes it suitable for various environments such as classrooms, kitchens, and study areas.



Image 1.1: Front view of the kiecky squirrel Visual Timer ML6300, displaying its green casing and the white dial with a rainbow-colored time indicator.

2. SAFETY INFORMATION

- Keep the device away from water and excessive moisture.
- Do not expose to extreme temperatures.
- Use only the specified battery type (AAA).
- Dispose of batteries properly according to local regulations.
- This product contains small parts and is not a toy. Adult supervision is recommended when used by young children.

3. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x kiecky squirrel Visual Timer ML6300
- 1 x User Manual (this document)

Note: 2 AAA batteries are required and are not included in the package.

4. PRODUCT FEATURES

- **Visual Time Management:** The timer features a disappearing rainbow-colored disc that visually represents the remaining time, aiding in time comprehension, especially for children.
- **Unique Circular Design:** An aesthetically pleasing circular shape with a rainbow pattern.
- **Simple Operation:** Easy to set the desired time by rotating the central knob.
- **Versatile Application:** Suitable for various settings including classrooms, kitchens, bedrooms, libraries, and gyms.
- **Adjustable Volume:** Offers three volume settings: high, medium, and mute, to suit different environments.
- **Silent Movement:** Equipped with an exclusive silent movement for quiet operation, preventing distractions.
- **Energy Efficient:** Requires 2 AAA batteries, providing approximately 6 to 8 months of use.

Rainbow Fun

Cartoon,Cute & Interesting
kids's Favorite Developing a sense of
time and good habits



Image 4.1: The visual timer displayed alongside rainbow-colored toys, highlighting its design appeal.

5. SETUP

5.1 Battery Installation

1. Locate the battery compartment on the back of the timer.
2. Open the battery compartment cover.
3. Insert 2 AAA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

Kitchen Helper

Forgot to turn off the heat when cooking
Timing thoughtful reminders for you



Image 5.1: Rear view of the timer, indicating the battery compartment and control elements.

6. OPERATING INSTRUCTIONS

6.1 Setting the Timer

1. To set the desired countdown time, rotate the central knob clockwise. The rainbow-colored disc will expand to indicate the set time, up to a maximum of 60 minutes.
2. To decrease the set time, rotate the central knob counter-clockwise.
3. Once set, the timer will begin counting down silently. The colored disc will gradually disappear as time elapses.

6.2 Alarm and Flash Function

1. When the set time has elapsed, the timer will activate an audible alarm or a flashing light (depending on

settings).

2. To stop the alarm or flash, press the button located on the top of the timer.

6.3 Volume Adjustment

The timer offers three volume settings: high, medium, and mute. Use the volume switch (typically located on the back or side) to select the appropriate setting for your environment.



Image 6.1: Illustration of the timer's simple operation, showing how to adjust time using the central knob.

7. MAINTENANCE

- Clean the timer with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- If the timer will not be used for an extended period, remove the batteries to prevent leakage.
- Store in a cool, dry place away from direct sunlight.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Timer does not start or operate.	Batteries are dead or incorrectly installed.	Check battery polarity or replace with new AAA batteries.
No alarm sound.	Volume is set to mute.	Adjust the volume switch to high or medium.
Colored disc does not move.	Timer mechanism is jammed or damaged.	Ensure no foreign objects are obstructing the mechanism. If issue persists, contact support.

9. SPECIFICATIONS

- **Model Number:** ML6300
- **Brand:** kiecky squirrel
- **Dimensions (L x W x H):** 8.89 x 7.24 x 8.89 cm
- **Weight:** 120 Grams
- **Material:** Plastic
- **Power Source:** 2 x AAA Batteries (not included)
- **Maximum Time Setting:** 60 minutes
- **UPC:** 680306509287

10. WARRANTY AND SUPPORT

The manufacturer offers a 180-day free replacement policy for this product. For warranty claims, technical assistance, or any product-related inquiries, please contact your retailer or the manufacturer directly with your purchase details.

© 2024 kiecky squirrel. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question