

POWERTEC TR-3333

POWERTEC TR-3333 Ionizer 5 Function Plasma Hair Dryer

User Manual

INTRODUCTION

Thank you for choosing the POWERTEC TR-3333 Ionizer 5 Function Plasma Hair Dryer. This advanced hair dryer is designed for efficient and gentle hair drying and styling, featuring ionizer technology to reduce frizz and enhance shine. Please read this manual carefully before use to ensure safe and optimal performance of your device.

IMPORTANT SAFETY INFORMATION

WARNING: To reduce the risk of electric shock, fire, or injury, always follow these basic safety precautions:

- Do not use this appliance near water, such as in bathtubs, showers, basins, or other vessels containing water.
- Do not immerse the appliance in water or any other liquid.
- Always unplug the appliance immediately after use.
- Do not use the appliance if the cord or plug is damaged.
- Keep the appliance away from heated surfaces.
- Do not block the air openings or place the appliance on a soft surface, such as a bed or couch, where the air openings may be blocked.
- Avoid overheating risk.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

PRODUCT FEATURES

- **Ionizer Technology:** Reduces static and frizz, leaving hair smooth and shiny.
- **Powerful Motor:** 1600 Watt motor with 110,000 RPM for fast drying.
- **Adjustable Settings:** 3 distinct airflow speeds and 4 heat settings for versatile styling.

- **Cold Air Function:** A dedicated cold shot button to set your style.
- **Smart Heat Control:** Maintains optimal temperature at 100 °C to prevent heat damage.
- **Ergonomic Design:** Lightweight and balanced for comfortable use.
- **Overheating Protection:** Built-in safety mechanism to prevent damage from excessive heat.

PACKAGE CONTENTS

The POWERTEC TR-3333 hair dryer comes with the following components:

- POWERTEC TR-3333 Hair Dryer Unit
- Flyaway Attachment
- Gentle Air Attachment
- Diffuser
- Smoothing Nozzle
- Styling Concentrator



Turbo Professional Hair Dryer



TR 3333
110.000 RPM MOTOR

FAST DRYING
INNOVATION TECH
HIGH POWER

PROFESSIONAL
Powerful Digital Motor, Designed For Fast Drying



Flyway Attachment

For a smooth finish. Attracts longer hairs, and hides flyaways, using the Coanda effect.



Gentle Air Attachment

Cooler, gentle drying for fine hair and delicate scalps.



Diffuser

Even diffusion to help define curls and reduce frizz.



Smoothing Nozzle

Helps create volume and body. Decreases frizz for a smooth, natural look.



Styling Concentrator

Wider and thinner for precision styling.

Image: Product packaging displaying the hair dryer and its included attachments.

1. **Unpack:** Carefully remove all components from the packaging. Retain the packaging for future storage or transport.
2. **Inspect:** Check the hair dryer and all attachments for any signs of damage. Do not use if damaged.
3. **Connect Power:** Ensure your hands are dry. Plug the power cord into a suitable electrical outlet (220V).
4. **Attach Nozzle (Optional):** Select the desired styling attachment (e.g., Smoothing Nozzle, Diffuser) and firmly attach it to the front of the hair dryer until it clicks into place.





Image: Front view of the POWERTEC TR-3333 Hair Dryer.





Image: Back view of the POWERTEC TR-3333 Hair Dryer.

OPERATING INSTRUCTIONS

The POWERTEC TR-3333 features intuitive controls for customized drying and styling.

Controls Overview





Image: Side view showing the control buttons.

- **Power Button:** Located on the handle, press to turn the dryer ON/OFF.
- **Airflow Speed Buttons:** Use the buttons to cycle through 3 airflow speeds (low, medium, high). Indicators will light up to show the selected speed.
- **Heat Setting Buttons:** Use the buttons to cycle through 4 heat settings (cool, low, medium, high). Indicators will light up to show the selected heat level.
- **Cold Shot Button:** Press and hold this button for a burst of cool air to set your style.

Drying and Styling

1. **Preparation:** Towel-dry your hair to remove excess water.
2. **Power On:** Plug in the dryer and press the power button.
3. **Select Settings:** Choose your desired airflow speed and heat setting. Start with a lower heat and speed, especially for fine or damaged hair.
4. **Drying:** Direct the airflow towards your hair, moving the dryer constantly to prevent concentrating heat in one area.
5. **Styling:** Use the appropriate attachment for your desired style (see 'Attachments' section).
6. **Finish:** Once your hair is dry and styled, use the cold shot button to cool your hair and set the style for longer-lasting results.
7. **Power Off:** Press the power button to turn off the dryer and unplug it from the outlet.

ATTACHMENTS

The POWERTEC TR-3333 comes with five specialized magnetic attachments designed for various styling needs.

- **Smoothing Nozzle:**

This attachment provides a wide, smooth airflow, ideal for achieving a sleek, straight finish. It helps to dry and style hair simultaneously.





Image: Hair dryer with Smoothing Nozzle.

- **Styling Concentrator:**

The narrow, focused airflow of this attachment is perfect for precision styling, allowing you to style one section of hair at a time without disturbing the rest.





Image: Hair dryer with Styling Concentrator.

- **Diffuser:**

Designed to disperse air evenly around your curls, the diffuser helps to reduce frizz and define curls and waves naturally.





Image: Hair dryer with Diffuser.

- **Gentle Air Attachment:**

This attachment provides a cooler, gentler airflow, ideal for fine hair and sensitive scalps, or for quick touch-ups.





Image: Hair dryer with Gentle Air Attachment.

- **Flyaway Attachment:**

Specifically designed to hide flyaways under longer hair for a smooth, shiny finish. It uses the Coanda effect to lift longer hairs and tuck flyaways away.





Image: Hair dryer with Flyaway Attachment.

MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your hair dryer.

1. **Unplug:** Always unplug the hair dryer from the power outlet before cleaning.
2. **Cool Down:** Allow the appliance to cool down completely before handling.
3. **Clean Exterior:** Wipe the exterior of the hair dryer with a soft, damp cloth. Do not use abrasive cleaners or solvents.
4. **Clean Air Intake Filter:** The air intake filter at the back of the dryer can accumulate dust and hair. Gently twist or pull off the filter cover (refer to product design for specific removal method). Use a soft brush or a dry cloth to clean any debris from the filter. Reattach the filter cover securely.
5. **Store:** Store the hair dryer in a dry, safe place, away from moisture and direct sunlight. Do not wrap the power cord tightly around the appliance.

TROUBLESHOOTING

If you encounter any issues with your POWERTEC TR-3333 hair dryer, please refer to the following common problems and solutions:

- **No Power:**

Possible Cause: The hair dryer is not properly plugged in or there is no power from the outlet.

Solution: Ensure the plug is fully inserted into a working electrical outlet. Check your household's circuit breaker.

- **Hair Dryer Stops During Use:**

Possible Cause: Overheating protection activated.

Solution: Unplug the dryer and allow it to cool down for at least 10-15 minutes. Check the air intake filter for blockages and clean if necessary.

• **Weak Airflow:**

Possible Cause: Air intake filter is blocked with dust or hair.

Solution: Clean the air intake filter as described in the 'Maintenance' section.

• **Unusual Noise:**

Possible Cause: Debris inside the dryer or a loose component.

Solution: Unplug the dryer immediately. Do not attempt to open the appliance. Contact customer support for assistance.

• **Hair is Frizzy After Drying:**

Possible Cause: Ionizer function not working optimally or incorrect drying technique.

Solution: Ensure the ionizer is active (if indicated by a light). Try using a lower heat setting and finish with a cold shot to seal the hair cuticle.

If the problem persists after trying these solutions, please contact POWERTEC customer support.

TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	POWERTEC
Model Name	TR-3333
Product Dimensions (L x W x H)	33 x 23 x 10 cm
Product Weight	1.15 Kilogram
Color	Grey
Material	Plastic
Wattage	1600 W
Electric Power	1600 W
Power Source	Corded Electric
Voltage	220 V
Motor Performance	110,000 RPM
Number of Settings	5 (3 Airflow, 4 Heat, Cold Air)
Features	Adjustable, Overheating Protection, Portable, Turbo, Ionic Technology
Hair Type	All Hair Types
Recommended Uses	Wet & Dry Hair
Included Components	Styling Attachments (5 types)

WARRANTY AND SUPPORT

Warranty Information

The POWERTEC TR-3333 Ionizer 5 Function Plasma Hair Dryer comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims.

Customer Support

For technical assistance, warranty claims, or any questions regarding your product, please contact POWERTEC customer support.

Manufacturer Contact Information:

Serhat Mh. 1147.Cd 14/1

For the most up-to-date support information, please visit the official POWERTEC website or contact your local retailer.

© 2026 POWERTEC. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question