

[Manuals.plus](#) /

› [Bmax](#) /

› Bmax I10 Plus Tablet 10 Inches 12GB(4GB+8GB) /128GB Android 14.0 BT, Wi-Fi, Educational, Music User Manual

## Bmax I10 Plus

# Bmax I10 Plus Tablet User Manual

Model: I10 Plus

## INTRODUCTION

Welcome to the user manual for your new Bmax I10 Plus Tablet. This guide provides essential information to help you set up, operate, maintain, and troubleshoot your device. The Bmax I10 Plus is a versatile 10-inch tablet running Android 14, equipped with 12GB of RAM (4GB physical + 8GB extended) and 128GB of internal storage, designed for educational, entertainment, and productivity purposes.



This image displays the Bmax I10 Plus tablet, highlighting its 10.1-inch display, 12GB RAM (including 8GB extended memory), 128GB

internal storage, and Android 14 operating system. The tablet is shown connected to a detachable keyboard, indicating its versatility for productivity.

## SETUP

---

### 1. Unboxing and Initial Inspection

Carefully remove all components from the packaging. Ensure the following items are present:

- Bmax I10 Plus Tablet
- USB-C Charging Cable
- Power Adapter
- User Manual (this document)

Inspect the tablet for any visible damage before proceeding.

### 2. Charging the Tablet

Before first use, fully charge the tablet. Connect the USB-C cable to the tablet's charging port and the other end to the power adapter. Plug the adapter into a wall outlet. The charging indicator will typically illuminate or change color. A full charge may take several hours.

### 3. Powering On and Initial Setup

Press and hold the Power button (usually located on the side or top edge) until the Bmax logo appears on the screen. Follow the on-screen prompts to complete the initial setup:

- Select your language.
- Connect to a Wi-Fi network.
- Accept the terms and conditions.
- Sign in with your Google account or create a new one.
- Set up screen lock (PIN, pattern, or password).

## OPERATING INSTRUCTIONS

---

### 1. Basic Navigation

The Bmax I10 Plus uses a touch-sensitive screen for navigation:

- **Tap:** To select an item, open an app, or press a button.
- **Swipe:** To scroll through pages, home screens, or menus.
- **Pinch-to-zoom:** To zoom in or out on photos, maps, or web pages.
- **Long press:** To access contextual menus or move app icons.

### 2. Wi-Fi and Bluetooth Connectivity

To connect to Wi-Fi, go to *Settings > Network & internet > Wi-Fi*. Turn Wi-Fi on and select your desired network from the list. Enter the password if prompted.

To connect Bluetooth devices, go to *Settings > Connected devices > Connection preferences > Bluetooth*. Turn Bluetooth on, and the tablet will scan for available devices. Select the device you wish to pair with and follow any on-screen instructions.

### 3. App Management

Download apps from the Google Play Store. To uninstall an app, long-press its icon on the home screen or app drawer, then drag it to the 'Uninstall' option, or go to *Settings > Apps > See all apps*, select the app, and tap 'Uninstall'.

## 4. Storage Management

Monitor your storage usage by navigating to *Settings > Storage*. You can free up space by uninstalling unused apps, deleting large files, or transferring data to cloud storage or an external memory card (if supported).

# MAINTENANCE

---

## 1. Cleaning the Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. For stubborn smudges, slightly dampen the cloth with water or a screen-specific cleaning solution. Avoid using harsh chemicals or abrasive materials.

## 2. Software Updates

Regularly check for system updates to ensure your tablet has the latest features, security patches, and performance improvements. Go to *Settings > System > System update* to check for and install available updates.

## 3. Battery Care

To prolong battery life, avoid extreme temperatures. Do not let the battery completely drain frequently, and avoid keeping it at 100% charge for extended periods. Use the original charger provided with the tablet.

# TROUBLESHOOTING

---

## 1. Tablet Not Powering On

Ensure the tablet is sufficiently charged. Connect it to the charger and wait a few minutes before attempting to power it on again. If it still doesn't turn on, try holding the Power button for 10-15 seconds for a forced restart.

## 2. Wi-Fi Connectivity Issues

If you cannot connect to Wi-Fi, try the following:

- Toggle Wi-Fi off and on in Settings.
- Restart your Wi-Fi router.
- Forget the network and reconnect.
- Ensure you are within range of the Wi-Fi signal.

## 3. Slow Performance

If the tablet is running slowly, try closing unused apps, clearing app caches (*Settings > Apps > [App Name] > Storage & cache > Clear cache*), or restarting the device. Ensure you have sufficient free storage space.

## 4. Factory Reset

If persistent issues occur, a factory reset may be necessary. **Warning: This will erase all data on your tablet. Back up important data before proceeding.** Go to *Settings > System > Reset options > Erase all data (factory reset)* and follow the prompts.

# SPECIFICATIONS

---

| Feature | Detail        |
|---------|---------------|
| Model   | Bmax I10 Plus |
| Display | 10.1 Inches   |

|                  |                                    |
|------------------|------------------------------------|
| Operating System | Android 14.0                       |
| RAM              | 12GB (4GB physical + 8GB extended) |
| Storage (ROM)    | 128GB                              |
| Connectivity     | Wi-Fi, Bluetooth (BT)              |
| ASIN             | B0DQ4WHB54                         |
| First Available  | December 11, 2024                  |

## WARRANTY AND SUPPORT

Your Bmax I10 Plus Tablet comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the warranty period and coverage details. Keep your proof of purchase for warranty claims.

For technical support, troubleshooting assistance beyond this manual, or warranty inquiries, please contact Bmax customer service through their official website or the contact information provided with your purchase. When contacting support, please have your tablet's model number (I10 Plus) and ASIN (B0DQ4WHB54) ready.

© 2024 Bmax. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

