



[Manuals.plus](#) /

› [Emasme](#) /

› [Emasme 3-Gun Rifle Safe Instruction Manual](#)

Emasme gun safe

Emasme 3-Gun Rifle Safe Instruction Manual

Comprehensive guide for setup, operation, and maintenance of your Emasme Rifle Safe.

PRODUCT OVERVIEW

The Emasme 3-Gun Rifle Safe is designed to provide secure storage for your firearms and valuables. This model features a digital keypad, multiple unlocking methods, and an alarm system for enhanced security. Its compact design allows for versatile placement within your home or office.



Figure 1: Emasme 3-Gun Rifle Safe with digital keypad.

This gun safe is pre-assembled for immediate use, eliminating the need for complex setup. It can accommodate up to three rifles or shotguns measuring up to 46.85 inches in length, and includes removable shelves for flexible storage configurations. The safe offers three primary unlocking methods: key and handle, code and handle, or emergency battery box with code and handle. An integrated alarm system activates upon incorrect password attempts or unauthorized movement, and a mute mode is available for silent operation. Built from high-quality cold rolled steel with live-locking steel bolts, it provides robust protection against forced entry and features internal LED lighting for visibility.

SAFETY INFORMATION

- Always store firearms unloaded and locked within the safe.
- Keep keys and passcodes in a secure location, inaccessible to unauthorized individuals, especially children.
- Do not store the emergency key inside the safe.
- Ensure the safe is securely mounted to prevent tipping or unauthorized removal.
- Regularly check battery levels to ensure proper function of the electronic lock.

- Familiarize yourself with all operating procedures before storing firearms.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x Rifle Safe
- 2 x Spare Keys
- 4 x Expansion Bolts
- 1 x Emergency Charging Cable
- 1 x Instruction Manual (this document)
- 1 x Screw Kit

SETUP

Initial Placement and Mounting

The Emasme 3-Gun Rifle Safe comes fully assembled, ready for immediate use. For optimal security and stability, it is recommended to floor mount the safe using the provided expansion bolts. This prevents tipping and unauthorized removal.

180° Degree Opening



Figure 2: Internal features of the safe, including removable shelf and handgun pouches.

The safe features a removable shelf and handgun pouches, allowing you to customize the internal storage space to fit your specific needs. The 180-degree door opening provides full access to the safe's interior.

Battery Installation (First-Time Opening)

Before first use, or if the electronic keypad is unresponsive, install the batteries. The battery compartment is located inside the safe. You will need to open the safe using the emergency key for the first time.

1. Remove the keyhole cover to expose the emergency keyhole.
2. Fully insert your key into the keyhole and turn it counter-clockwise to the limit.
3. While holding the key, rotate the keypad knob clockwise to open the door.
4. Locate the battery compartment inside the door. Insert the required batteries (not included) ensuring correct polarity.
5. Close the battery compartment.

Your browser does not support the video tag.

Video 1: Demonstrates the first-time opening procedure, including emergency key use and battery installation (0:47 - 1:03).

OPERATING INSTRUCTIONS

Unlocking Methods

Your Emasme safe offers three convenient ways to unlock:

- **Key + Handle:** Insert the key into the emergency keyhole, turn it counter-clockwise, and rotate the keypad knob clockwise to open.
- **Code + Handle:** Enter your programmed passcode on the digital keypad, then rotate the keypad knob clockwise to open.
- **Emergency Battery Box + Code + Handle:** If batteries are depleted, connect the emergency battery box to the external power supply port, enter your passcode, and rotate the keypad knob clockwise to open.



Figure 3: Visual representation of the three unlocking methods.

Your browser does not support the video tag.

Video 2: Demonstrates the three unlocking methods: passcode, backup key, and external power supply (0:37 - 0:43).

Setting the First Password

To set your personal passcode (3-8 digits):

1. Open the safe door.
2. Locate and press the reset button on the inside of the door (usually a small button near the hinge or lock mechanism). The yellow indicator light on the keypad will illuminate.
3. Enter your desired new password (3-8 digits) on the keypad.
4. Press the '#' key to confirm. A long "beep" indicates successful programming, and the yellow light will turn off.

Your browser does not support the video tag.

Video 3: Guide on setting the first password (1:04 - 1:18).

Mute System

To enable or disable the mute mode:

- Long press the number '1' key on the keypad for 3 seconds.
- The green light will illuminate for a long time, and the buzzer will sound for a long time, then turn off, indicating the mute system has been toggled.

Your browser does not support the video tag.

Video 4: Instructions for enabling and disabling the mute system (1:25 - 1:46).

Alarm System

The safe is equipped with an alarm system for enhanced security:

- If five consecutive incorrect password attempts are made, the gun cabinet will automatically alarm for 20 seconds, and the keypad will be locked.
- If the safe experiences violent blows or shaking, an inductive alarm will sound.
- To reset the alarm and unlock the keypad after an alarm event, re-enter the correct code.

Your browser does not support the video tag.

Video 5: Demonstrates the alarm system activation upon incorrect password entry (1:47 - 2:13).

MAINTENANCE

- **Cleaning:** Wipe the exterior with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.
- **Battery Replacement:** Replace batteries annually or when the low battery indicator appears. Use high-quality alkaline batteries.
- **Lubrication:** Periodically lubricate the door hinges and locking bolts with a small amount of light machine oil to ensure smooth operation.
- **Inspection:** Regularly inspect the safe for any signs of damage or wear. Ensure all bolts and mounting hardware are secure.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Safe does not open with passcode.	Incorrect passcode entered; low batteries; keypad locked due to multiple incorrect attempts.	Verify passcode and re-enter; replace batteries; use emergency key to open and reset keypad if locked.
Keypad is unresponsive.	Dead batteries; keypad malfunction.	Replace batteries; use emergency battery box for temporary power; if issue persists, contact customer support.
Alarm sounds unexpectedly.	Incorrect password attempts; physical impact/movement detected.	Enter correct passcode to disarm; ensure safe is stable and not being disturbed.
Door does not close or latch properly.	Obstruction in door frame; misaligned bolts.	Check for obstructions; gently adjust door alignment if possible; contact customer support if severe misalignment.

SPECIFICATIONS

Brand: Emasme

Product Dimensions: 8.66"D x 9.84"W x 47.22"H

Lock Type: Electronic Combination Lock

Color: Black

Capacity: 2 Cubic Feet

Material: Alloy Steel

Special Feature: Alarm System

Mounting Type: Floor Mount

Control Type: Password, Emergency key, Emergency Battery Box and Password

Item Weight: 38.5 Pounds

Water Resistance Level: Water Resistant

Manufacturer: Emasme

Item Model Number: gun safe

WARRANTY AND SUPPORT

Specific warranty details are not provided in the product information. For warranty claims, technical support, or any questions regarding your Emasme Rifle Safe, please contact the manufacturer directly through their official website or the contact information provided with your purchase documentation.

It is recommended to retain your proof of purchase for any warranty-related inquiries.