

[Manuals.plus](#) /

› [WARSUN](#) /

› WARSUN X608S 2600 Lumens Rechargeable Flashlight User Manual

WARSUN X608S

WARSUN X608S 2600 Lumens Rechargeable Flashlight User Manual

Model: X608S

PRODUCT OVERVIEW

The WARSUN X608S is a versatile rechargeable flashlight designed for various applications, including camping, emergency situations, and home use. It features multiple lighting modes, a magnetic base, and a pocket clip for convenience.

2600LM

Max Brightness Turbo

Compact Size

Carry without burden



7.27oz

135mm/5.31in

30mm/1.18in



1 Click

Activates Red Laser
(Class 3R)



Double Click

Turbo Burst:
20s of
Ultra-Bright Output




3 Light Sources

Main Light

Laser

Side Light

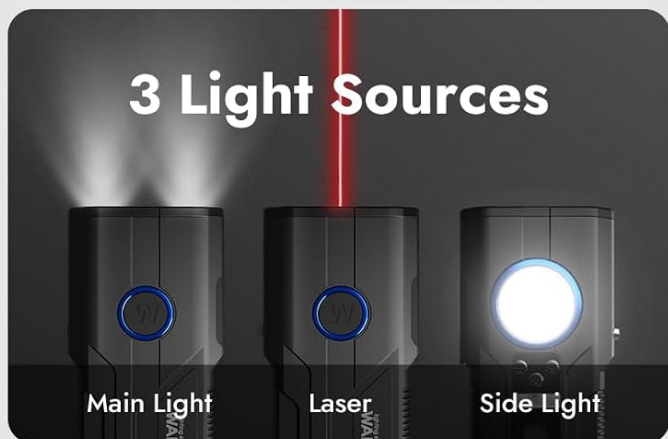

4-Level Power Display

● ● ● ● > 75%
● ● ● 75% TO 50%
● ● 50% TO 25%
● 25% TO 10%



Figure 1: WARSUN X608S Rechargeable Flashlight

Included Components:

- WARSUN X608S Flashlight
- Rechargeable Lithium-Ion Battery (pre-installed)
- Lanyard
- USB Type-C Charging Cable

PRODUCT STRUCTURE DIAGRAM

Familiarize yourself with the different parts of your WARSUN X608S flashlight.



Figure 2: Labeled components of the WARSUN X608S Flashlight.

SETUP

1. Initial Charging

Before first use, fully charge the flashlight. Connect the provided USB Type-C charging cable to the flashlight's Type-C charging port and a suitable USB power source. The 4-level battery indicator lights will illuminate during charging and show the current charge level.



Figure 3: Charging the WARSUN X608S Flashlight.

2. Attaching the Lanyard

Thread the included lanyard through the designated loop at the tail end of the flashlight for secure carrying.

3. Using the Pocket Clip

The flashlight comes with a pre-attached pocket clip, allowing for easy attachment to pockets, belts, or backpack straps.

OPERATING INSTRUCTIONS

Power Button Functions:

The main power button controls the primary light and side light modes.

- **Single Click:** Cycles through the main light modes: High → Medium → Low.
- **Double Click:** Activates the Turbo mode for the main light, providing maximum brightness for approximately 20 seconds.
- **Press and Hold:** Activates the side light. Subsequent single clicks cycle through side light modes: High → Low → Red

RECHARGEABLE & LONG-LASTING POWER

4000mAh Battery Capacity for
up to 30 hours runtime of low
brightness

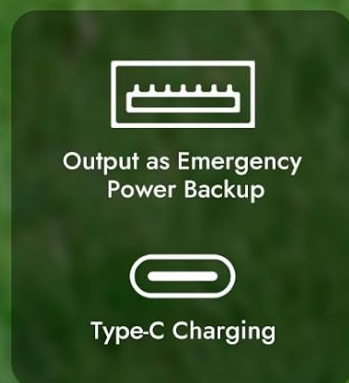


Figure 4: Main Light, Laser, and Side Light Modes.

Laser Function:

Press the dedicated laser button (located on the side) to activate the Class 3R red laser. Press again to turn off.

Battery Indicator:

The flashlight features a 4-level power display to indicate the remaining battery charge:

- 4 lights: >75%
- 3 lights: 50% to 75%
- 2 lights: 25% to 50%
- 1 light: 10% to 25%

Outdoor-Ready · Home-Friendly



Bright Enough for Camping,
Hiking, or Night Walks



Reliable at Home for Power Outages,
Pet Play, or Quick Repairs

Figure 5: 4-Level Power Display.

Hands-Free Operation:

Utilize the integrated magnetic base to attach the flashlight to metal surfaces for convenient, hands-free illumination.

lighting experts
WAR SUN

LED Flashlight
USER MANUAL

PRODUCT STRUCTURE DIAGRAM

X608S

PRODUCT SPECIFICATION

1. Single Click - Cycle Through Light Modes:
Main Light: High → Medium → Low
Side Light: High → Low → Red Strobe

2. Double Click - Turbo Mode:
Activates Main Light at Maximum Brightness

3. Laser Button - Infrared Activation:
Press the side button to turn on the Class 3R Infrared Laser

Figure 6: Illumination with Magnetic Base.

MAINTENANCE

Cleaning:

Wipe the flashlight body with a soft, damp cloth. Do not use abrasive cleaners or solvents. Keep the lens clean for optimal light output.

Battery Care:

The flashlight uses a built-in rechargeable Lithium-Ion battery. For optimal battery life, avoid fully discharging the battery frequently. Recharge the flashlight when the battery indicator shows low power.

Storage:

Store the flashlight in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, charge the battery to approximately 50% every 3-6 months to prevent deep discharge.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Flashlight does not turn on.	Low battery.	Charge the flashlight using the provided USB Type-C cable.
Light modes are not cycling correctly.	Button malfunction or temporary software glitch.	Ensure the button is pressed firmly. Try turning the flashlight off and on again. If issues persist, contact customer support.
Flashlight not charging.	Faulty cable or power adapter.	Try a different USB Type-C cable and a different USB power adapter. Ensure the cable is fully inserted into the charging port.
Laser is not working.	Laser button not pressed correctly.	Ensure you are pressing the dedicated laser button on the side of the flashlight.

SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Model Number	X608S
Brand	WARSUN
Brightness (White Light)	Up to 2600 Lumens
Light Source Type	LED (Main, Side), Laser (Red)
Light Path Distance	500 Meters
Battery Type	4000mAh Lithium-Ion (Included)
Runtime (Main Light)	High: 3.5 hours, Medium: 8 hours, Low: 30 hours
Charging Port	USB Type-C
Power Source	Battery Powered
Material	Aluminum
Item Weight	206 Grams (0.45 lbs)
Item Dimensions (D x W x H)	5.1" x 1.8" x 1"
Water Resistance Level	Water Resistant
Mounting Type	Clip-on, Magnetic
Special Features	Adjustable Light Modes, Impact Resistant, Rechargeable, Power Bank Functionality

WARRANTY

The WARSUN X608S Rechargeable Flashlight is covered by a **Lifetime Manufacturer Warranty**. For details regarding warranty claims or service, please refer to the official WARSUN website or contact their customer support.

SUPPORT

For further assistance, technical support, or to inquire about replacement parts, please visit the official WARSUN website or contact their customer service department. Contact information can typically be found on the product packaging or the manufacturer's website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DQ71Q28Q>

More documents and user manuals: <https://manuals.plus/>