

OMAIC BN59-01432A, BN59-01312A

OMAIC Rechargeable Voice Remote Control User Manual

MODELS: BN59-01432A & BN59-01312A

1. Introduction

Thank you for choosing the OMAIC Rechargeable Voice Remote Control. This manual provides detailed instructions for the setup, operation, and maintenance of your new remote controls (models BN59-01432A and BN59-01312A). These remotes are designed to be compatible with a wide range of Samsung Smart TVs, offering convenient control and voice functionality.





Image: The OMAIC BN59-01432A and BN59-01312A remote controls.

2. Package Contents

Your package should contain the following items:

- 1 x OMAIC BN59-01432A Rechargeable Voice Remote Control
- 1 x OMAIC BN59-01312A Voice Remote Control
- 1 x User Manual (this document)

3. Specifications

Feature	Description
Brand	OMAIC
Model Numbers	BN59-01432A, BN59-01312A
Special Feature	Voice Search
Color	Black
Max Supported Devices	2 (per remote)
Compatible Devices	Samsung Televisions, Samsung Smart TVs
Connectivity	Wireless
Rechargeable (BN59-01432A)	USB Type-C port
Operating Distance	Up to 45 feet (approx. 13.7 meters)
Response Time	0.1 seconds

2•PCS

Both remotes feature the **latest upgraded chips**, allowing you to control your TV as you wish.

ABS

ABS Material

Soft Silicone Buttons

Sensitive and Fast

Reliable Quality

Comfortable Feeling

40 Feet

0.2s Fast response

150,000 Clicks

Image: Key features and specifications of the OMAIC remote controls.

4. Setup and Pairing

Before first use, please ensure the BN59-01432A rechargeable remote is fully charged. Charging typically takes 1-2 hours via its USB Type-C port.

4.1. Pairing the Remote Control

Both BN59-01432A and BN59-01312A remotes use the same pairing method:

1. Ensure your Samsung Smart TV is powered on.
2. Point the remote control towards your TV.
3. Press and hold the **Back** (⏮) and **Play/Pause** (⏸) buttons simultaneously for 5-8 seconds.
4. A "Pairing Complete" message should appear on your TV screen, indicating successful pairing.

Note:

- If pairing fails, please repeat the steps.
- The voice function requires your TV to support this feature. Please check your TV settings if the voice function does not work after pairing.

Same pairing method

BN59-01432A



BN59-01312A



Pair remote:
Pressing
Back (⏮) + **Play/Pause** (⏸)
buttons simultaneously
for 10 seconds

How to pair the remote with your TV?


Please press and hold the Back (⏮) and Play/Pause (⏸) buttons at the same time for 5-8 seconds and you will see the "Pairing Complete" message on your TV screen.
(If pairing fails, please repeat this step)

 **NOTE:** Please charge the remote before first use, it takes about 1-2 hours.

5. Operating Instructions

5.1. Voice Function

The voice function allows you to control your TV using voice commands. To use this feature:

1. Press and hold the **Microphone** button  on the remote control.
2. Speak your command clearly into the remote. For example, "Turn the volume up to 20" or "Open Netflix."
3. Release the Microphone button when you are finished speaking.

Ensure your TV's voice assistant is enabled and configured for optimal performance.

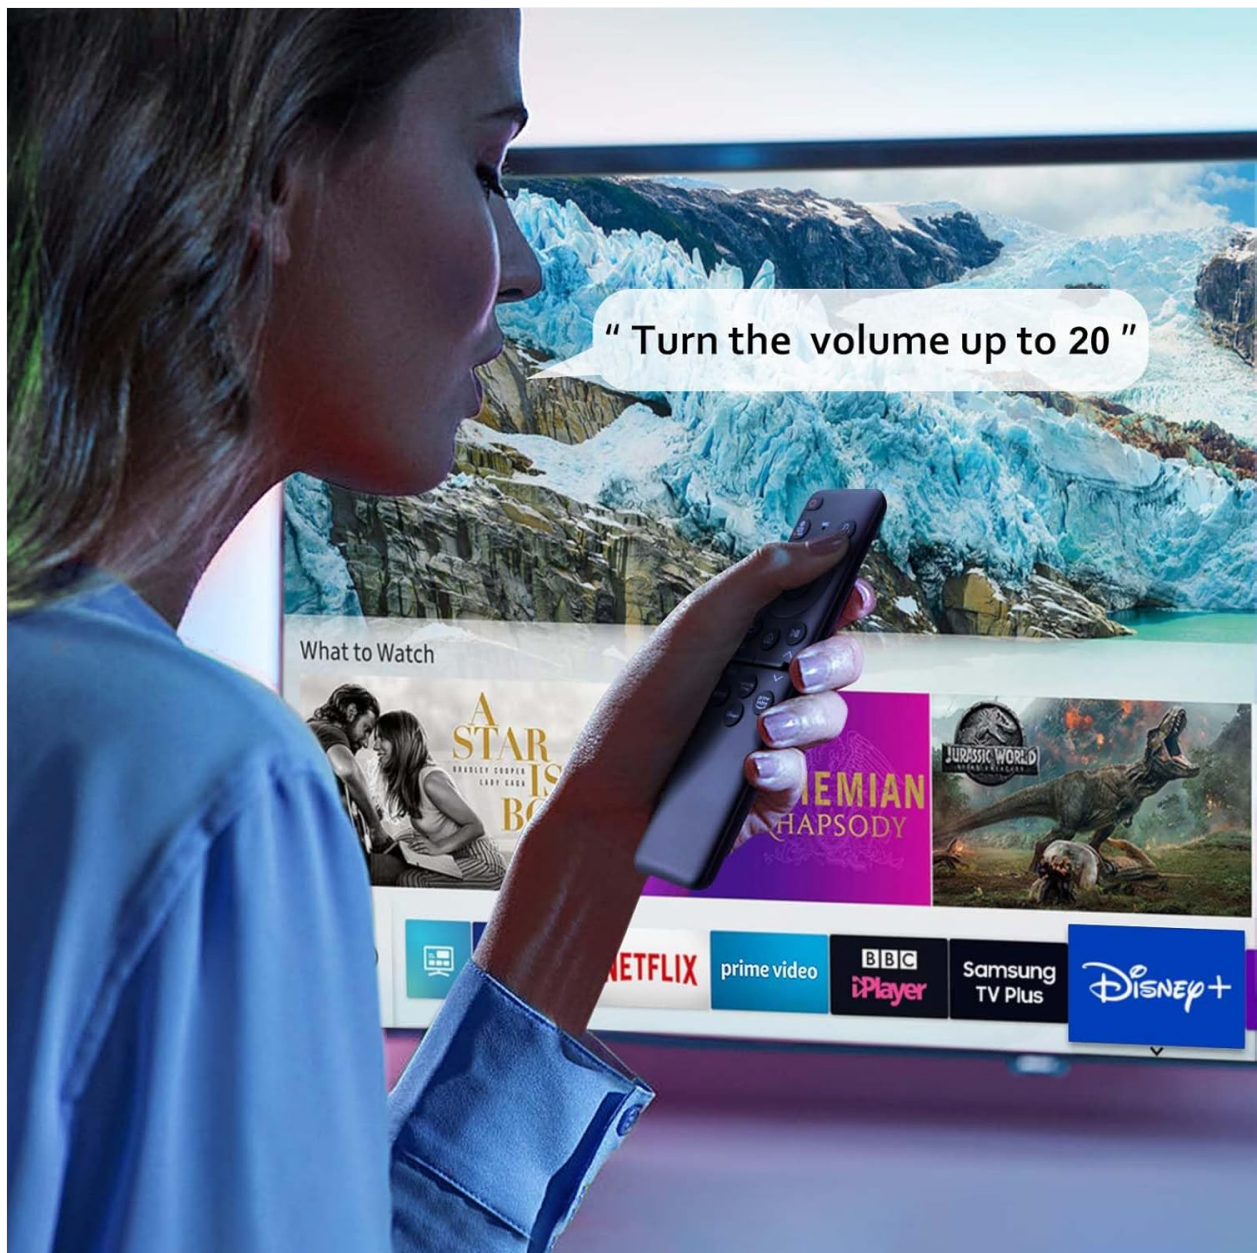


Image: User demonstrating the voice control feature of the remote.

5.2. Shortcut Buttons

Both remote models feature dedicated shortcut buttons for quick access to popular streaming services:

- **Netflix:** Directly opens the Netflix application.

- **Prime Video:** Directly opens the Amazon Prime Video application.
- **Hulu:** Directly opens the Hulu application.
- **Samsung TV Plus / Disney+:** Depending on the remote model, one of these buttons will directly open the respective application.



Image: Shortcut buttons for popular streaming services on the OMAIC remote controls.

6. Charging (BN59-01432A Only)

The BN59-01432A remote control is rechargeable via a USB Type-C port, eliminating the need for frequent battery replacements.

6.1. Charging Procedure

1. Locate the USB Type-C port on the bottom edge of the BN59-01432A remote control.
2. Connect a standard USB Type-C charging cable (not included) to the remote's port.
3. Connect the other end of the cable to a USB power source (e.g., wall adapter, computer USB port).
4. The remote's indicator light (if present) may show charging status.
5. A full charge typically takes 1-2 hours.

It is recommended to fully charge the remote before its first use to ensure optimal battery life.



Image: The USB Type-C charging port on the BN59-01432A remote control.

7. Compatibility

These OMAIC remote controls are compatible with a wide range of Samsung Smart TVs. The voice function specifically requires your TV to support voice commands.

7.1. Compatible Samsung TV Models (Partial List)

- QE1C, QN990C, LST9C, S90C, Q80C, Q80CD, CU8000D, Q70CD, QN85CD, QN90CD, Q60C, QN800C, QN900C, CU8000, QN850C, Q70C, QN85C, QN90C, S95C
- Q80D, Q70D, Q60D, DU8000, QN90D, QN85D, S90D, S95D, QN800D, QN900D, LS03D, LS03B, LS03C
- M70C, S9, M80C, M50C, LSP3B, G85SB, G7, G70B, G65B, M70B, M8
- And other Samsung Smart TV models that support BN59-01330A, BN59-01312B, BN59-01312D, BN59-01312E, BN59-01312F, BN59-01330B, BN59-01330C, BN59-01330N, BN59-01330Q, BN59-01329A, BN59-01329C, BN59-01329F, BN59-01455A, BP59-00149A, BN59-01456A, BN59-01385A, BN59-

01391A, BN59-01330H, BN59-01363A, BN59-01357A remotes.

Please verify your TV's model number and voice function support for full compatibility.

2•PCS

Compatible with All **Samsung** Voice Model Smart TVs

The voice function **requires your TV to support the voice function** to work.
Please check if your TV set has voice function.



QE1C\ QN990C\ LST9C\ QE1C\ S90C\ Q80C\ Q80CD\
CU8000D\ Q70CD\ QN85CD\ QN90CD\ Q60C\ QN800C\
QN900C\ CU8000\ QN850C\ Q70C\ QN85C\ QN90C\
S95C\ Q80D\ Q70D\ Q60D\ DU8000\ QN90D\ QN85D\
S90D\ S95D\ QN800D\ QN900D\ LS03D\ LS03B\ LS03C\
M70C\ S9\ M80C\ M50C\ LSP3B\ G85SB\
G7\ G70B\ G65B\ M70B\ M8\ etc.



Image: OMAIC remotes compatible with various Samsung Smart TV models.

8. Troubleshooting

Problem	Possible Cause	Solution
Remote not pairing	Incorrect pairing procedure, low battery (BN59-01432A)	Ensure BN59-01432A is charged. Repeat pairing steps (hold Back and Play/Pause for 5-8 seconds). Ensure TV is on.
Voice function not working	TV does not support voice function, remote not paired correctly, microphone blocked	Verify your TV model supports voice control. Re-pair the remote. Ensure nothing is obstructing the microphone on the remote.
Remote unresponsive	Low battery (BN59-01432A), remote out of range, interference	Charge BN59-01432A. Move closer to the TV (within 45 feet). Remove any obstructions between the remote and TV.

Problem	Possible Cause	Solution
Shortcut buttons not working	App not installed on TV, TV not connected to internet	Ensure the respective app (Netflix, Prime Video, Hulu, etc.) is installed and updated on your Samsung TV. Verify your TV has an active internet connection.

9. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care (BN59-01432A):** For optimal battery life, avoid fully discharging the remote frequently. Charge it when the battery indicator is low.
- **Avoid Drops:** Protect the remote from drops and impacts, which can damage internal components.

10. Warranty and Support




OMAIC provides a **90-day after-sales service** for this product. If you encounter any issues or have questions regarding your remote controls, please contact our customer support team.




We are committed to responding within 12 hours and will endeavor to resolve any problems as quickly as possible.

For support, please refer to the contact information provided with your purchase or visit the OMAIC brand store on Amazon.

© 2024 OMAIC. All rights reserved.

Related Documents - BN59-01432A, BN59-01312A

	Samsung Remote Control User Guide and Compatibility Comprehensive guide to Samsung remote control functions, installation steps, and compatibility with various Samsung TV models. Includes model numbers for easy reference.
	Samsung BN59-00516A Replacement Remote Control Guide This guide provides button mapping details for the Samsung BN59-00516A replacement remote control, covering TV, DVD, STB, and CABLE-VCR functions. Compare original remote buttons to their replacements.
	Samsung Smart TV Remote Control Guide A comprehensive guide to using the Samsung Smart TV Remote Control, including pairing instructions, button functions, and voice command usage.

	<p>Samsung Smart-TV Remote Control Function Guide: TM1850A BN59-01259B & Replacement Models</p> <p>Detailed comparison of original and replacement remote control buttons for Samsung Smart TVs, including models TM1850A BN59-01259B, BN59-01301A, and BN59-01350B. Find button function mapping from Mandis shop.</p>
	<p>Samsung Universal Remote Control BN59-01315A User Guide</p> <p>Comprehensive user guide for the Samsung BN59-01315A universal remote control. Learn about its features, compatibility with Samsung smart TVs, setup, and programming instructions for seamless TV and cable/satellite box operation.</p>
	<p>Samsung Smart Remote: Connecting and Troubleshooting Guide</p> <p>A guide on how to connect the Samsung Smart Remote to your TV, control external devices, and troubleshoot common remote control issues. Includes FCC compliance information.</p>