

Manuals.plus /

- › **GODOX** /
- › Godox V1Pro S Flash for Sony Camera User Manual

GODOX V1Pro S

Godox V1Pro S Flash for Sony Camera User Manual

Model: V1Pro S

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective operation of your Godox V1Pro S Flash for Sony cameras. Please read this manual thoroughly before use to ensure optimal performance and to prevent damage to the product.

The Godox V1Pro S is a round head flash designed for Sony cameras, featuring TTL auto flash, 2.4G wireless X system, high-speed sync (HSS), and a detachable external flash unit (SU-1). It is capable of up to 100 continuous full-power flashes and offers a quick 1.3-second recycle time.

2. PRODUCT OVERVIEW AND KEY FEATURES



Image: Overview of the Godox V1Pro S flash unit, highlighting its main features such as detachable SUB flash SU-1, 100 continuous flashes, Type-C charging, TTL/M switch, HSS, power supply port, 2.4G wireless, and 1.3-second recycle time.

- **Detachable External Flash SU-1:** Allows for versatile lighting setups, functioning as both bounce flash and fill light.
- **High Continuous Shot Capacity:** Supports up to 100 consecutive flashes at full power without thermal protection constraints.
- **Fast Recycle Time:** Achieves a 1.3-second recycle time for rapid shooting.

- **2.4G Wireless X System:** Integrated wireless system for seamless integration with other Godox flashes.
- **One-click TTL/M Switch:** Easy switching between TTL auto flash and manual modes.
- **Modern Charging:** Supports Type-C USB charging and the original VC26 charger.
- **Adjustable LED Modeling Light:** Features a 10-level adjustable LED for pre-visualization.

3. WHAT'S IN THE BOX



Image: Contents of the Godox V1Pro S package, including the flash body, storage bag, detachable sub flash SU-1, lithium battery, USB-C charging cable, camera flash stand, and charger.

The Godox V1Pro S package typically includes the following items:

- Godox V1Pro S Flash Body
- Detachable Sub Flash SU-1
- Lithium Battery (VB30)
- USB-C Charging Cable
- Charger
- Storage Bag
- Camera Flash Stand
- User Manual (this document)

4. SETUP AND INSTALLATION

4.1. Battery Installation and Charging

The V1Pro S uses a dedicated lithium battery. Ensure the battery is fully charged before first use.

1. Open the battery compartment cover on the flash unit.
2. Insert the lithium battery, ensuring correct polarity.
3. Close the battery compartment cover securely.
4. To charge, connect the flash via the USB-C port using the provided cable and charger, or use the original VC26 charger for the battery.



Image: The Godox V1Pro S flash being charged via its Type-C port and the separate battery being charged with the VC26 charger.

4.2. Mounting the Flash on Camera

1. Slide the V1Pro S flash hot shoe onto your Sony camera's hot shoe mount.
2. Tighten the locking mechanism to secure the flash in place.

4.3. Detachable Plastic Ring for AK-R1 Accessories

The V1Pro S is equipped with a detachable plastic ring. If you intend to use AK-R1 accessories (sold separately), you may need to remove this plastic ring and replace it with a standard universal iron ring or magnetic ring. This allows for compatibility with the AK-R1 magnetic accessory system.



**Note: Godox V1Pro U is a new model.
If you need to use AK-R1 accessories,
you will need to install the ring yourself.**

Image: The Godox V1Pro S flash head, illustrating the area where the detachable plastic ring is located for AK-R1 accessory compatibility.

5. OPERATING INSTRUCTIONS

5.1. Power On/Off

Press and hold the power button to turn the flash unit on or off.

5.2. TTL and Manual Mode Switching

The V1Pro S features a dedicated button for quick switching between TTL (Through-The-Lens) auto flash mode and Manual (M) mode. Press the **TTL/M** button to toggle between these exposure control types.



Image: Close-up of the Godox V1Pro S control panel, showing the prominent TTL/M switch button for quick mode changes.

5.3. 2.4G Wireless X System Operation

The V1Pro S supports 2.4G wireless transmission and reception, allowing it to function as both a master and slave unit within the Godox X wireless system. This enables seamless integration with other compatible Godox flashes for multi-light setups.



Image: Diagram illustrating the Godox V1Pro S operating as a wireless transmitter and receiver, controlling other flash units remotely.

Refer to the detailed wireless control section in the full product manual for specific channel and group settings.

5.4. Using the External Flash SU-1

The innovative detachable SU-1 external flash component can be attached to the V1Pro S. This allows the main flash to serve as a bounce flash while the SU-1 provides a direct fill light, enhancing versatility in various shooting scenarios. To attach or detach, align the SU-1 with its designated port on the V1Pro S and secure it.



Image: The Godox V1Pro S flash unit with the detachable SU-1 external flash module shown next to it, illustrating its modular design.

5.5. Continuous Shooting Performance

The V1Pro S is engineered to support up to 100 continuous flashes at full power before engaging thermal protection. This feature is beneficial for high-speed photography and situations requiring rapid, consistent illumination.



Image: A photographer using the Godox V1Pro S flash, with an overlay indicating its capability for up to 100 continuous shots at full power.

5.6. LED Modeling Light

The V1Pro S includes a 10-level adjustable LED modeling light. This light can be used to pre-visualize the lighting effect before taking a shot, aiding in precise light placement and composition.



Image: A model illuminated by the Godox V1Pro S's LED modeling light, demonstrating its use for pre-visualization of lighting.

6. MAINTENANCE

- Keep the flash unit dry. Do not handle with wet hands.
- Clean the flash head and body with a soft, dry cloth. Avoid using solvents or harsh chemicals.
- Store the flash in a cool, dry place, away from direct sunlight and extreme temperatures.
- Remove the battery if the flash will not be used for an extended period.

7. SPECIFICATIONS

Feature	Specification
Brand	GODOX
Model Name	Godox V1Pro S
Compatible Mountings	Sony A, Sony Multi Interface Shoe
Exposure Control Type	TTL, Manual
Flash Sync Speed	1/20000s
Maximum Shutter Speed	1/8000s (HSS)
Connectivity Technology	Wireless (2.4G RF)
Battery Type	1 Nonstandard Battery (included)
Item Weight	1 Kilogram
Color Temperature	Daylight, Warm, Cool (via modeling light)
Water Resistance Level	Not Water Resistant
Compatible Devices	Sony a77II, a99, a77, DSC-RX10, a6000, a7R, a6400, a7RII, a7RIII, a7M3, a9, a7RIV, a7R5, a7MIV, ZV-E10, a58, ILCE6000L, a7R3, a350

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Godox website or contact your authorized dealer. Keep your purchase receipt as proof of purchase for warranty claims.

You can find more information about Godox products and support at the [Godox Store on Amazon](#).