

## eKids RA115

# eKids Ms Rachel Karaoke Microphone Boombox User Manual

Model: RA115

## INTRODUCTION

---

This manual provides comprehensive instructions for the safe and effective use of your eKids Ms Rachel Karaoke Microphone Boombox. Please read this manual thoroughly before operating the device and retain it for future reference.



Image: Front view of the eKids Ms Rachel Karaoke Microphone Boombox, showcasing its colorful design with Ms. Rachel's image, a yellow speaker, and various control buttons.

## WHAT'S INCLUDED

---

Verify that all components are present in the packaging:

- eKids Ms Rachel Karaoke Microphone Boombox (Model RA115)
- Attached Microphone
- 2 x AA Batteries (pre-installed)

## SETUP

---

### Battery Installation/Replacement

The unit comes with 2 AA batteries pre-installed. If replacement is needed:

1. Locate the battery compartment on the back of the unit.
2. Using a Phillips head screwdriver, loosen the screw on the battery compartment cover.
3. Remove the cover and insert 2 new AA (Alkaline) batteries, ensuring correct polarity (+/-).
4. Replace the cover and tighten the screw.

**Note:** Always use fresh batteries of the required type. Do not mix old and new batteries or different types of batteries. Dispose of used batteries responsibly.



Image: Diagram illustrating the dimensions of the boombox and the location of the battery compartment on the back of the unit.

## OPERATING INSTRUCTIONS

### Power On/Off

- To power on the unit, locate the power switch (often labeled "Demo/Off/On" or similar) on the back or side. Slide it to the "On" position.
- To power off, slide the switch to the "Off" position.

### Using the Microphone

- The microphone is permanently attached to the boombox.
- Speak or sing directly into the microphone to amplify your voice through the boombox speaker.
- A dedicated Microphone On/Off button may be present on the unit for controlling microphone amplification.

### Playing Built-in Music

The boombox features 5 built-in songs:

- Hop Little Bunnies
- Wheels on the Bus
- I Love A Rainbow
- Old MacDonald
- Caterpillar

Press the designated song buttons (often featuring character art or symbols) to play each song. Some units may have a button to switch between music and sound effects.



Image: The boombox with labels highlighting the song buttons, microphone, and the "Sing Along to Your Favorite Ms. Rachel Songs!" feature.

## Volume Control

Adjust the volume using the Hi/Med/Low button or switch, typically located on the back or side of the unit, to suit the environment and user preference.

## FEATURES

- **Real Working Microphone:** Amplify your voice for singing along or speaking.
- **Built-in Songs:** Enjoy 5 popular children's songs for interactive play.
- **Ms Rachel Design:** Features colorful graphics inspired by the popular educational content creator.
- **Kid-Friendly Controls:** Designed for ease of use by toddlers aged 18 months and up, with lightweight and portable construction.
- **Light-Up Buttons:** Interactive buttons that light up during play.
- **Built-in Handle:** For easy portability.





Image: A young child smiling and singing into the microphone of the eKids Ms Rachel Karaoke Microphone Boombox, demonstrating its interactive use.

## CARE AND MAINTENANCE

- **Cleaning:** Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Storage:** Store the boombox in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Remove batteries if the unit will not be used for an extended period to prevent leakage.
- **Avoid Drops:** While durable, avoid dropping the unit to prevent damage to internal components.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not power on.	Batteries are depleted or incorrectly installed.	Replace batteries with new AA alkaline batteries, ensuring correct polarity.
Microphone not working.	Microphone switch is off or volume is too low.	Ensure the microphone is switched on and increase the volume.
Sound is distorted or too quiet.	Low battery power or incorrect volume setting.	Replace batteries or adjust the volume control.

## SPECIFICATIONS

Feature	Detail
Model Number	RA115

Feature	Detail
Brand	eKids
Item Weight	1.41 pounds
Product Dimensions	10.63 x 2.24 x 8.17 inches
Batteries	2 AA Alkaline batteries (included)
Speaker Count	1
Power Source	Battery Powered
Voltage	3 Volts
Special Features	Built-In Handle, Built-In Microphone, Built-In Song Track, Portable
Recommended Age	18 months and up

## PRODUCT VIDEO

Your browser does not support the video tag.

Video: An official product video demonstrating the features and usage of the eKids Ms Rachel Karaoke Microphone Boombox, including its built-in songs and real working microphone.

## WARRANTY AND SUPPORT


For warranty information or technical support, please refer to the official eKids website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

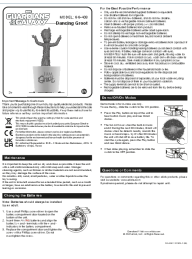 

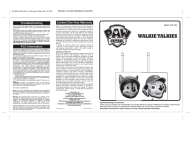 

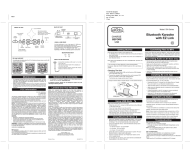 
**Online Support:** Visit the [eKids Brand Store](#) for additional product information and support resources.



© 2025 eKids. All rights reserved. Ms. Rachel and all associated characters, images, and logos are protected trademarks.

### Related Documents - RA115

	<p><a href="#">eKids 554 Series Bluetooth Karaoke with EZ Link User Manual</a></p> <p>This manual provides instructions for the eKids 554 Series Bluetooth Karaoke with EZ Link, covering setup, operation, maintenance, and troubleshooting. Learn how to connect via Bluetooth, use USB mode, record audio, and utilize the EZ Link app for music playlists.</p>
---	--

	<p><a href="#">Marvel Guardians of the Galaxy Dancing Groot GG-408 User Manual and Safety Information</a></p> <p>Comprehensive guide for the Marvel Guardians of the Galaxy Dancing Groot (Model GG-408) by eKids, covering setup, operation, maintenance, safety precautions, and battery information.</p>
	<p><a href="#">eKids Bluetooth Karaoke Microphone with EZ Link Technology (Model: Di-B24EN.EXv1M) - User Guide</a></p> <p>User guide for the eKids Bluetooth Karaoke Microphone with EZ Link Technology (Model: Di-B24EN.EXv1M). Learn about setup, charging, Bluetooth connection, EZ Link app usage, controls, warranty, and troubleshooting.</p>
	<p><a href="#">PAW Patrol Walkie Talkies PW-202 User Manual and Safety Information</a></p> <p>User manual and troubleshooting guide for the PAW Patrol Walkie Talkies, Model PW-202, by eKids. Includes setup, operation, warranty, and FCC information.</p>
	<p><a href="#">eKids 553 Series Bluetooth MP3 Karaoke with 2 Microphones: User Manual</a></p> <p>User manual for the eKids 553 Series Bluetooth MP3 Karaoke system, covering setup, operation modes (USB, MP3, Bluetooth), microphone usage, charging, troubleshooting, and warranty information.</p>
	<p><a href="#">eKids Bluetooth Karaoke with EZ Link Model 554 Series User Manual</a></p> <p>Comprehensive user manual for the eKids Bluetooth Karaoke with EZ Link (Model 554 Series). Learn how to set up, use USB and Bluetooth modes, record audio, install the EZ Link app, and troubleshoot common issues. Includes warranty information and FCC compliance details.</p>