

[Manuals.plus](#) /

> [BOSCH](#) /

> Bosch Series 4 Washer Dryer WNA24400GC User Manual

BOSCH WNA24400GC

Bosch Series 4 Washer Dryer WNA24400GC User Manual

Model: WNA24400GC | Brand: BOSCH

1. PRODUCT OVERVIEW

This manual provides essential information for the safe and efficient operation of your Bosch Series 4 Washer Dryer, model WNA24400GC. This appliance combines washing and drying functions, offering convenience and space-saving benefits. It features a 9kg washing capacity and a 5kg drying capacity, making it suitable for various laundry needs. The washer dryer includes Iron Assist steam treatment to reduce wrinkles and dries as efficiently as it washes.



Figure 1.1: Front view of the Bosch Series 4 Washer Dryer, showing the main door, control panel, and detergent dispenser.



Figure 1.2: Detailed view of the control panel, featuring the program selector dial and LED display for cycle information.

2. SAFETY INFORMATION

Always read and follow all safety instructions before using the appliance to prevent personal injury or property damage. Keep this manual for future reference.

2.1 General Safety

- Ensure the appliance is properly grounded.
- Do not allow children to play with or operate the appliance.

- Unplug the appliance before cleaning or performing maintenance.
- Do not operate the appliance if it is damaged.
- Keep flammable materials away from the appliance.

2.2 Child Safety

The appliance is equipped with a **Child Lock** feature to prevent unintended operation. Refer to the "Operating" section for instructions on how to activate and deactivate the child lock.

3. SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your washer dryer. It is recommended to have the appliance installed by a qualified technician.

3.1 Unpacking

Carefully remove all packaging materials and transport bolts. Retain packaging for future transport if needed.

3.2 Positioning

- Place the appliance on a firm, level surface.
- Ensure adequate ventilation around the appliance.
- The appliance features **Adjustable Leveling Legs** to ensure stability and reduce vibration during operation. Adjust them as necessary.

3.3 Water and Electrical Connections

- Connect the water inlet hose to a cold water supply.
- Ensure the drain hose is properly installed into a suitable drain.
- Connect the power cord to a grounded electrical outlet (220 Volts, 10 Amps).



Figure 3.1: The washer dryer positioned in a laundry area, demonstrating its compact design and front-load access.

4. OPERATING INSTRUCTIONS

This section guides you through the daily operation of your Bosch washer dryer.

4.1 Loading Laundry

- Sort laundry by fabric type, color, and degree of soiling.
- Do not overload the drum. The maximum washing capacity is 9kg, and drying capacity is 5kg.
- The **Reload Function** allows you to add or remove items during the initial phase of a wash cycle.

4.2 Adding Detergent and Softener

Use the detergent dispenser drawer for appropriate amounts of detergent and fabric softener according to the manufacturer's instructions and load size.

4.3 Selecting a Program

Turn the program selector dial to choose the desired wash or wash & dry program. The **Large LED Display** will show program information and remaining time.

- **Wash & Dry 60:** Efficiently washes and dries small loads (up to 1kg) in just 60 minutes.
- **Auto Dry:** Automatically dries your laundry to the desired dryness level, preventing over-drying and protecting fabrics.
- **Iron Assist:** A clever steam treatment that smooths dried laundry, reducing wrinkles and making ironing easier.
- **ActiveWater Plus:** Optimizes water usage based on load size and fabric type, ensuring efficient washing.
- **Eco Silence Drive:** Features a quiet, efficient, and durable motor for enhanced performance.



Figure 4.1: The AutoDry feature logo, signifying automatic drying for optimal results.

4.4 Starting and Stopping a Program

Press the Start/Pause button to begin the selected program. Press it again to pause the program. To cancel a program, turn the program selector dial to 'Off' or hold the Start/Pause button for a few seconds.

5. MAINTENANCE AND CARE

Regular maintenance ensures optimal performance and extends the lifespan of your appliance.

5.1 Cleaning the Detergent Dispenser

Periodically remove and clean the detergent dispenser drawer to prevent residue buildup.

5.2 Cleaning the Drum

Run a maintenance wash cycle (e.g., 'Drum Clean' program if available) regularly to clean the drum and prevent odors.

5.3 Cleaning the Lint Filter

For drying efficiency, clean the lint filter after every drying cycle. The filter is typically located near the door opening or at the bottom front of the appliance.

5.4 Exterior Cleaning

Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

6. TROUBLESHOOTING

Before contacting customer service, refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Appliance does not start	No power supply; Door not closed properly; Program not selected.	Check power cord and outlet; Ensure door is firmly closed; Select a program and press Start.
Excessive vibration/noise	Appliance not level; Transport bolts not removed; Overloaded drum.	Adjust leveling legs; Ensure all transport bolts are removed; Reduce laundry load.
Laundry not drying properly	Lint filter clogged; Overloaded dryer; Incorrect program selected.	Clean lint filter; Reduce load size (max 5kg for drying); Select appropriate drying program.
Water leakage	Hoses loose or damaged; Detergent dispenser clogged.	Check hose connections; Clean detergent dispenser.

7. SPECIFICATIONS

Technical data for the Bosch Series 4 Washer Dryer WNA24400GC.

Model: WNA24400GC

Brand: BOSCH

Type: Front Load Washer Dryer

Washing Capacity: 9 Kilograms

Drying Capacity: 5 Kilograms

Dimensions (HxWxD): 84.8 cm x 59.8 cm x 59 cm

Weight: 74.2 Kilograms

Voltage: 220 Volts

Wattage: 1900 watts

Amperage: 10 Amps

Drum Material: Stainless Steel

Special Features: Child Lock, Adjustable Leveling Legs, Reload Function, LED Display, Vibration Reduction, Auto Dry, Iron Assist, Eco Silence Drive, ActiveWater Plus.

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your appliance or visit the official BOSCH website. Specific warranty terms and conditions may vary by region.

This manual does not contain specific warranty details or direct support contact information. Please consult your purchase documentation or the manufacturer's official resources for the most accurate and up-to-date information.



© 2024 BOSCH. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.