

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Elite Gourmet](#) /

› [Americana Collection Elite EIM1205M 1 Pint Automatic Easy Homemade Electric Ice Cream Maker, Frozen Yogurt, Sorbet, Gelato Treat, with Recipes, Mint 1 Pint Spearmint User Manual](#)

### Elite Gourmet EIM1205M

# Americana Collection Elite EIM1205M 1 Pint Automatic Ice Cream Maker User Manual

Model: EIM1205M | Brand: Elite Gourmet

## INTRODUCTION

---

This user manual provides important information for the safe and efficient operation of your Americana Collection Elite EIM1205M 1 Pint Automatic Electric Ice Cream Maker. Please read all instructions carefully before first use and retain for future reference.



Image: The Americana Collection Elite EIM1205M Ice Cream Maker, showcasing its compact design and a serving of freshly made ice cream.

## IMPORTANT SAFEGUARDS

---

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use appliance for other than intended use.

## PARTS AND FEATURES

Familiarize yourself with the components of your ice cream maker:

# FRESHY MADE

Ice cream, Frozen yogurt, Gelato,  
Sorbet and more ...



Image: Components of the ice cream maker, including the USB-C cable, motor, freezing bowl, clear lid, and paddle.

1. **USB-C Cable:** For power connection.
2. **Motor:** Drives the paddle for churning.
3. **Freezing Bowl:** Double-insulated bowl containing coolant, requires pre-freezing.
4. **Clear Lid:** Transparent lid to observe the churning process.
5. **Paddle:** Churns and mixes ingredients.

The unit features a standard USB-C port for simple and convenient power, an open design for easy cleaning, and a single-touch operation button.



## USB-C Port

Standard USB-C port for simple and convenient

## Easy to Clean

An open design and fewer parts make for simple use and quick clean up.



## Single Touch

Create fresh, delicious ice cream & other frozen treats with one touch!

Image: Details highlighting the USB-C port, ease of cleaning, and single-touch operation.

## SETUP AND FIRST USE

---

Before using your ice cream maker for the first time, follow these steps:

1. **Clean all parts:** Wash the freezing bowl, clear lid, and paddle in warm, soapy water. Rinse thoroughly and dry completely. The motor unit should be wiped clean with a damp cloth. Do not immerse the motor unit in water.
2. **Freeze the bowl:** Place the empty freezing bowl in the freezer for at least 8-12 hours, or until completely frozen. For best results, store the bowl in the freezer at all times so it's ready for use.
3. **Assemble the unit:**
  - Place the frozen bowl on a stable, flat surface.
  - Insert the paddle into the center of the freezing bowl.
  - Place the motor unit on top of the clear lid, ensuring it clicks securely into place.
  - Attach the clear lid with the assembled motor and paddle onto the freezing bowl, aligning the tabs.

Follow these steps to make delicious frozen treats:

# QUICK & EASY

no chemicals, ice cube or salt needed



1

Mix & Chill Ingredients



2

Turn Motor On



3

Pour Into the Mixing Bowl



4

Add Your Favorite Toppings

Image: A visual guide to the quick and easy operation of the ice cream maker.

- 1. Prepare your mixture:** Prepare your desired ice cream, frozen yogurt, sorbet, or gelato mixture. Ensure the mixture is chilled in the refrigerator for at least 2-3 hours before churning for best results.
- 2. Connect power:** Plug the USB-C cable into the motor unit and then into a suitable USB power source (e.g., wall adapter, power bank).
- 3. Start churning:** Press the power button on the motor unit to start the churning process. The paddle will begin to rotate.
- 4. Pour mixture:** Slowly pour your chilled mixture through the opening in the clear lid into the freezing bowl while the paddle is rotating.
- 5. Churning time:** Allow the machine to churn for approximately 20-40 minutes. The exact time will vary depending on the recipe, ingredients, and desired consistency. The mixture will thicken as it churns.
- 6. Add mix-ins:** During the last 5 minutes of churning, you can add solid ingredients like chocolate chips, nuts, or fruit pieces through the lid opening.

- 7. Serve:** Once the desired consistency is reached (typically soft-serve), turn off the machine and unplug it. Remove the motor unit and lid, then use a plastic or wooden spoon to scoop the ice cream from the bowl. Avoid using metal utensils as they can damage the freezing bowl.

For firmer ice cream, transfer the churned mixture to an airtight container and place it in the freezer for an additional 1-2 hours.

## Quick and Easy



**Turn Motor On!**



**Pour the Mix!**



**Serve and Enjoy!**

Image: Simplified steps for quick and easy ice cream making.

## RECIPES

---

Your ice cream maker includes a variety of recipes to get you started. Experiment with different ingredients to create your own unique frozen delights.



# Home Made

## FROZEN DELIGHTS

Image: Examples of homemade frozen delights that can be created with the ice cream maker.

Common ingredients include heavy cream, milk, sugar, and flavorings. For sorbets, fruit purees and sugar syrup are typical. Always ensure ingredients are well-mixed and chilled before adding to the machine.

## CLEANING AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity of your ice cream maker.

- **Before cleaning:** Always unplug the appliance before cleaning.
- **Freezing Bowl, Lid, and Paddle:** These parts are washable. Hand wash with warm, soapy water. Rinse thoroughly and dry completely before storing. Do not wash in a dishwasher as this may damage the parts.
- **Motor Unit:** Wipe the motor unit with a damp cloth. Do not immerse the motor unit in water or any other liquid.
- **Storage:** Store the assembled unit in a clean, dry place. You may keep the freezing bowl in the freezer for immediate future use.

## TROUBLESHOOTING

If you encounter issues with your ice cream maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power button not pressed; power source issue.	Ensure USB-C cable is securely plugged into both the motor unit and a working USB power source. Press the power button firmly. Try a different USB power source.
Ice cream is not freezing or is too soft.	Freezing bowl not sufficiently frozen; mixture not chilled; too much mixture; churning time too short.	Ensure freezing bowl is frozen for at least 8-12 hours (or stored in freezer). Chill mixture thoroughly before adding. Do not exceed the 1-pint capacity. Extend churning time.

Problem	Possible Cause	Solution
Paddle stops or struggles during churning.	Mixture too thick; too many solid mix-ins; freezing bowl too cold.	Ensure mixture consistency is appropriate for churning. Add mix-ins during the last 5 minutes. Allow the bowl to warm slightly if it's excessively cold and causing the mixture to freeze too quickly.
Loud noise during operation.	Improper assembly; foreign object in bowl.	Disassemble and reassemble the unit, ensuring all parts are correctly aligned. Check for any foreign objects in the bowl before starting.

## SPECIFICATIONS

Feature	Detail
Model Name	1 Pint Automatic Easy Homemade Electric Ice Cream Maker
Model Number	EIM1205M
Brand	Elite Gourmet
Capacity	1 Pint
Color	Spearmint
Material	Plastic
Operation Mode	Automatic
Product Dimensions (L x W x H)	7.1"L x 5.9"W x 6.3"H
Item Weight	2.62 pounds
Power Source	USB-C (Cable included)
UPC	717056139188

# Compact n' Portable



Image: Compact dimensions of the ice cream maker.

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Elite Gourmet website. Keep your purchase receipt for warranty claims.

For further assistance, you may contact Elite Gourmet customer service through their official channels.

© 2024 Elite Gourmet. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.