

GOCHIFIX EBS-G2

GOCHIFIX Electric Garden Sprayer Instruction Manual

Model: EBS-G2

1. IMPORTANT SAFETY INFORMATION

Please read and understand all safety instructions before operating the electric garden sprayer. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always unplug the sprayer before cleaning, performing maintenance, or storing it.
- Do not use the sprayer near heat sources, open flames, or in explosive atmospheres.
- Keep the sprayer out of reach of children and pets.
- Do not overfill the tank beyond its maximum capacity of 2.1 gallons (8 liters).
- Always follow local regulations for the proper disposal of the sprayer and its battery.
- Wear appropriate personal protective equipment (PPE) such as gloves and eye protection when handling chemicals.
- Do not spray flammable liquids or strong acids/alkalis.

2. PRODUCT OVERVIEW AND COMPONENTS

The GOCHIFIX Electric Garden Sprayer is designed for efficient and effortless spraying tasks. It features a 2.1-gallon tank, a telescopic wand, and multiple nozzle options for versatile use.

Package Contents:

- 2.1 Gallon Container (8L)
- 7.4V Waterproof Handle
- Telescopic Rod (extends up to 23.6 inches / 60cm)
- Lid
- 1 Meter Data Cable (USB-C)
- Instruction Manual
- Adjustable Thickened Shoulder Strap
- 1.1-meter Hose

- Filter Screen
- Springs (x2)
- Nozzles (x4): Brass Nozzle, Fan Nozzle, 5-Hole Nozzle, 6-Hole Nozzle



Figure 2.1: Overview of the GOCHIFIX Electric Garden Sprayer and its included accessories.

Key Features:

- **Electric Operation:** No manual pumping required; automatic spraying with a single button press.
- **Rechargeable Battery:** 2000mAh dual-cell battery provides 2-3 hours of continuous use, spraying 25-30 gallons per charge. Fully charges in approximately 3 hours via USB-C.
- **Versatile Nozzles:** Includes brass, fan, 5-hole, and 6-hole nozzles for various spray patterns (fine mist to direct stream).
- **Telescopic Wand:** Extends up to 23.6 inches (60cm) for reaching high or distant areas.
- **Comfortable Carrying:** Adjustable, thickened shoulder strap and ergonomic handle for reduced fatigue.
- **Durable Design:** Constructed with high-quality ABS and HDPE materials, featuring a built-in filter to prevent clogs.
- **Waterproof Handle:** Ensures safe operation.

3. SETUP INSTRUCTIONS

Follow these steps to assemble your electric garden sprayer before first use.

1. **Install Nozzle and Sealing Ring:** Insert the desired nozzle and sealing ring onto the telescopic rod. Tighten securely.
2. **Install Extension Rod:** Insert the extension rod into the handle.
3. **Unscrew Nut:** Unscrew the nut from the handle.
4. **Thread Nut onto Hose:** Thread the nut onto the hosepipe first.
5. **Insert Hose and Tighten Nut:** Insert the hose into the end of the handle and tighten the nut to seal it.
6. **Insert Waterpipe:** Insert the waterpipe into the spout of the tank and tighten the nut.
7. **Attach Shoulder Strap:** Attach the adjustable shoulder strap to the water tank.
8. **Assembly Complete:** Your sprayer is now assembled.

Easy Installation in Simple Steps



Figure 3.1: Visual guide for easy installation of the sprayer components.

Charging the Battery:

Before first use, fully charge the sprayer's battery.

- Locate the USB Type-C charging port on the waterproof handle.
- Connect the provided USB data cable to the charging port and a suitable USB power adapter (not included).
- The battery indicator light will show red during charging.
- Once fully charged (approximately 3 hours), the indicator light will turn blue.
- Disconnect the charger once charging is complete.

Advanced Waterproof Handle with Prolonged Battery Life



Figure 3.2: Charging the sprayer handle and battery indicator status.

4. OPERATING INSTRUCTIONS

Filling the Tank:

- Ensure the sprayer is turned off and unplugged.
- Unscrew the lid of the 2.1-gallon tank.

- Pour the desired liquid (water, fertilizer, weed killer, etc.) into the large filling mouth. Do not exceed the 2.1-gallon (8L) capacity indicated by the clear scale on the tank.
- The built-in filter screen will help prevent impurities from entering the tank and clogging the system.
- Securely screw the lid back onto the tank.

Large Filling Mouth and Clear Scale for Quick Refills and Easy Water Monitoring

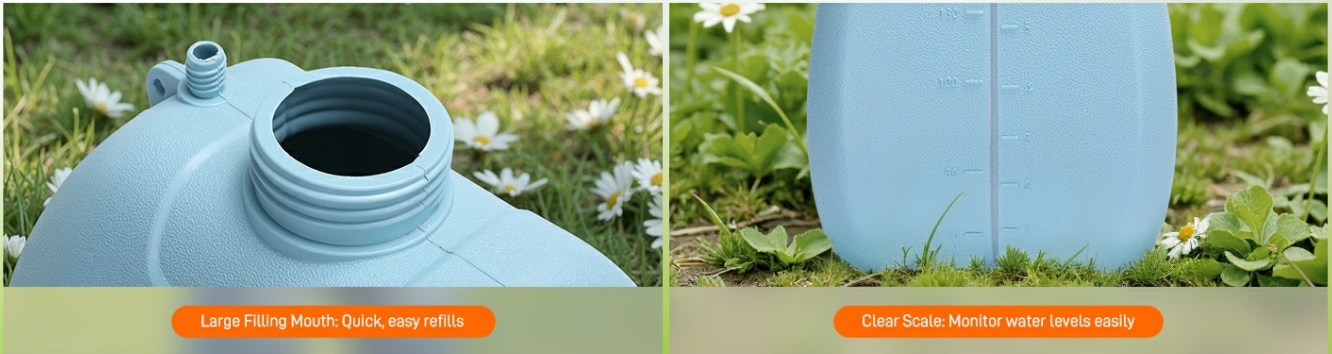 


Figure 4.1: Filling the tank and monitoring liquid levels.

Built-In Filter Prevents Clogs from Impurities



Figure 4.2: The built-in filter prevents impurities.

Selecting and Adjusting Nozzles:

The sprayer comes with four interchangeable nozzles to suit various spraying needs.

- **Brass Nozzle:** Adjustable from a fine mist to a direct stream by twisting the nozzle head. Ideal for general watering or targeted application.
- **Fan Nozzle:** Provides a wide, flat spray pattern, suitable for covering larger areas quickly.
- **5-Hole Nozzle:** Delivers a multi-stream spray, good for even coverage on plants.
- **6-Hole Nozzle:** Similar to the 5-hole, offering a broader, softer spray pattern. Adjustable by twisting.



Figure 4.3: Various nozzle options and their spray modes.

Operating the Sprayer:

- Once the tank is filled and the desired nozzle is attached, press the power button on the waterproof handle to start spraying.
- To stop spraying, press the power button again.
- Adjust the telescopic wand as needed to reach different heights or distances. The wand extends up to 23.6 inches (60cm).
- Utilize the adjustable shoulder strap for comfortable carrying during extended use.

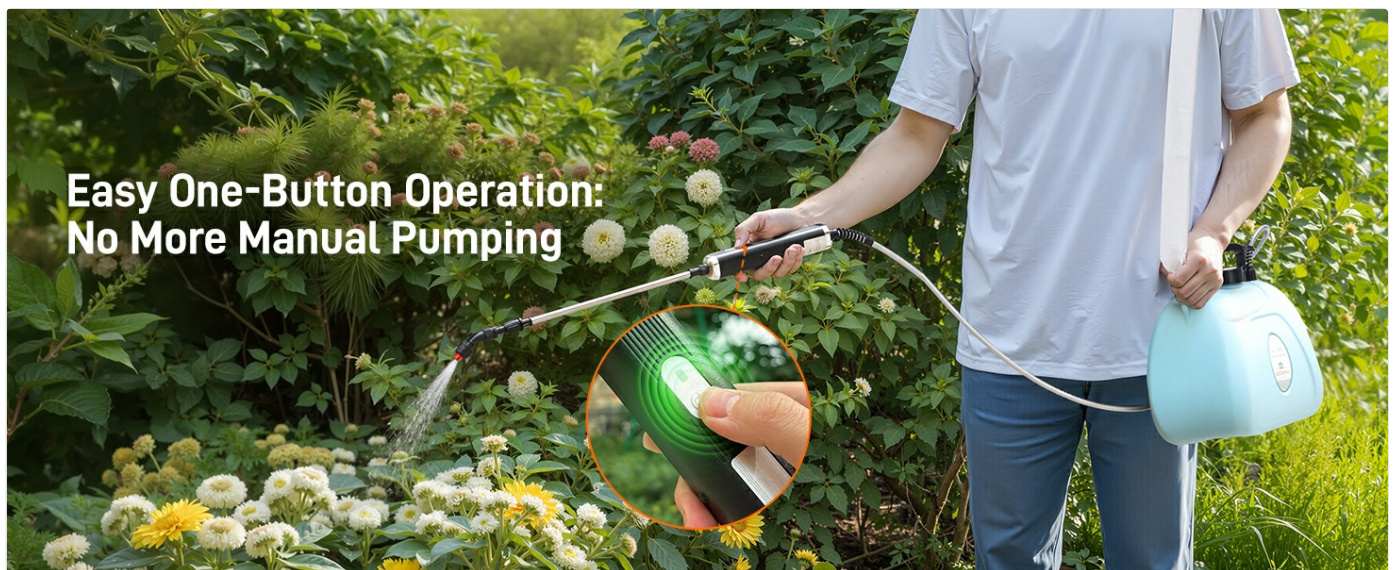 


Figure 4.4: One-button operation for automatic spraying.

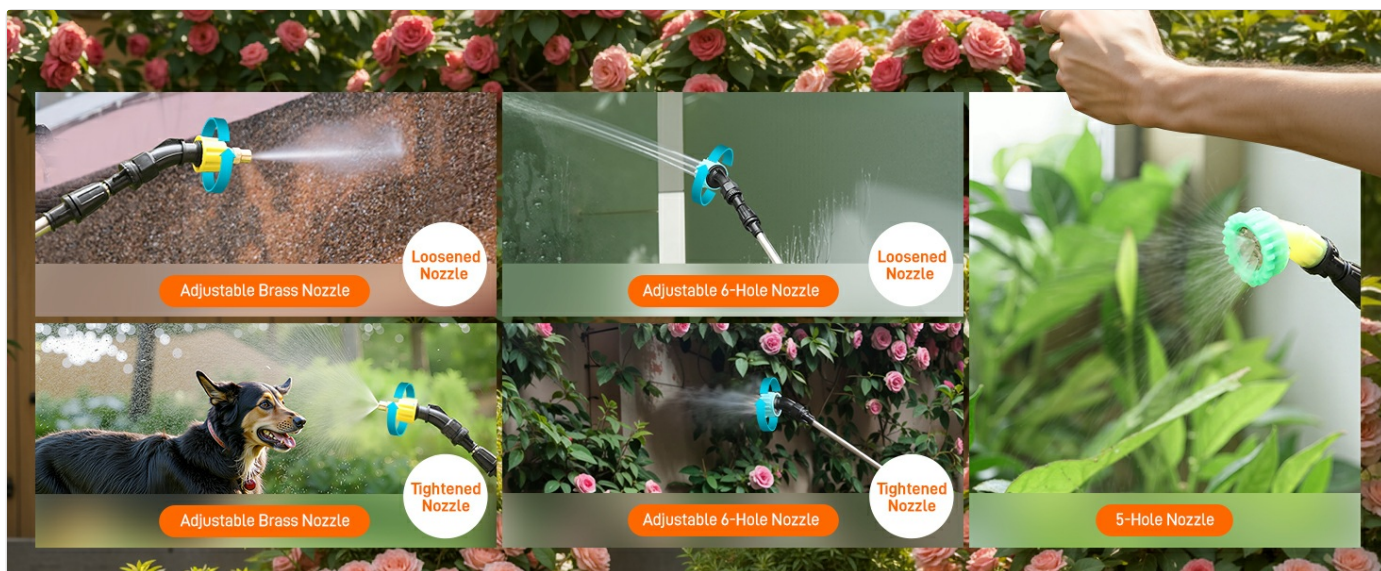 


Figure 4.5: Extendable spray wand for high-reach applications.

Two Ways to Carry for Your Comfort



Figure 4.6: Two comfortable ways to carry the sprayer.

Applications:

This versatile sprayer can be used for various tasks:

- Watering plants and gardens
- Applying fertilizers
- Spraying weed killers
- Indoor and outdoor cleaning
- Pet bathing

Flexible Usage Across Multiple Scenarios



Figure 4.7: Flexible usage across multiple scenarios.

5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your sprayer.

- **Cleaning:** After each use, especially when spraying chemicals, rinse the tank thoroughly with clean water. Operate the sprayer with clean water for a few minutes to flush out the hose and nozzle.
- **Filter Screen:** Regularly check and clean the built-in filter screen to prevent clogs. Remove any debris or residue.
- **Storage:** Store the sprayer in a cool, dry place, away from direct sunlight and extreme temperatures. Ensure the tank is empty and clean before storage.
- **Battery Care:** For long-term storage, charge the battery to about 50% every 3-6 months to maintain battery health.
- **Wand Storage:** The sprayer features a convenient wand storage slot on the tank to keep the wand secure when not in use.



Figure 5.1: Convenient wand storage slot.

6. TROUBLESHOOTING

If you encounter issues with your sprayer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Sprayer does not turn on.	Battery is depleted.	Charge the battery fully.
No spray or weak spray.	Tank is empty. Nozzle is clogged. Filter screen is clogged. Hose is kinked.	Refill the tank. Clean the nozzle. Clean the filter screen. Straighten the hose.
Leaking from nozzle or connections.	Nozzle or connections are loose. Sealing ring is damaged or missing.	Tighten all connections. Check and replace sealing rings if necessary.
Battery indicator not working.	Charging cable or adapter issue.	Ensure the USB-C cable and adapter are functioning correctly. Try a different cable/adapter.

If the problem persists after attempting these solutions, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	GOCHIFIX
Model Name	EBS-G2
Tank Volume	2.1 Gallons (8 Liters)
Power Source	Battery Powered (2000mAh dual-cell)
Charging Time	Approx. 3 hours
Continuous Working Time	2-3 hours
Hose Length	1.1 Meters
Telescopic Wand Extension	Up to 23.6 inches (60cm)
Nozzles Included	Brass, Fan, 5-Hole, 6-Hole
Material	Acrylonitrile Butadiene Styrene (ABS), HDPE
Item Weight	2.68 pounds (1.22 Kilograms)
Product Dimensions	5.43"W x 12.05"H
UPC	085353575900

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official GOCHIFIX website. Keep your purchase receipt as proof of purchase.

Manufacturer: GOCHIFIX

ASIN: B0DQG5XPBV

© 2026 GOCHIFIX. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DQG5XPBV>

More documents and user manuals: <https://manuals.plus/>