

Dorcy 41-3832

Dorcy LifeGear 41-3832 Mini Max 100 Lumen Flashlight User Manual

1. INTRODUCTION

Thank you for choosing the Dorcy LifeGear 41-3832 Mini Max 100 Lumen Flashlight. This compact and versatile flashlight is designed for various lighting needs, offering multiple modes and durable construction. This manual provides essential information for the proper setup, operation, and maintenance of your flashlight.

2. PRODUCT OVERVIEW

The LifeGear Mini Max LED flashlight is a portable lighting solution, approximately 4 inches in length. It features COB super bright white LEDs, delivering 100 lumens of light with an LED life exceeding 10,000 hours. Its aluminum construction ensures durability, and it is designed to be water-resistant.

Key Features:

- Four light modes: Flashlight, Red Glow, Red Flasher, and SOS.
- Durable aluminum construction.
- Compact and portable design.
- Up to four hours of run time.



A single black Dorcy LifeGear Mini Max flashlight, showcasing its compact design and textured grip.

3. SETUP

Battery Installation

The Dorcy LifeGear Mini Max flashlight requires three (3) AAA batteries for operation. Batteries are typically included with the product.

1. Unscrew the tail cap of the flashlight by turning it counter-clockwise.
2. Insert three AAA batteries into the battery compartment, ensuring the correct polarity (+/-) as indicated inside the compartment.
3. Screw the tail cap back on by turning it clockwise until it is securely tightened. Avoid over-tightening.



A person holding the Dorcy LifeGear Mini Max flashlight, illustrating its ergonomic design and portability.

4. OPERATING INSTRUCTIONS

Light Modes

The flashlight features a push-button switch on the tail cap to cycle through its four distinct lighting modes:

1. **Flashlight Mode:** Press the button once for standard white LED illumination (100 lumens).
2. **Red Glow Mode:** Press the button a second time for a steady red light. This mode is useful for preserving night vision or for subtle illumination.

3. **Red Flasher Mode:** Press the button a third time for a flashing red light, suitable for signaling or as a warning light.
4. **SOS Flasher Mode:** Press the button a fourth time for an international SOS signal (three short, three long, three short flashes), intended for emergency situations.
5. **Off:** Press the button a fifth time to turn the flashlight off.



Close-up of the Dorcy LifeGear Mini Max flashlight emitting a red glow, demonstrating its red light mode.

5. MAINTENANCE

- **Cleaning:** Wipe the flashlight body with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace all three AAA batteries simultaneously when the light output diminishes. Do not mix old and new batteries or different battery types.
- **Storage:** If the flashlight will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.
- **Water Resistance:** The flashlight is water-resistant, not waterproof. Avoid submerging it in water. Ensure the tail cap is securely tightened to maintain water resistance.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Flashlight does not turn on.	Dead or incorrectly inserted batteries.	Replace batteries with new AAA batteries, ensuring correct polarity.
Light is dim or flickers.	Low battery power. Loose tail cap.	Replace batteries. Tighten the tail cap securely.
Cannot cycle through modes.	Faulty switch or low battery.	Ensure batteries are fresh. If problem persists, contact customer support.

7. SPECIFICATIONS

Feature	Detail
Model Number	41-3832
Light Output	100 Lumens
Light Source Type	LED (COB)
Power Source	Battery Powered
Battery Type	3 x AAA Alkaline (included)
Run Time	Approximately 4 hours
Material	Aluminum
Dimensions	5"D x 1"W x 7"H (Product dimensions as listed, actual flashlight is smaller)
Item Weight	4.8 ounces
Water Resistance Level	Water Resistant

8. WARRANTY AND SUPPORT

Warranty Information

This Dorcy LifeGear Mini Max Flashlight comes with a one-year limited warranty from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal use. It does not cover damage caused by misuse, abuse, accidents, unauthorized repairs, or normal wear and tear. Please retain your proof of purchase for warranty claims.

Customer Support

For technical assistance, warranty claims, or any questions regarding your Dorcy LifeGear Mini Max Flashlight, please contact Dorcy customer support through their official website or the retailer where the product was purchased. Specific contact details can typically be found on the product packaging or the manufacturer's website.

