

[Manuals.plus](#) /

› [Silver Crest](#) /

› Silver Crest Digital Touch Air Fryer S-18 User Manual

Silver Crest S-18

Silver Crest Digital Touch Air Fryer S-18 User Manual

Model: S-18 | Capacity: 6 Litres | Power: 2400 Watts

1. INTRODUCTION

Congratulations on your purchase of the Silver Crest Digital Touch Air Fryer, Model S-18. This appliance is designed to provide a healthier way to cook your favorite foods by using rapid air circulation technology, requiring little to no oil. Please read this manual thoroughly before operating the appliance to ensure safe and efficient use. Keep this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface, away from walls and other appliances to allow for

proper air circulation.

- Never fill the basket with oil.

3. PRODUCT OVERVIEW

3.1 Components

Your Silver Crest Digital Touch Air Fryer includes the following components:

- Main Air Fryer Unit with Digital Touch Control Panel
- Removable Non-stick Frying Basket
- User Manual (this document)

3.2 Features

- **Digital Touch Control Panel:** Easy-to-use interface for setting time and temperature.
- **Large 6-Liter Capacity:** Accommodates generous portions for family meals.
- **Powerful 2400W Heating Element:** Ensures quick heating and efficient cooking.
- **Rapid Air Circulation Technology:** Cooks food evenly and crisps it to perfection with little to no oil.
- **Adjustable Temperature:** From 80°C to 200°C.
- **Integrated Timer:** Up to 60 minutes with automatic shut-off.
- **Non-stick Coating:** For easy food release and cleaning.



Figure 1: Front view of the Silver Crest Digital Touch Air Fryer, showing the digital control panel and removable basket.



Figure 2: Diagram illustrating key features of the Silver Crest Digital Touch Air Fryer, including its 6L capacity, 2400W power, and LCD touch control.

4. SETUP AND FIRST USE

4.1 Unpacking

1. Remove all packaging materials from the air fryer.
2. Check that all components listed in Section 3.1 are present and undamaged.
3. Remove any stickers or labels from the appliance.

4.2 Initial Cleaning

1. Wipe the exterior of the appliance with a damp cloth.
2. Clean the frying basket with hot water, dish soap, and a non-abrasive sponge. The basket is dishwasher safe.
3. Rinse and dry all parts thoroughly before use.

4.3 Placement

- Place the air fryer on a stable, level, and heat-resistant surface.
- Ensure there is at least 10 cm (4 inches) of free space on the back, sides, and above the appliance to allow for proper air circulation.

- Do not place the appliance near flammable materials or heat sources.

4.4 First Use (Burn-off)

During the first few uses, a slight odor or light smoke may be emitted from the appliance. This is normal and will dissipate quickly. It is recommended to run the air fryer empty for about 10-15 minutes at 180°C (350°F) before cooking food for the first time. Ensure the area is well-ventilated.

5. OPERATING INSTRUCTIONS

5.1 Preparing for Cooking

1. Plug the power cord into a grounded wall outlet.
2. Carefully pull the frying basket out of the air fryer.
3. Place the ingredients into the frying basket. Do not exceed the MAX fill line or overload the basket to ensure even cooking.
4. Slide the frying basket back into the air fryer until it clicks into place.

5.2 Setting Time and Temperature

1. Once the basket is inserted, the digital display will illuminate.
2. Use the temperature control buttons (usually marked with '+' and '-') to set the desired cooking temperature (80°C to 200°C).
3. Use the timer control buttons (usually marked with '+' and '-') to set the desired cooking time (up to 60 minutes).
4. Press the Start/Pause button to begin the cooking process. The fan and heating element will activate.

5.3 During Cooking

- Some recipes require shaking or turning ingredients halfway through the cooking time. To do this, carefully pull out the basket by its handle. The air fryer will automatically pause.
- Shake or turn the ingredients, then slide the basket back into the air fryer. The cooking process will resume automatically.
- The air fryer's exterior and the basket will be hot during operation. Always use the handle to remove the basket.

5.4 Cooking Completion

1. When the set cooking time has elapsed, the air fryer will emit an audible signal and automatically shut off.
2. Carefully pull the basket out of the air fryer.
3. Empty the contents onto a plate or serving dish. Use tongs to remove larger items.
4. Unplug the appliance from the wall outlet and allow it to cool completely before cleaning.

6. MAINTENANCE AND CLEANING

Clean the air fryer after every use.

1. **Before Cleaning:** Always unplug the appliance and allow it to cool down completely.
2. **Frying Basket:** The non-stick frying basket is dishwasher safe. Alternatively, clean it with hot water, dish soap, and a non-abrasive sponge. For stubborn food residues, soak the basket in hot water with dish soap for about 10 minutes.

3. **Interior:** Wipe the interior of the appliance with a damp cloth. If necessary, use a soft brush to remove any food residues from the heating element. Do not use abrasive cleaners or steel wool.
4. **Exterior:** Wipe the exterior of the air fryer with a damp cloth. Do not immerse the main unit in water or any other liquid.
5. **Storage:** Ensure all parts are clean and dry before storing the appliance in a cool, dry place.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in. The basket is not inserted correctly.	Ensure the power cord is securely plugged into a grounded outlet. Push the basket firmly into the appliance until it clicks into place.
Food is not cooked evenly.	Basket is overloaded. Food was not shaken/turned.	Reduce the amount of food in the basket. Cook in smaller batches. Shake or turn ingredients halfway through cooking.
White smoke comes from the appliance.	Fat residues from previous use. Fatty ingredients are being cooked.	Clean the basket and interior thoroughly after each use. Remove excess oil from ingredients before air frying.
Food is not crispy.	Ingredients are not suitable for air frying. Temperature is too low or cooking time too short.	Ensure ingredients are dry before adding to the air fryer. Lightly brush with oil for extra crispiness. Increase temperature or cooking time as needed.

8. SPECIFICATIONS

Feature	Detail
Model Name	Silver Crest Digital Air Fryer (S-18)
Capacity	6 Litres
Output Wattage	2400 Watts
Voltage	230 Volts
Control Method	Digital Touch Panel
Temperature Range	80°C - 200°C
Timer	Up to 60 minutes
Product Dimensions (D x W x H)	30D x 35W x 35H Centimeters
Item Weight	4.5 Kilograms

Feature	Detail
Material	Metal, Plastic (Outer Material: Polypropylene)
Special Features	Digital Display, Large Capacity, Temperature Control, Touch Control
Air Frying Technology	Rapid Air Circulation
Nonstick Coating	Yes
Dishwasher Safe Parts	Basket

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact the retailer/manufacturer directly. Keep your proof of purchase for any warranty claims.

