

Geepas GWMF1041SRG

Geepas GWMF1041SRG Front Load Washing Machine

USER MANUAL

Model: GWMF1041SRG | Brand: Geepas

1. Introduction

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Geepas GWMF1041SRG 10kg Front Load Washing Machine. Please read these instructions carefully before using the appliance and keep them for future reference.

The Geepas GWMF1041SRG 10kg front-load washing machine is designed to deliver powerful cleaning, smart functions, and sleek aesthetics. Its modern metallic design and intuitive LED display simplify laundry tasks. The 64-liter drum ensures maximum load capacity and efficient water usage. Equipped with multiple smart wash programs, including Quick Wash, Cotton, Delay End, and Allergy Care, this fully automatic washing machine adapts to various fabric types and lifestyles. It offers ultra-quiet operation, energy efficiency, and powerful stain removal capabilities.

2. Safety Instructions

- **Electrical Safety:** Ensure the appliance is connected to a properly grounded outlet. Do not use extension cords. Disconnect power before cleaning or servicing.
- **Water Supply:** Connect the water inlet hoses securely to prevent leaks. Ensure water pressure is within the recommended range.
- **Installation:** The appliance must be installed on a firm, level surface. Remove all transit bolts from the rear of the machine before operation to prevent excessive vibration and damage.
- **Children and Pets:** Keep children and pets away from the appliance during operation. Do not allow them to play with the controls.
- **Flammable Materials:** Do not wash items that have been cleaned, washed, soaked, or spotted with

combustible or explosive substances.

- **Overloading:** Do not overload the washing machine. Refer to the capacity guidelines for optimal performance.
- **Damage:** If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

3. Setup

3.1 Unpacking

Carefully remove all packaging materials. Inspect the washing machine for any damage. Locate and remove the transit bolts (usually four) from the rear of the machine. These bolts secure the drum during transport and must be removed before use. Keep the bolts for future transport if needed.

3.2 Placement

Place the washing machine on a solid, level floor. Adjust the leveling feet to ensure the machine is stable and does not wobble. Ensure there is adequate space around the machine for ventilation and connections.

3.3 Water Connection

Connect the cold water inlet hose to the cold water tap and the hot water inlet hose (if applicable) to the hot water tap. Ensure connections are tight to prevent leaks. Place the drain hose into a standpipe or laundry tub, ensuring it is securely positioned to prevent dislodgement during draining.

3.4 Electrical Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage and frequency match the specifications of your appliance.



Image: Front view of the Geepas GWMF1041SRG washing machine, showcasing the door and control panel.

4. Operating Instructions

4.1 Control Panel Overview

The washing machine features an intuitive LED digital display and touch controls for easy program selection and monitoring.



Image: Geepas GWMF1041SRG washing machine highlighting key features: LED Digital Display, BLDC Inverter Motor, Steam Wash, and 14000 RPM Spin Speed.

4.2 Loading Laundry

Open the door and load your laundry into the drum. Ensure items are not tangled and distribute them evenly. Do not exceed the 10kg capacity to ensure optimal washing performance and prevent damage.



Image: Geepas GWMF1041SRG washing machine with a 10kg capacity label and a laundry basket, illustrating its large capacity.

4.3 Adding Detergent and Additives

Pull out the detergent dispenser drawer. Add the appropriate amount of detergent to the main wash compartment. If using fabric softener or pre-wash detergent, add them to their respective compartments. Close the dispenser drawer gently.

4.4 Selecting a Wash Program

Turn the program selector knob or use the touch controls to choose your desired wash program. Available programs include:

- **Quick Wash:** For lightly soiled items or when time is limited.
- **Cotton:** For cotton garments.
- **Allergy Care:** Utilizes steam and higher temperatures to remove 99% of allergens and bacteria, ideal for sensitive skin and baby clothes.
- **Delay End:** Allows you to set a delayed start time for the wash cycle.
- **Heavy Duty:** For heavily soiled items.
- **Extra Rinse:** Adds an additional rinse cycle.
- **Drum Clean:** A self-cleaning cycle for the drum.

The LED display will show the selected program, remaining time, and cycle status.



Image: Geepas GWMF1041SRG washing machine highlighting its ability to remove 99% of bacteria, a feature of the Allergy Care program.

4.5 Starting the Wash Cycle

Press the Start/Pause button to begin the wash cycle. The machine will automatically proceed through the selected program. To pause the cycle, press the Start/Pause button again. Press it once more to resume.

5. Maintenance

Regular maintenance ensures the longevity and optimal performance of your washing machine.

5.1 Cleaning the Drum

Use the 'Drum Clean' program periodically to clean the interior of the drum and remove any residue or odors. It is recommended to run this cycle once a month.

5.2 Cleaning the Detergent Dispenser

Remove the detergent dispenser drawer and rinse it under running water to remove any detergent or softener

buildup. Clean the housing of the dispenser with a brush if necessary. Reinsert the drawer.

5.3 Cleaning the Drain Filter

The drain filter should be cleaned regularly to prevent blockages. Locate the filter cover at the bottom front of the machine. Place a shallow container underneath to catch any residual water. Open the cover, unscrew the filter, and remove any lint or foreign objects. Clean the filter under running water and screw it back in securely. Close the cover.

5.4 Exterior Cleaning

Wipe the exterior surfaces of the washing machine with a soft, damp cloth. Do not use abrasive cleaners or solvents that could damage the finish.

6. Troubleshooting

Before contacting customer service, please check the following common issues:

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged, door not closed properly, water supply off, program not selected.	Check power connection, ensure door is latched, open water taps, select a program and press Start.
Excessive vibration/noise	Transit bolts not removed, machine not level, uneven load.	Ensure all transit bolts are removed. Level the machine using the adjustable feet. Redistribute laundry inside the drum.
Water leakage	Loose hose connections, clogged drain filter, excessive detergent.	Tighten hose connections. Clean the drain filter. Use recommended amount of detergent.
Water not draining	Clogged drain filter, kinked drain hose.	Clean the drain filter. Straighten the drain hose.
Detergent residue on clothes	Too much detergent, low water pressure, overloaded machine.	Reduce detergent amount. Check water supply. Do not overload. Select Extra Rinse option.

7. Specifications

Feature	Detail
Brand	Geepas
Model Name	GWMF1041SRG
Capacity	10 kg
Product Dimensions (D x W x H)	63 cm x 63 cm x 88.8 cm
Item Weight	65 kg
Access Location	Front Load
Color	Metallic Grey

Feature	Detail
Finish Type	Metallic
Material	Stainless Steel, Metal
Washing Machine Drum Material	Stainless Steel
Special Features	Auto Restart, Vibration Reduction, Drum Clean, Built-in Heater, Remaining Time Display, High Efficiency
Cycle Options	Active Steam, Extra Rinse, Quick Wash, Heavy Duty
Control Type	Touch Panel
Operation Mode	Fully Automatic
Maximum Spin Speed	14000 RPM
Noise Level	50 dB
Installation Type	Freestanding
Display Type	LED
Number of Programs	3 (Main programs, with various options)
Recommended Uses	Commercial, Residential
Included Components	Cover
Country of Origin	China

8. Warranty and Support

This Geepas GWMF1041SRG washing machine comes with **two-year manufacturer's warranty**. Please retain your proof of purchase for warranty claims.

For technical assistance, service requests, or warranty inquiries, please contact Geepas customer support through their official website or the contact information provided with your purchase documentation.