

[Manuals.plus](#) /

› [weidilixiang](#) /

› I6 MAX 4K Dual Camera Drone User Manual

weidilixiang I6 MAX

I6 MAX 4K Dual Camera Drone User Manual

Model: I6 MAX | Brand: weidilixiang

1. INTRODUCTION

The weidilixiang I6 MAX 4K Dual Camera Drone is an advanced aerial vehicle designed for capturing high-quality footage and providing an engaging flight experience. It features a 4K ultra-high-definition dual camera system, obstacle avoidance capabilities, and a brushless motor for stable and efficient operation.

This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your I6 MAX drone. Please read it thoroughly before first use.



Figure 1: The I6 MAX 4K Dual Camera Drone, its remote control, and the drone in its folded configuration.

2. PACKAGE CONTENTS

Verify that all items listed below are present in your package. If any items are missing or damaged, contact customer support.

- I6 MAX Drone (excluding batteries)
- Remote Control
- Battery * 1 (for drone)
- Fan Blades * 4 (spare propellers)
- Charging Cable / Screwdriver
- Storage Bag
- Instructions Manual

**4K high-definition
dual camera**

Body battery * 1

Brushless power

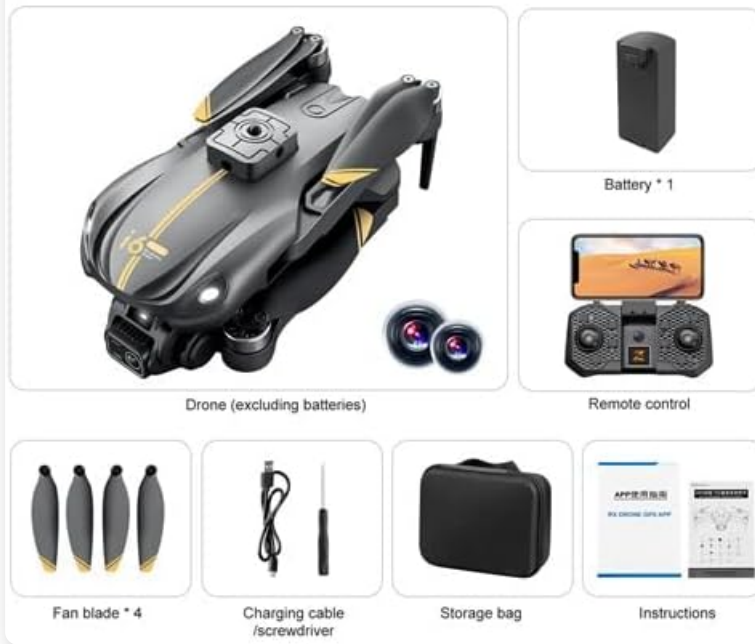 


Figure 2: Illustration of the complete package contents for the I6 MAX drone.

3. SETUP GUIDE

3.1. Charging the Drone Battery

Before first use, fully charge the drone battery. Connect the charging cable to the drone battery and a compatible USB power adapter (not included). The charging indicator will show the charging status.

3.2. Installing Propellers

Attach the propellers to the corresponding motor shafts. Ensure that propellers are installed correctly according to their rotation direction (indicated by markings on the propellers and drone arms). Incorrect installation can affect flight stability.

3.3. Preparing the Remote Control

Insert the required batteries (not included) into the remote control. Ensure correct polarity. Extend the phone holder if you plan to use a smartphone for FPV viewing.

3.4. Unfolding the Drone

Gently unfold the drone arms until they lock into place. Ensure all arms are fully extended and secure before flight.



Figure 3: The i6 MAX drone in its unfolded state, ready for operation.

4. OPERATING INSTRUCTIONS

4.1. Power On and Pairing

1. Power on the drone by pressing and holding the power button.
2. Power on the remote control.
3. The drone and remote control will automatically pair. Refer to the remote control's indicator lights for pairing status.

4.2. One-Click Control for Beginners

The i6 MAX drone features simplified controls for ease of use, especially for beginners:

- **One-Click Takeoff:** Press the designated button on the remote control to initiate automatic takeoff. The drone will ascend to a safe hovering altitude.
- **One-Click Landing:** Press the designated button to initiate automatic landing. The drone will descend and land gently.
- **One-Click Return:** Press the designated button to command the drone to return to its takeoff point.

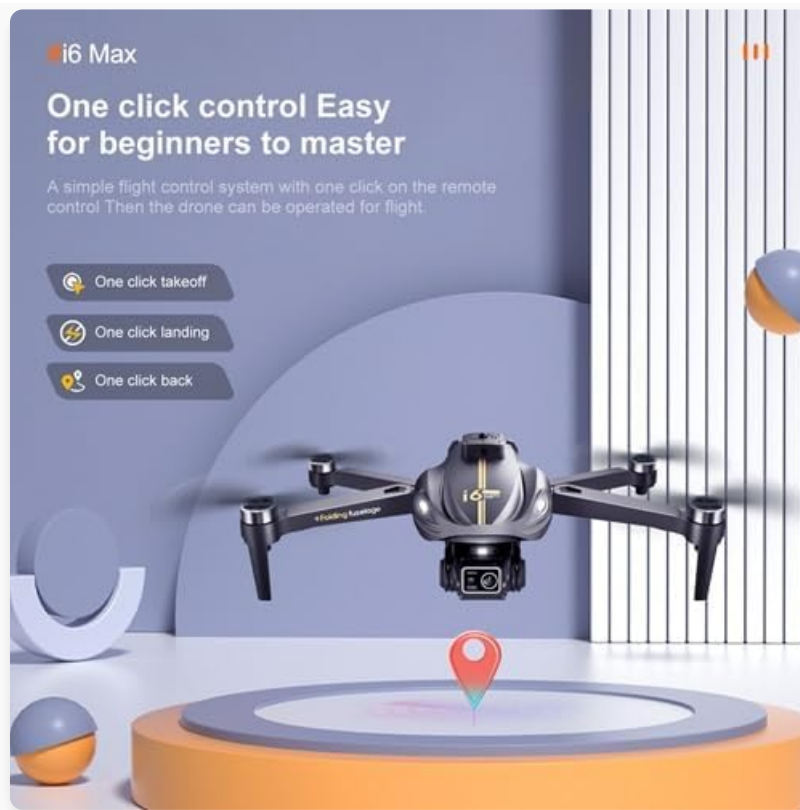 


Figure 4: Visual representation of the one-click control features for simplified operation.

4.3. Flight Features

- **360° Aerial Stunts:** Execute impressive 360-degree rolling stunts with a dedicated button on the remote control.
- **Brushless Motor:** The brushless motor provides powerful and stable flight performance, offering Level 5 wind resistance.
- **Optical Flow Fixed Point Hovering:** Utilizes optical flow sensors for precise hovering, maintaining a stable position even indoors.
- **Air Pressure Fixed Altitude:** Maintains a consistent altitude, simplifying flight control.



Figure 5: The I6 MAX drone demonstrating its stable flight capabilities due to the brushless motor and wind resistance.

4.4. Camera Operation and Features

The I6 MAX drone is equipped with a 4K ultra-high-definition dual camera system for versatile photography and videography.

- **4K Dual Camera:** Capture stunning 4K video and 16MP photos. The dual lens system allows for varied perspectives.
- **90° Manual Adjustment:** The camera angle can be manually adjusted by 90 degrees to capture different views.
- **50x Zoom:** Utilize the digital zoom feature to get closer to your subject without moving the drone.
- **Gesture Control:** Perform specific hand gestures to trigger photo or video recording. Refer to the app instructions for specific gestures.
- **HD Image Transmission:** Real-time video feed to your smartphone via Wi-Fi for FPV (First Person View) flying and monitoring.
- **Filter + Beauty Mode:** Enhance your photos directly through the companion application with built-in filters and beauty effects.



Figure 6: Detailed view of the drone's dual camera system and its manual adjustment capability.

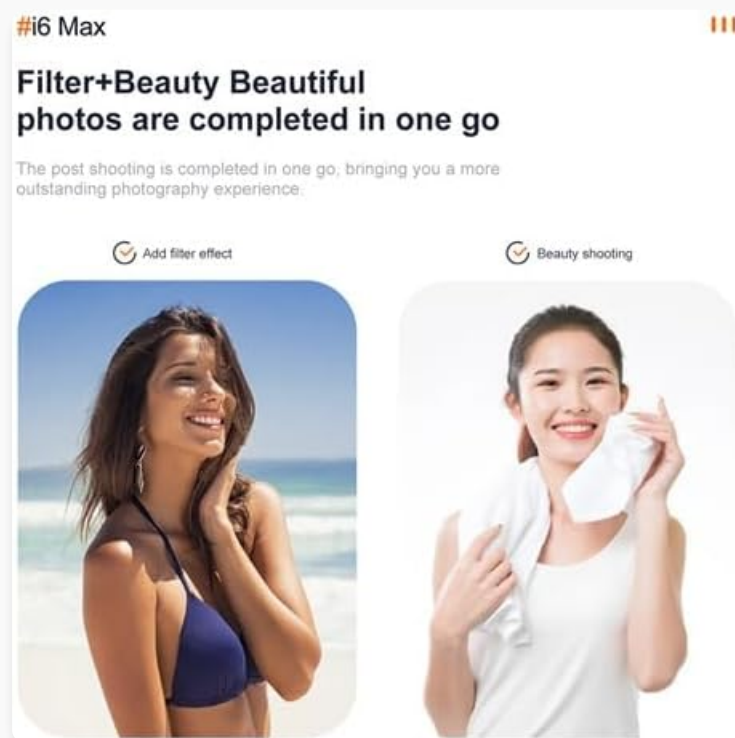 


Figure 7: Example of photo enhancement options within the drone's companion application.

4.5. Intelligent Flight Modes

- **Obstacle Avoidance:** Advanced sensors detect obstacles in all directions, allowing the drone to intelligently navigate around them for safer flights.
- **Intelligent Follow Mode:** The drone can automatically follow a designated subject, keeping it in the frame.
- **Trajectory Mapping:** Draw a flight path on your smartphone screen, and the drone will follow it automatically.

Support for "overhead shooting"

4K III

Equipped with next-generation lens technology, supporting remote control of 150 °The shooting angle can be used for up, down, and flat shots.

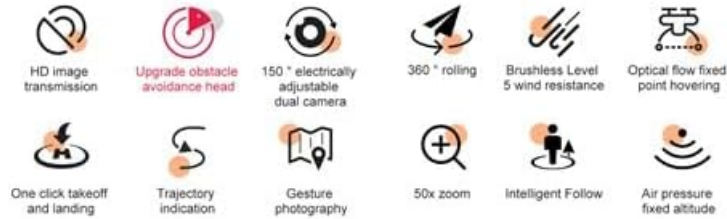 


Figure 8: Overview of key intelligent features and flight capabilities.

5. MAINTENANCE

- **Cleaning:** Regularly clean the drone body, propellers, and camera lens with a soft, dry cloth. Avoid using liquids.
- **Propeller Inspection:** Before each flight, inspect propellers for any cracks, bends, or damage. Replace damaged propellers immediately using the provided spares.
- **Battery Care:** Store batteries in a cool, dry place. Do not overcharge or over-discharge batteries. If storing for extended periods, charge to approximately 50%.
- **Storage:** When not in use, fold the drone and store it in its carrying case to protect it from dust and physical damage.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Drone does not power on.	Low battery or battery not properly inserted.	Charge the drone battery. Ensure the battery is securely inserted.
Remote control does not connect.	Remote control batteries low or pairing failed.	Replace remote control batteries. Re-attempt pairing process.
Unstable flight or drifting.	Propellers damaged or incorrectly installed. Drone not calibrated.	Check and replace damaged propellers. Ensure correct propeller installation. Perform drone calibration as per quick start guide.
No image from camera.	Wi-Fi not connected or app issue.	Ensure smartphone is connected to the drone's Wi-Fi network. Restart the app and drone.

7. SPECIFICATIONS

Feature	Detail
Brand	weidilixiang
Model Name	I6 MAX
Video Capture Resolution	4K
Effective Still Resolution	32 MP
Connectivity Technology	Wi-Fi
Special Feature	Foldable
Skill Level	Beginner
Item Weight	450 Grams (15.9 ounces)
Product Dimensions (Folded)	6.15"L x 6"W x 2"H (Approx. 16.5x8.5x7.5cm)
Product Dimensions (Expanded)	Approx. 27x33x7.5cm
Flight System	Air pressure fixed altitude + Optical flow visual positioning hovering + Brushless power
Battery Life	Approximately 15 minutes
Signal/Distance	2.4G / Approximately 500 meters
Charging	USB intelligent charging
Material	Plastic
UPC	635412062256

Product parameters

Name	Lens
i6 MAX	4K lens+bottom mounted optical flow lens
Folding size	Expand size
16.5x8.5x7.5cm	27x33x7.5cm
Flight system	
Flight system air pressure fixed altitude+optical flow visual positioning hovering+brushless power	
Battery life	Dynamic wind resistance
Approximately 15 minutes of battery life	Brushless motor/5-level wind resistance
Signal/Distance	Charging
2.4G/approximately 500 meters	USB intelligent charging

Figure 9: Detailed product specifications and parameters.

8. SAFETY GUIDELINES

Operating a drone requires responsibility. Adhere to the following safety guidelines:

- Always fly in open areas, away from people, animals, buildings, and obstacles.
- Maintain visual line of sight with the drone at all times.
- Do not fly near airports or restricted airspace. Check local regulations.
- Avoid flying in strong winds, rain, or other adverse weather conditions.
- Ensure the drone battery and remote control batteries are fully charged before each flight.
- Keep fingers and loose clothing away from rotating propellers.
- Do not operate the drone under the influence of alcohol or drugs.
- Respect privacy when capturing photos or videos.

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your product or contact the manufacturer directly. Keep your purchase receipt as proof of purchase.

Manufacturer: Vinci

© 2024 weidilixiang. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DQK9TXFT>

More documents and user manuals: **<https://manuals.plus/>**