

[Manuals.plus](#) /

› [okulaku](#) /

› okulaku Kids Tablet ZIDS701 User Manual - 7-inch Android Learning Tablet with Parental Control

okulaku ZIDS701

okulaku Kids Tablet ZIDS701 User Manual

Model: ZIDS701 | Brand: okulaku

1. INTRODUCTION

Welcome to the world of interactive learning and entertainment with your new okulaku Kids Tablet ZIDS701. This 7-inch Android tablet is specifically designed for children, featuring robust parental controls, a durable kid-proof case, and a suite of educational and fun applications. This manual provides essential information for setting up, operating, and maintaining your tablet to ensure a safe and enriching experience for your child.



Image 1: The okulaku Kids Tablet ZIDS701, showcasing its kid-friendly design and vibrant display.

2. WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- 1x okulaku ZIDS701 Kids Tablet
- 1x Charging Adapter
- 1x Type-C Cable
- 1x User Manual (this document)

3. PRODUCT OVERVIEW

The okulaku Kids Tablet ZIDS701 is designed with children in mind, featuring a durable case and intuitive controls.

KID-PROOF CASE

Okulaku

ADJUSTABLE
HORN HANDLE

With 360°



Soft Silicon Case



Anti-drop



Portable & Adjustable Handle

Image 2: Detail of the kid-proof case with adjustable handles, providing protection and versatile viewing angles.

Key Features:

- **7-inch HD IPS Display:** 1024x600 pixels for clear visuals.
- **Android 11.0 OS:** User-friendly interface.
- **Quad-Core Processor:** For smooth performance.
- **2GB RAM + 32GB ROM:** Expandable storage up to 512GB via microSD card (not included).
- **Dual Cameras:** Front 0.3MP and Rear 2MP for photos and videos.
- **Kid-Proof Case:** Durable silicone case with 360° adjustable handle stand.
- **Parental Control:** Comprehensive settings for managing content and screen time.
- **Preinstalled Apps:** Educational and entertainment apps for immediate use.

4. SETUP

4.1 Initial Charging

Before first use, fully charge the tablet using the provided charging adapter and Type-C cable. The charging port is located on the side of the tablet. A full charge typically takes a few hours.

4.2 Powering On/Off

- **To Power On:** Press and hold the Power button (located on the side) until the screen lights up.
- **To Power Off:** Press and hold the Power button, then select "Power Off" from the options that appear on the screen.

4.3 Wi-Fi Connection

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Toggle Wi-Fi ON.
3. Select your desired Wi-Fi network from the list.
4. Enter the password if prompted, then tap **Connect**.

4.4 Google Account Setup

For full functionality, including downloading apps from the Google Play Store, you will need to set up a Google account. Follow the on-screen prompts during initial setup or go to **Settings > Accounts > Add account > Google**.

5. OPERATING THE TABLET

5.1 Basic Navigation

The tablet uses a touchscreen interface. Tap to select, swipe to scroll, and pinch to zoom.

5.2 Kids Mode (Yubabe)

The tablet comes preloaded with a dedicated Kids Mode, powered by Yubabe, offering a safe and curated environment for children. This mode includes various educational and entertainment apps.

Pre-installed Funny Apps

Expand Children's Creativity



Image 3: A view of the pre-installed applications available in Kids Mode.

5.3 Parental Control

The Parental Control feature allows you to manage your child's tablet usage. Access this mode to:

- **Monitor Activities:** View usage statistics.
- **Manage Apps:** Add or block specific applications.
- **Filter Content:** Control access to websites and media.
- **Set Time Limits:** Define daily or weekly usage limits and rest periods.
- **Create Accounts:** Set up individual profiles for each child.

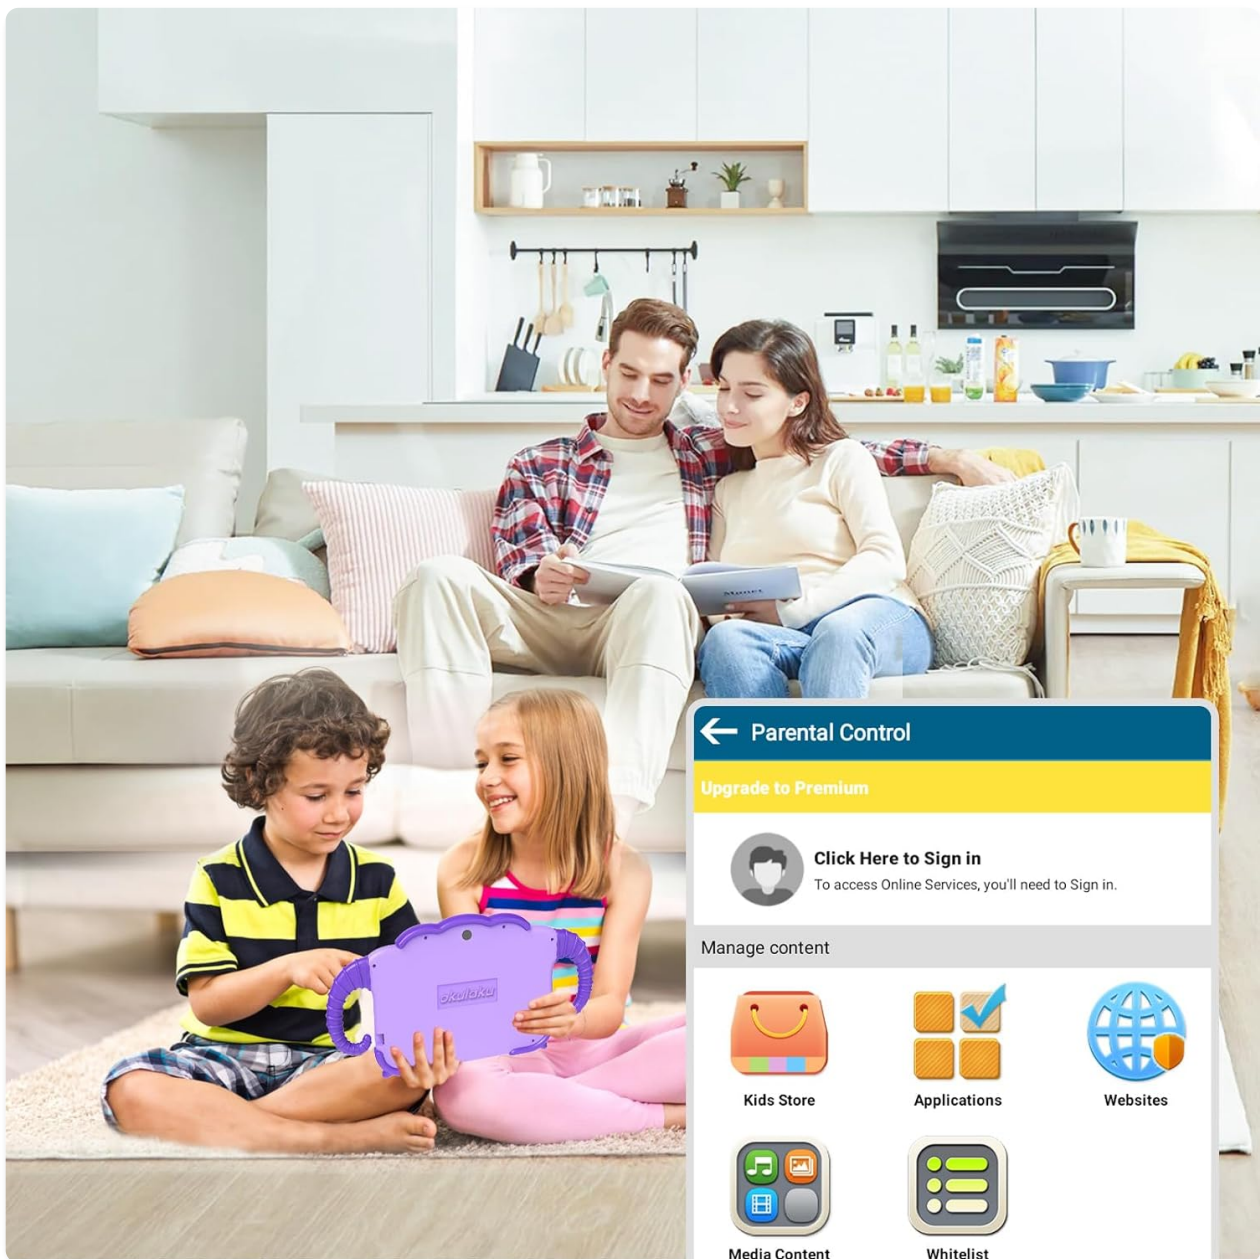


Image 4: The Parental Control dashboard, offering various management options.

Your browser does not support the video tag.

Video 1: Demonstrates the easy-to-use parental control features of the tablet, allowing parents to manage content and screen time effectively.

5.4 Downloading Apps

Beyond the preinstalled apps, you can download additional applications from the Google Play Store in the adult profile. Ensure parental controls are set appropriately before allowing children access to newly downloaded content.

5.5 Camera Usage

The tablet features a front 0.3MP camera and a rear 2MP camera. Open the Camera app to take photos or record videos. Saved media can be viewed in the Gallery app.

5.6 Media Playback

Use the preinstalled video and music players to enjoy multimedia content. The tablet supports various formats for videos and audio files.

Your browser does not support the video tag.

Video 2: Overview of the tablet's features, including its handles and suitability for toddlers.

6. FEATURES

6.1 Eye Protection Screen

The 7-inch HD IPS touch screen (1024x600) provides vibrant colors and automatically adjusts brightness for a comfortable reading and viewing experience, reducing eye strain for children.

6.2 Durable Kid-Proof Case

The tablet comes with a soft, shock-absorbing silicone case designed to protect against accidental drops and bumps. The integrated 360° adjustable handle stand allows children to use the tablet hands-free, making it ideal for travel or tabletop use.

Your browser does not support the video tag.

Video 3: Highlights the tablet's adjustable handles, allowing for hands-free use and enhanced portability.

6.3 Connectivity

The tablet supports Wi-Fi, Bluetooth, and Hotspot connectivity, allowing for internet access, pairing with accessories, and sharing connections.

Your browser does not support the video tag.

Video 4: A comprehensive look at the ZIDS701 Kids Tablet, detailing its various features and benefits.

7. SPECIFICATIONS

Feature	Specification
Model Number	ZIDS701
Screen Size	7 Inches
Screen Resolution	1024x600 pixels HD IPS
Operating System	Android 11.0
Processor Brand	Allwinner (Quad-core)
RAM	2 GB
Internal Storage	32 GB
Expandable Storage	Up to 512GB (MicroSD)
Front Camera	0.3 MP
Rear Camera	2 MP
Wireless Type	802.11g (Wi-Fi), Bluetooth
Battery	1 Lithium Ion battery (included)

Item Weight	1.39 pounds
Product Dimensions	9.8 x 1.4 x 5 inches

8. MAINTENANCE

8.1 Care and Cleaning

- Use a soft, lint-free cloth to clean the screen. Avoid abrasive cleaners.
- Keep the tablet away from liquids and extreme temperatures.
- The silicone case can be removed and cleaned with mild soap and water if necessary.

8.2 Battery Care

- Use only the original charging adapter and cable. Non-original chargers may damage the device or pose safety risks.
- Avoid fully discharging the battery frequently. Charge the tablet when the battery level is low.

9. TROUBLESHOOTING

9.1 Tablet Not Turning On

- Ensure the tablet is sufficiently charged. Connect it to the charger for at least 30 minutes.
- Press and hold the Power button for 10-15 seconds to perform a forced restart.

9.2 Wi-Fi Connection Issues

- Check if Wi-Fi is enabled in Settings.
- Restart your Wi-Fi router.
- Forget the network in tablet settings and reconnect.

9.3 Apps Crashing or Freezing

- Close and reopen the app.
- Clear the app's cache (Settings > Apps > [App Name] > Storage > Clear cache).
- Ensure the tablet's software is up to date.

10. SAFETY INFORMATION

- Recommended age for use is 3-14 years old. Children under 2 should be accompanied by an adult.
- Do not expose the tablet to water or excessive moisture.
- Avoid dropping the tablet, even with the protective case.
- Supervise children during tablet usage, especially when connected to the internet.
- Use only the provided charger to prevent damage or fire hazards.

11. WARRANTY AND SUPPORT

For any questions or support regarding your okulaku Kids Tablet ZIDS701, please refer to the contact information provided with your purchase or visit the official okulaku website. Keep your proof of purchase for

warranty claims.