

Manuals.plus /
› NOPAARD /
› NOPAARD 70 Inch Smart Ceiling Fan with Lights User Manual

NOPAARD YJ809

NOPAARD 70 Inch Smart Ceiling Fan with Lights User Manual

Model: YJ809 | Brand: NOPAARD

1. PRODUCT OVERVIEW

The NOPAARD 70 Inch Smart Ceiling Fan with Lights is designed to provide powerful airflow and versatile lighting for various indoor and covered outdoor spaces. This modern ceiling fan integrates advanced smart control features, including remote, mobile app, and voice control compatibility, ensuring convenience and ease of use. Its energy-efficient DC motor operates quietly, offering six adjustable speeds and a reversible function for year-round comfort. The integrated LED light is dimmable and offers three color temperature options to suit any ambiance.



Figure 1: NOPAARD 70 Inch Smart Ceiling Fan with Lights in a bedroom setting.

2. SAFETY INFORMATION

Please read all instructions carefully before beginning installation. Failure to do so may result in electric shock, fire, or personal injury.

- Always turn off power at the main circuit breaker before installation or maintenance.
- All wiring must be in accordance with national and local electrical codes. If you are unfamiliar with wiring, consult a qualified electrician.
- Ensure the mounting structure can support the weight of the fan (approximately 13.42 pounds).
- Do not bend the fan blades when installing or cleaning the fan.

- Keep hands, feet, and other objects clear of the rotating fan blades.
- This fan is damp-rated, suitable for indoor use and covered outdoor patios. Do not expose to direct water spray.

3. PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Ceiling Fan Motor Assembly
- Fan Blades (3)
- Light Kit
- Remote Control
- Downrods (6-inch and 10-inch)
- Mounting Bracket
- Hardware Pack (screws, wire nuts, washers)
- User Manual

4. INSTALLATION GUIDE

4.1 Pre-Installation

1. Turn off power at the circuit breaker.
2. Ensure the outlet box is securely fastened to the building structure and can support the fan's weight.

4.2 Mounting Options

The fan supports downrod mounting for various ceiling heights and can be installed on flat or sloped ceilings (up to 15 degrees).

Suitale for Different Height and Angle



DOWNROD OPTION



MOUNTING OPTION



Flat Ceiling



Sloped Ceiling $\leq 15^\circ$

IDEAL ROOM SIZES



200-400 SQ.FT

DAMP RATING



Dry Location



Covered Damp Location

Figure 2: Downrod and Mounting Options.

4.3 Wiring

Connect the fan's electrical wires to the household wiring according to the provided wiring diagram in the detailed manual. Ensure all connections are secure and insulated with wire nuts.

4.4 Blade Attachment

Carefully attach the three solid wood blades to the motor housing using the provided screws. Ensure they are securely fastened to prevent wobbling.

5. OPERATION

5.1 Control Methods

Your NOPAARD smart ceiling fan offers multiple convenient control options:

- **Remote Control:** The included remote allows for direct control of fan speed, light settings, and fan direction.
- **TUYA App Control:** Download the TUYA app to control your fan from your smartphone or tablet, even when away from home.
- **Voice Control:** Compatible with Alexa and Google Assistant devices for hands-free operation.
- **Wall Control:** Basic on/off functionality for the fan and light can be managed via a standard wall switch.



4 WAYS TO CONTROL

70" INDOOR OUTDOOR CEILING FAN



Remote Control



TUYA APP Control



Voice Control



Wall Control

NOTE: Can only turn on/off the fan and lights together, can not operate them separately and can not adjust.

 Amazon Alexa

 Google Assistant

 Tuya App

Figure 3: Four Ways to Control Your Fan.

Voice Control

Relax your Hands



works with the
Google Assistant



works with the
amazon alexa

Smart Control

Tuya APP Control from Anywhere

"Alexa, turn on living
room fan."

"okay."



Figure 4: Voice and App Control Capabilities.

5.2 Fan Speed Control

The fan features 6 variable speeds to adjust airflow to your preference. Speeds 1-2 provide a low, comfortable breeze, speeds 3-4 offer a natural wind, and speeds 5-6 deliver a high, cooling wind.

6 SPEEDS ADJUSTABLE

Meet your different needs



level 1-2

low

Comfortable wind



level 3-4

medium

Natural wind



level 5-6

high

Cooling wind



Figure 5: Adjustable Fan Speeds.

5.3 Light Control

The integrated LED light is dimmable from 0% to 100% and offers three color temperature settings: 3000K (warm yellow), 4000K (bright daylight), and 5000K (cool white). This allows you to create the desired atmosphere for any activity.



Figure 6: Dimmable LED Light with 3 Color Temperatures.

5.4 Reversible Fan Function

The fan features a reversible DC motor, allowing you to change the direction of the blades. In summer, the fan rotates counter-clockwise to create a cooling downdraft. In winter, it rotates clockwise to circulate warm air trapped near the ceiling, helping to reduce heat loss.

3 REVERSIBLE FAN BLADES



Figure 7: Reversible Fan Blades for Year-Round Comfort.

5.5 Timer Function

Utilize the timer function to set the fan to automatically turn off after a specified period, promoting energy saving and convenience.

5.6 Quiet Operation

The advanced DC motor ensures quiet operation, with noise levels less than 30dB at lower speeds, making it ideal for bedrooms and quiet environments.

35DB RUNS IN MUTE MODE

Super Quiet - soft and even wind allows you to enjoy a good sleep.



Quiet
35dB



Timers
1/2/4/8H



Sleep
Mode

Quiet 35dB



Figure 8: Quiet Operation at 35dB.

6. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

- **Cleaning:** To clean the fan, wipe the blades and motor housing with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure power is off before cleaning.
- **Blade Balance:** If the fan wobbles, check that all blade screws are tightened. Minor wobbling can often be corrected by ensuring blades are clean and free of debris.
- **Light Source:** The LED light source is integrated and designed for long life. If replacement is needed, contact customer support.

7. TROUBLESHOOTING

If you encounter issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; Loose wire connections; Remote control battery low.	Check circuit breaker; Verify all wire connections are secure; Replace remote control battery.
Light does not work	Loose wire connection to light kit; Light kit malfunction.	Check light kit wiring; Contact customer support if light kit is faulty.
Fan wobbles excessively	Loose blade screws; Unbalanced blades; Loose mounting bracket.	Tighten all blade screws; Ensure blades are clean and free of debris; Verify mounting bracket is secure.
Remote control not working	Battery low or dead; Remote not paired.	Replace battery; Refer to pairing instructions in the full manual.

8. SPECIFICATIONS

Feature	Specification
Brand	NOPAARD
Model Name	YJ809
Size	70 Inch
Product Dimensions	70"L x 70"W x 14.8"H
Material	Wood, Alloy Steel
Power Source	DC
Wattage	66 watts
Control Method	App, Remote, Voice
Light Source Type	LED
Brightness	2000 Lumen



Figure 10: Fan installed in a covered outdoor setting.

9. WARRANTY AND SUPPORT

NOPAARD provides a **2-year manufacturer's quality assurance** for this ceiling fan, with a specific **10-year warranty for the DC motor**. This warranty covers defects in materials and workmanship under normal use.

For technical assistance, troubleshooting not covered in this manual, or warranty claims, please contact NOPAARD customer support through the retailer's platform or the official NOPAARD website. Please have your model number (YJ809) and purchase information ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DQL2X447>

More documents and user manuals: <https://manuals.plus/>