

[manuals.plus](#) /› [Homary](#) /› [Homary 71" Electric Fireplace TV Stand \(Model GY-44568931\) Instruction Manual](#)

Homary GY-44568931

Homary 71" Electric Fireplace TV Stand

Model: GY-44568931

1. INTRODUCTION

Thank you for choosing the Homary 71" Electric Fireplace TV Stand. This media console is designed to accommodate TVs up to 75+ inches, featuring a 57.1" electric fireplace insert with remote control and touch panel operation. Crafted from engineered wood with a marble veneer finish, it offers both elegant design and practical functionality, including heating capabilities and ample storage. This manual provides essential information for safe assembly, operation, and maintenance of your new TV stand.



Figure 1: Homary 71" Electric Fireplace TV Stand with realistic flames.

2. SAFETY INFORMATION

- Read all instructions before using this appliance.
- Do not operate any fireplace with a damaged cord or plug, or if the heater has malfunctioned or been dropped/damaged in any manner.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater.
- Always unplug the fireplace when not in use.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- Always use properly grounded, fused, and polarized outlets.
- Ensure the TV stand is placed on a stable, level surface.
- Keep children and pets away from the fireplace and heating vents.

3. PACKAGE CONTENTS

Your Homary Electric Fireplace TV Stand will be delivered in two cartons. Please ensure all parts are present before beginning assembly. Refer to the parts list image below for identification.



Figure 2: Overview of all parts included in the package.

4. ASSEMBLY INSTRUCTIONS

Follow these step-by-step instructions carefully. All screws and parts are labeled for easy identification. It is recommended to have two people for assembly.

Step 1: Prepare the Base Panels

Attach the LED strip to the designated top plate (Part 8) and secure the LED power cord using the provided clips and screws.



Step 2: Assemble Side Panels

Connect the side panels (Part 2 and 8) using screws (A) and wooden dowels (E) as shown. Ensure the LED cable passes through the designated hole.



Step 3: Attach the Top Panel

Secure the top panel (Part 4) to the assembled side panels using screws (A) and wooden dowels (D).



Step 4: Complete the Side Structure

Repeat steps 1-3 for the other side of the TV stand, ensuring symmetry and proper alignment.



Step 5: Connect the Main Body

Connect the two side structures to the main central panel (Part 14) using screws (A) and wooden dowels (D).



Step 6: Install Support Legs

Attach the support legs (Part 15 and 17) to the bottom of the main central panel using screws (J) and wooden dowels (D).



Step 7: Attach Back Panels

Secure the back panels (Part 10) to the rear of the side structures using screws (F).



Step 8: Install the Top Shelf

Place the top shelf (Part 1) onto the assembled structure and secure it with screws (A).



Step 9: Connect LED Wires

Connect the LED wires from the side panels to the main power source, ensuring all connections are secure.



Step 10: Insert Fireplace Unit

Carefully slide the electric fireplace unit into the central opening of the TV stand. Secure it with screws (S).



Step 11: Place Decorative Crystals

Open the bag of decorative crystals and carefully place them along the bottom of the fireplace insert.



Step 12: Attach Fireplace Front Panel

Secure the fireplace front panel to the unit using screws (S).



Step 13: Install Cabinet Doors

Attach the hinges (N) to the cabinet doors (Part 11) and then secure the doors to the side cabinets using screws (G).



Step 14: Adjust Door Alignment

Adjust the hinges to ensure proper door alignment (left/right and front/back) for a seamless look.



Step 15: Final Connections

Connect the main power cord of the fireplace to a suitable electrical outlet. Ensure all cables are neatly managed through the cable management holes.



Assembly Video

Your browser does not support the video tag.

Video 1: Detailed assembly instructions for the TV stand with fireplace.

5. OPERATING INSTRUCTIONS

Your electric fireplace TV stand can be operated using the included remote control or the touch panel located on the fireplace unit.

5.1. Remote & Touch Control

The remote control and touch panel allow you to adjust various settings of the electric fireplace.

Remote & Touch Control

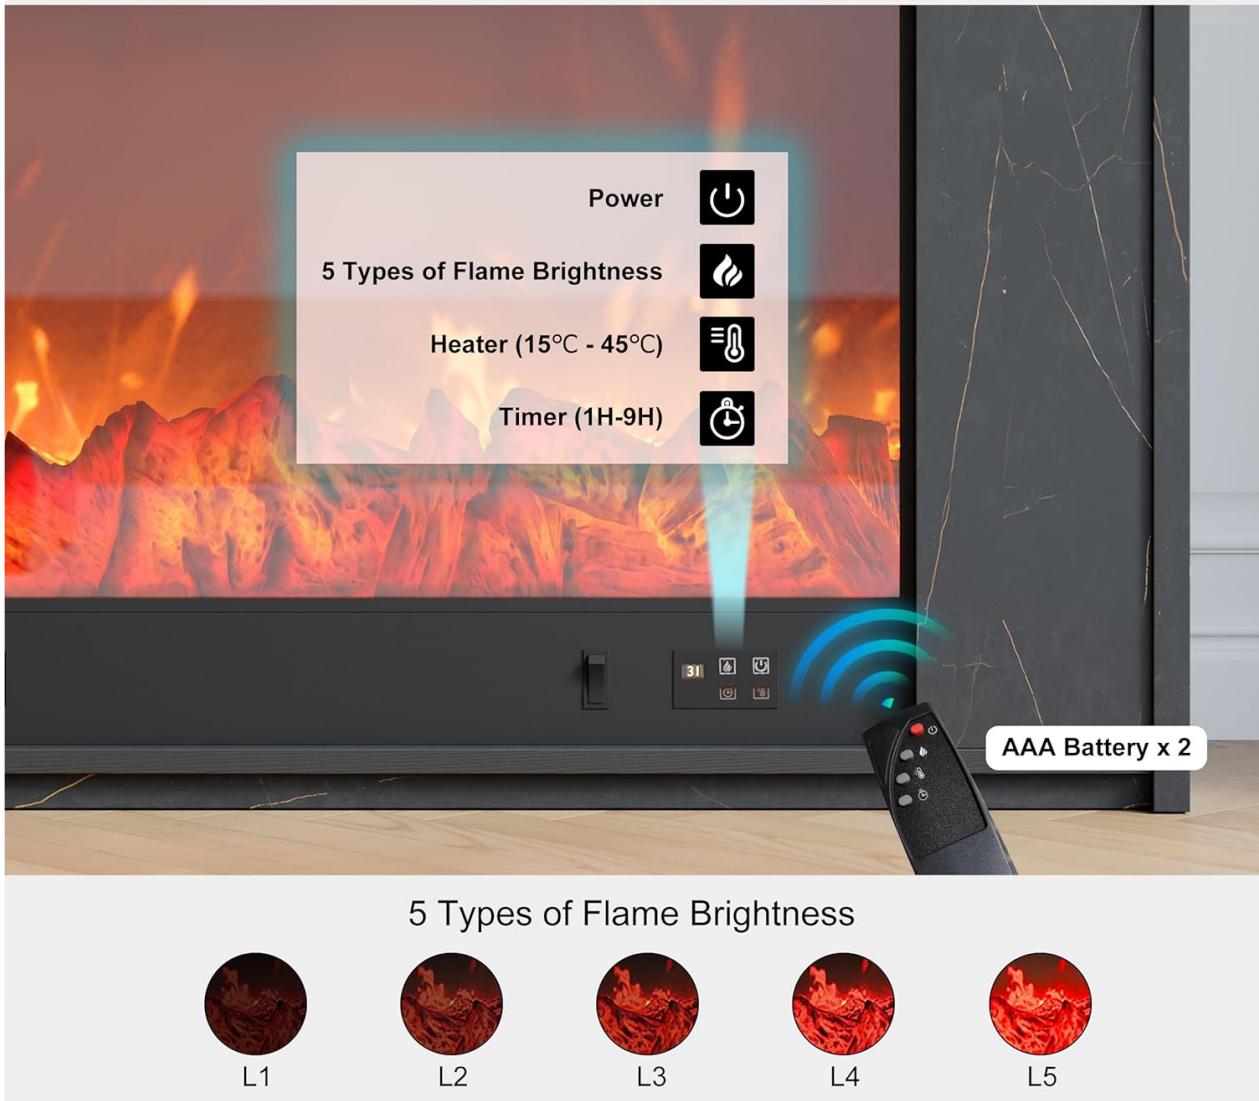


Figure 3: Remote control and touch panel interface.

- **Power:** Turn the fireplace unit ON or OFF.
- **Flame Brightness:** Adjust the intensity of the flame effect. There are 5 types of flame brightness settings.
- **Heater:** Activate the heating function. The heater can warm areas up to 400 square feet.
- **Temperature:** Adjust the desired room temperature. The temperature can be set between 15°C - 45°C (62°F - 82°F).
- **Timer:** Set an automatic shut-off timer for the fireplace, ranging from 1 to 9 hours.

5.2. Flame Effects

The fireplace features realistic flame effects that can be customized. You can enjoy the flame effect independently without activating the heating function.



Figure 4: Remote control with flame brightness options.

5.3. Heating Function

The electric fireplace provides supplemental heating for rooms up to 400 square feet. The heat is emitted from the vent located above the flame display.



Figure 5: Heat output from the fireplace vent.

6. MAINTENANCE

- **Cleaning:** Always unplug the appliance before cleaning. Use a soft, damp cloth to wipe surfaces. Do not use abrasive cleaners or solvents.
- **Dusting:** Regularly dust the TV stand and fireplace unit to prevent dust buildup, especially around air vents.
- **Cord Care:** Periodically inspect the power cord for any signs of damage. If damaged, discontinue use and contact customer service.

7. TROUBLESHOOTING

- **No Power:** Ensure the power cord is securely plugged into a grounded outlet. Check your household circuit breaker.
- **No Heat:** Verify the heater function is activated and the temperature setting is above the current room temperature. Ensure air vents are not obstructed.
- **Remote Control Not Working:** Check the batteries in the remote control and replace if necessary. Ensure there are no obstructions between the remote and the fireplace unit.
- **Flame Effect Not Working:** Ensure the unit is powered on. If the flame effect is still not visible, contact customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	Homary
Model Name	Fireplace TV Stand (GY-44568931)
Product Dimensions	12.6"D x 70.8"W x 23.6"H
Fireplace Size	57.1" Electric Fireplace
Material	Engineered Wood (FSC-Certified)
Finish Type	Painted (Marble Veneer)
Color	Black
Power Source	Corded Electric
Heating Coverage	Up to 400 sq ft
Temperature Range	15°C - 45°C (62°F - 82°F)
Timer Settings	1H-9H
Item Weight	140 Pounds

Max TV Size

Up to 75+ Inch



Figure 6: Product dimensions.



Figure 7: TV size compatibility.

9. WARRANTY AND CUSTOMER SUPPORT

All Homary products come with comprehensive product support. For any inquiries or assistance, please do not hesitate to reach out to our customer service team. We aim to respond within 12 hours.

- **Warranty Type:** Limited
- **Contact:** For support, please refer to the contact information provided with your purchase or visit the official Homary website.