



[Manuals.plus](#) /

> [Bestier](#) /

> Bestier 80 Inch TV Stand (Model L101820C) User Manual

Bestier L101820C


Bestier 80 Inch TV Stand (Model L101820C) User Manual

Brand: Bestier | Model: L101820C

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your Bestier 80 Inch TV Stand. Designed for TVs up to 86 inches, this modern entertainment center features LED lighting, fluted storage cabinets, and adjustable glass shelves to enhance your living space.

Product Size

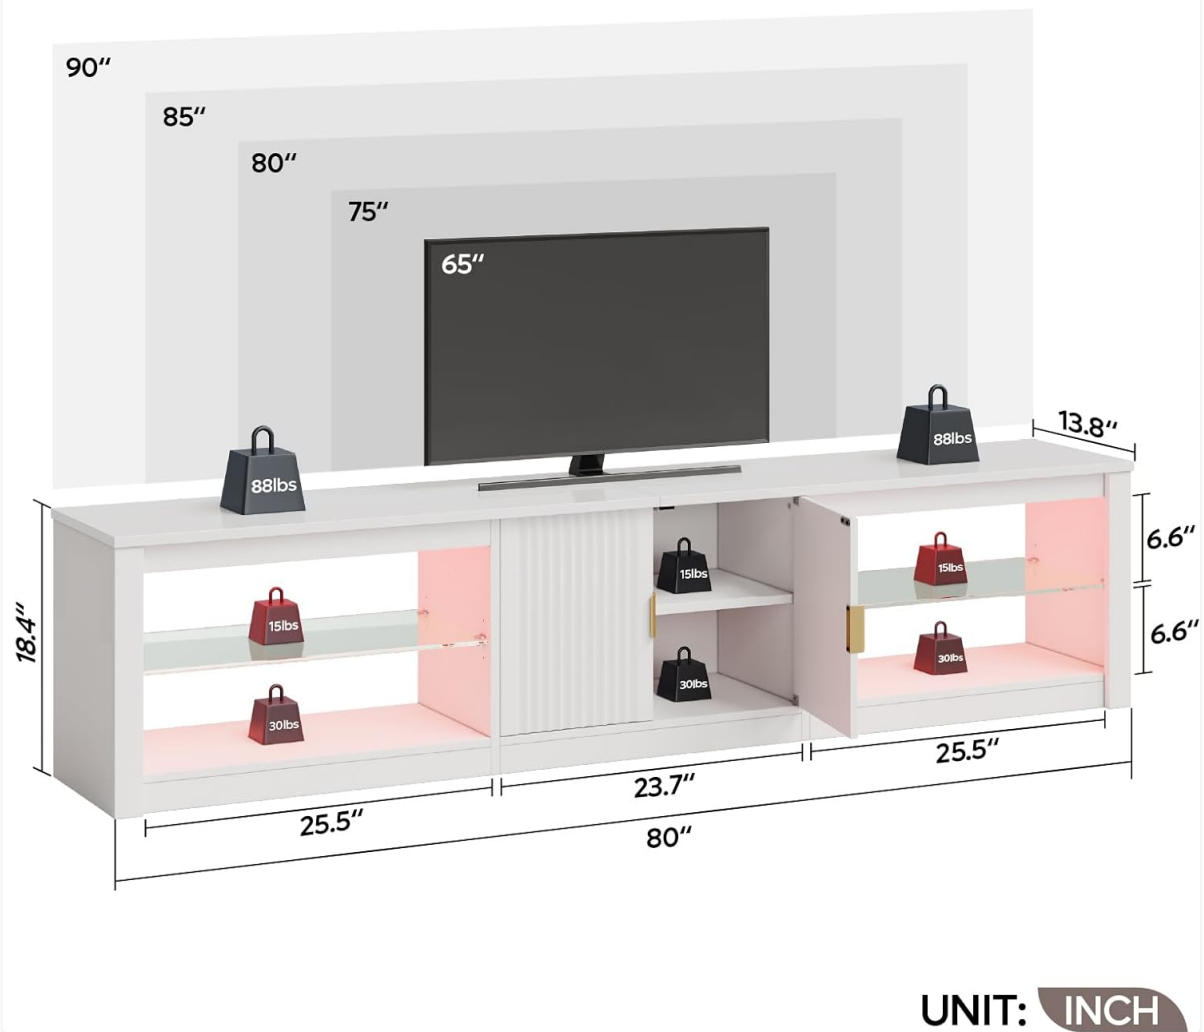

The Bestier 80 Inch TV Stand, showcasing its design and functionality.

2. IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before assembly and use. Failure to follow these instructions may result in injury or product damage.

- Do not exceed the maximum weight capacity of **266 pounds** for the TV stand.
- Use the included **anti-tip kit** for stability and safety. Secure the TV stand to a wall to prevent accidental tipping, especially in households with children or pets.
- Always follow the assembly instructions carefully to prevent injuries.
- Ensure all connections for the LED lighting are secure and properly installed to avoid electrical hazards.
- Keep small parts and packaging materials away from children.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all parts and hardware are present. Refer to the included assembly diagram for a complete list of components. If any parts are missing or damaged, please contact customer service.



An illustrative diagram of the TV stand's components and hardware for assembly.

Key Components:

- Top Panel (x1)
- Bottom Panel (x1)
- Side Panels (x2)
- Middle Support Panels (x2)
- Back Panels (x2)
- Fluted Cabinet Doors (x2)
- Adjustable Glass Shelves (x2)
- LED Strip Lights (x1 set)

Hardware:

- Cam Locks and Pins
- Wood Dowels
- Screws (various types)
- Door Hinges
- Door Handles
- Anti-tip Kit
- LED Remote Control

4. SETUP AND ASSEMBLY

Assembly typically requires two adults and basic tools (screwdriver, hammer). Follow the step-by-step instructions provided in the included manual and the assembly video below.

Assembly Steps Overview:

1. **Prepare Panels:** Attach cam lock pins and wood dowels to the main panels (top, bottom, sides, and middle supports).
2. **Construct Base:** Connect the bottom panel to the side and middle support panels using cam locks

and screws.

3. **Install Back Panels:** Secure the back panels to the assembled structure. Ensure cable management holes are correctly oriented.
4. **Attach Top Panel:** Place and secure the top panel to the assembled frame.
5. **Install Glass Shelves:** Insert the adjustable glass shelf supports into the desired height positions and place the glass shelves.
6. **Mount LED Lights:** Adhere the LED strip lights to the designated areas, typically under the top panel or along the shelves. Connect the wiring.
7. **Attach Cabinet Doors:** Install hinges onto the fluted cabinet doors and attach them to the central cabinet section. Ensure smooth operation.
8. **Install Anti-Tip Kit:** Secure the anti-tip kit to the back of the TV stand and to a wall stud using the provided hardware.

Official Assembly Video:

Your browser does not support the video tag.

Detailed video guide on how to install the Bestier 80 Inch TV Stand.

Product Features Visualized:



Key features of the TV stand: high-gloss finish, adjustable glass shelves, enclosed storage, and cable management.

5. OPERATING INSTRUCTIONS

LED Lighting System:

Your Bestier TV Stand is equipped with remote-controlled LED lights offering 7 main colors and 22 dynamic modes. Use the included remote control to:

- Turn the lights ON/OFF.
- Select desired colors (Red, Green, Blue, Yellow, Cyan, Purple, White).
- Choose from various dynamic modes (e.g., flash, strobe, fade, smooth).
- Adjust brightness and speed of dynamic modes.



The LED remote control allows customization of 7 colors and 22 dynamic lighting modes.

Adjustable Shelves:

The two open glass shelves on both sides of the stand can be adjusted to 3 different heights. To adjust, carefully remove the glass shelf, reposition the shelf supports to the desired height, and then reinsert the

glass shelf.

Fluted Storage Cabinet:

The central fluted cabinet provides enclosed storage for items you wish to keep out of sight. The doors slide smoothly for easy access.

Cable Management:

Integrated cable management holes in the back panels help keep wires organized and out of view, contributing to a tidy entertainment setup.

Your browser does not support the video tag.

Product overview video demonstrating the features and aesthetic of the Bestier 80 Inch TV Stand.

6. MAINTENANCE AND CARE

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, especially on the high-gloss finish, as they may cause damage.
- **Dusting:** Regularly dust the unit to prevent buildup.
- **Spills:** Clean spills immediately to prevent staining or damage to the engineered wood.
- **LED Lights:** If LED lights stop working, check connections and ensure the remote control battery is functional.
- **Stability:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if necessary.

7. TROUBLESHOOTING

Common Issues and Solutions:

Issue: TV stand feels wobbly after assembly.

Solution: Ensure all cam locks and screws are fully tightened. Verify that the anti-tip kit is securely installed to a wall stud. The floor surface should be level.

Issue: LED lights are not working.

Solution: Check all power connections to the LED strip and the power adapter. Ensure the remote control battery is not depleted. Point the remote directly at the LED receiver.

Issue: Assembly is difficult or holes do not align.

Solution: Double-check the instruction manual and assembly video for correct orientation of parts. Ensure you are using the correct hardware for each step. If pre-drilled holes seem shallow, apply firm, even pressure when inserting screws, or contact customer service for assistance.

Issue: Doors do not close properly.

Solution: Check the hinge alignment and adjustment. Ensure all screws on the hinges are tightened. The magnetic catches should also be properly aligned.

8. SPECIFICATIONS

Feature	Detail
Brand	Bestier
Model Number	L101820C
Dimensions (D x W x H)	13.78" x 80" x 18.5"
Material	Engineered Wood (P2 Particle Board), Glass
Color	White Glossy
Weight Capacity (Maximum)	266 Pounds
Number of Shelves	2 (Adjustable Glass)
Number of Doors	1 (Fluted Storage Cabinet)
Features	Adjustable Shelf, Cable Management, LED Lights, Scratch Resistant
Assembly Required	Yes

9. WARRANTY AND CUSTOMER SUPPORT

Bestier is committed to providing quality products and excellent customer service. For any questions, concerns, or assistance with your TV stand, please contact our dedicated US-based service team. All inquiries will be replied to within 24 hours.

Please refer to your purchase documentation for specific warranty details. Keep your proof of purchase for any warranty claims.

Contact Information:

- Email: support@bestier.com (Example, actual email not provided)
- Website: [Bestier Official Store on Amazon](#)