

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Bestier](#) /
- › [Bestier 80-Inch LED TV Stand \(Model L101820C\) Instruction Manual](#)

## Bestier L101820C

# Bestier 80-Inch LED TV Stand Instruction Manual

Model: L101820C

## INTRODUCTION

Thank you for choosing the Bestier 80-Inch LED TV Stand. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure safe and optimal use of your new entertainment center. Please read this manual thoroughly before beginning assembly or operation.

## SAFETY INFORMATION


### Important Safety Warnings:

- Do not exceed the maximum weight capacity of **266 pounds (120 kg)** for the tabletop.
- Use the included anti-tip kit to secure the TV stand to the wall for stability and safety, especially in households with children or pets.
- Always follow the assembly instructions carefully to prevent injury and ensure proper construction.
- Keep small parts and packaging materials away from children to prevent choking hazards.
- Ensure all connections for LED lighting are secure and correctly installed to avoid electrical hazards.
- Place the TV stand on a flat, stable surface.

## PRODUCT OVERVIEW & DIMENSIONS

The Bestier 80-Inch LED TV Stand is designed to accommodate TVs up to 90 inches, offering ample storage and integrated LED lighting. It features a high-gloss finish, fluted storage cabinet, adjustable glass shelves, and cable management holes.

# Product Size

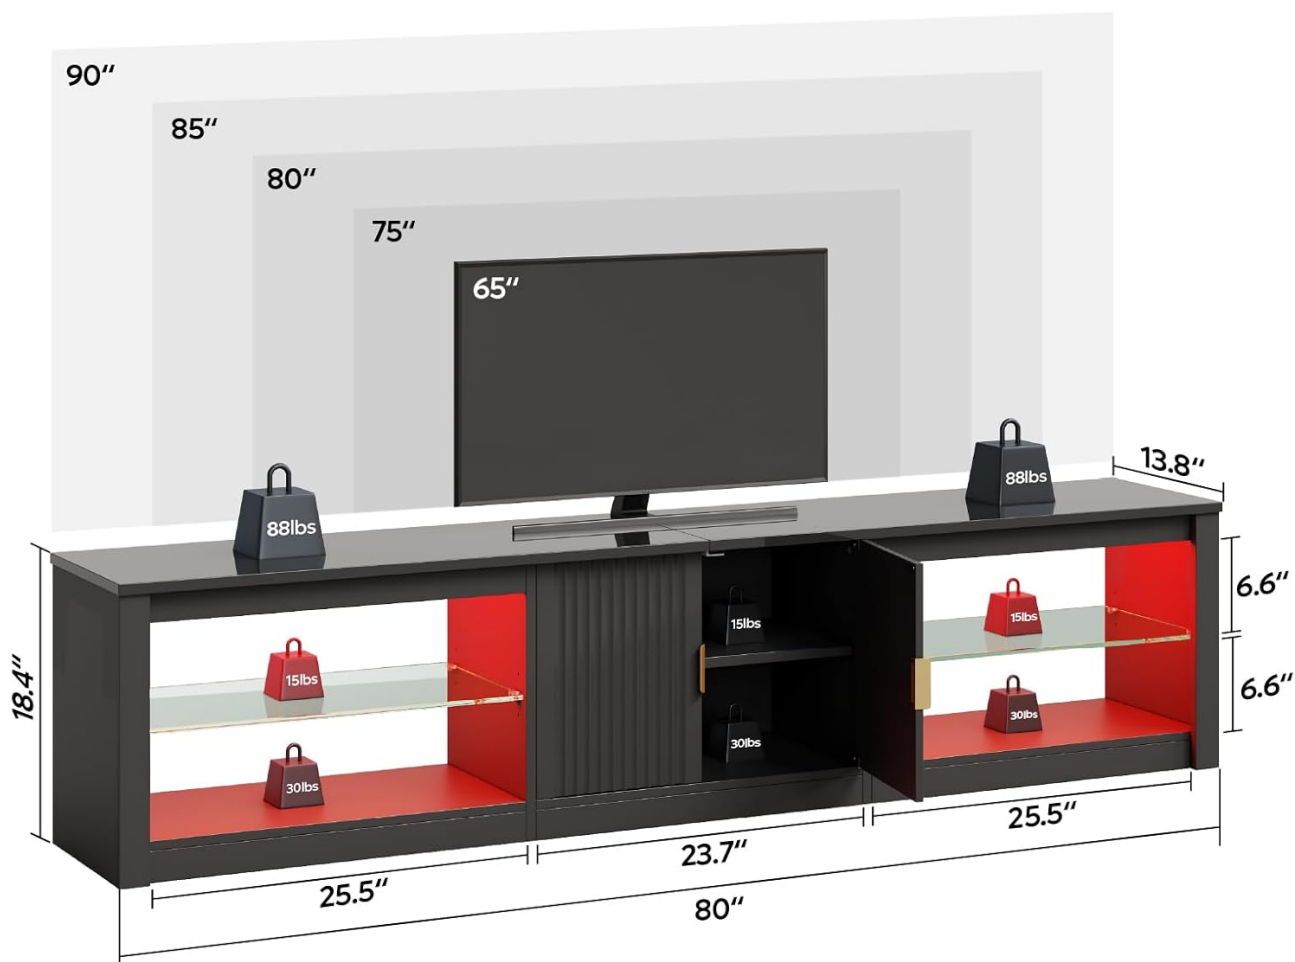

UNIT: INCH

**Figure 1: Product Dimensions.** This diagram illustrates the overall dimensions of the TV stand and indicates the range of TV sizes it can accommodate, from 65 inches up to 90 inches. The stand measures 80 inches in width, 13.8 inches in depth, and 18.4 inches in height.



**Figure 2: Tabletop Capacity and Finish.** This image emphasizes the robust tabletop capacity of 176 lbs (80 kg) and showcases the

sleek high-gloss finish of the TV stand.

## PACKAGE CONTENTS

---

Before assembly, verify that all parts and hardware are present and undamaged. Refer to the included illustrated instruction manual for a complete list of components. If any parts are missing or damaged, please contact Bestier customer service.

## ASSEMBLY INSTRUCTIONS

---

Assembly typically requires two people and a screwdriver. Follow the steps below and refer to the detailed assembly video for visual guidance.

### Assembly Video Guide



**Video 1: How to Install Bestier 80 inch TV Stand.** This official Bestier video provides a step-by-step visual guide for assembling your TV stand, demonstrating each connection and component placement.

### General Assembly Steps:

- 1. Prepare Components:** Unpack all parts and hardware. Lay them out on a clean, soft surface to prevent scratches. Identify each part using the labels in the instruction manual.
- 2. Assemble Base Sections:** Connect the side panels and bottom boards using the provided cam locks and dowels. Ensure all connections are tight and secure.
- 3. Install Back Panels:** Attach the back panels to the assembled sections. These panels often include pre-drilled holes for cable management.
- 4. Attach Top Panel:** Carefully place and secure the top panel to the assembled base using cam locks and screws.
- 5. Install Glass Shelves:** Insert the adjustable glass shelves into the designated slots. Ensure they are level and securely seated.
- 6. Mount Doors:** Attach the fluted cabinet doors using the provided hinges. Adjust as necessary for proper alignment.
- 7. Install LED Lights:** Secure the LED strips to the underside of the top panel and within the open compartments. Connect the wiring as per the diagram.
- 8. Apply Anti-Tip Kit:** Securely attach the anti-tip kit to the back of the TV stand and to a wall stud using the provided hardware. This is a critical safety step.

## OPERATING INSTRUCTIONS

---

### LED Lighting System:

Your Bestier TV stand includes a remote-controlled LED lighting system with 7 main colors and 22 dynamic modes.

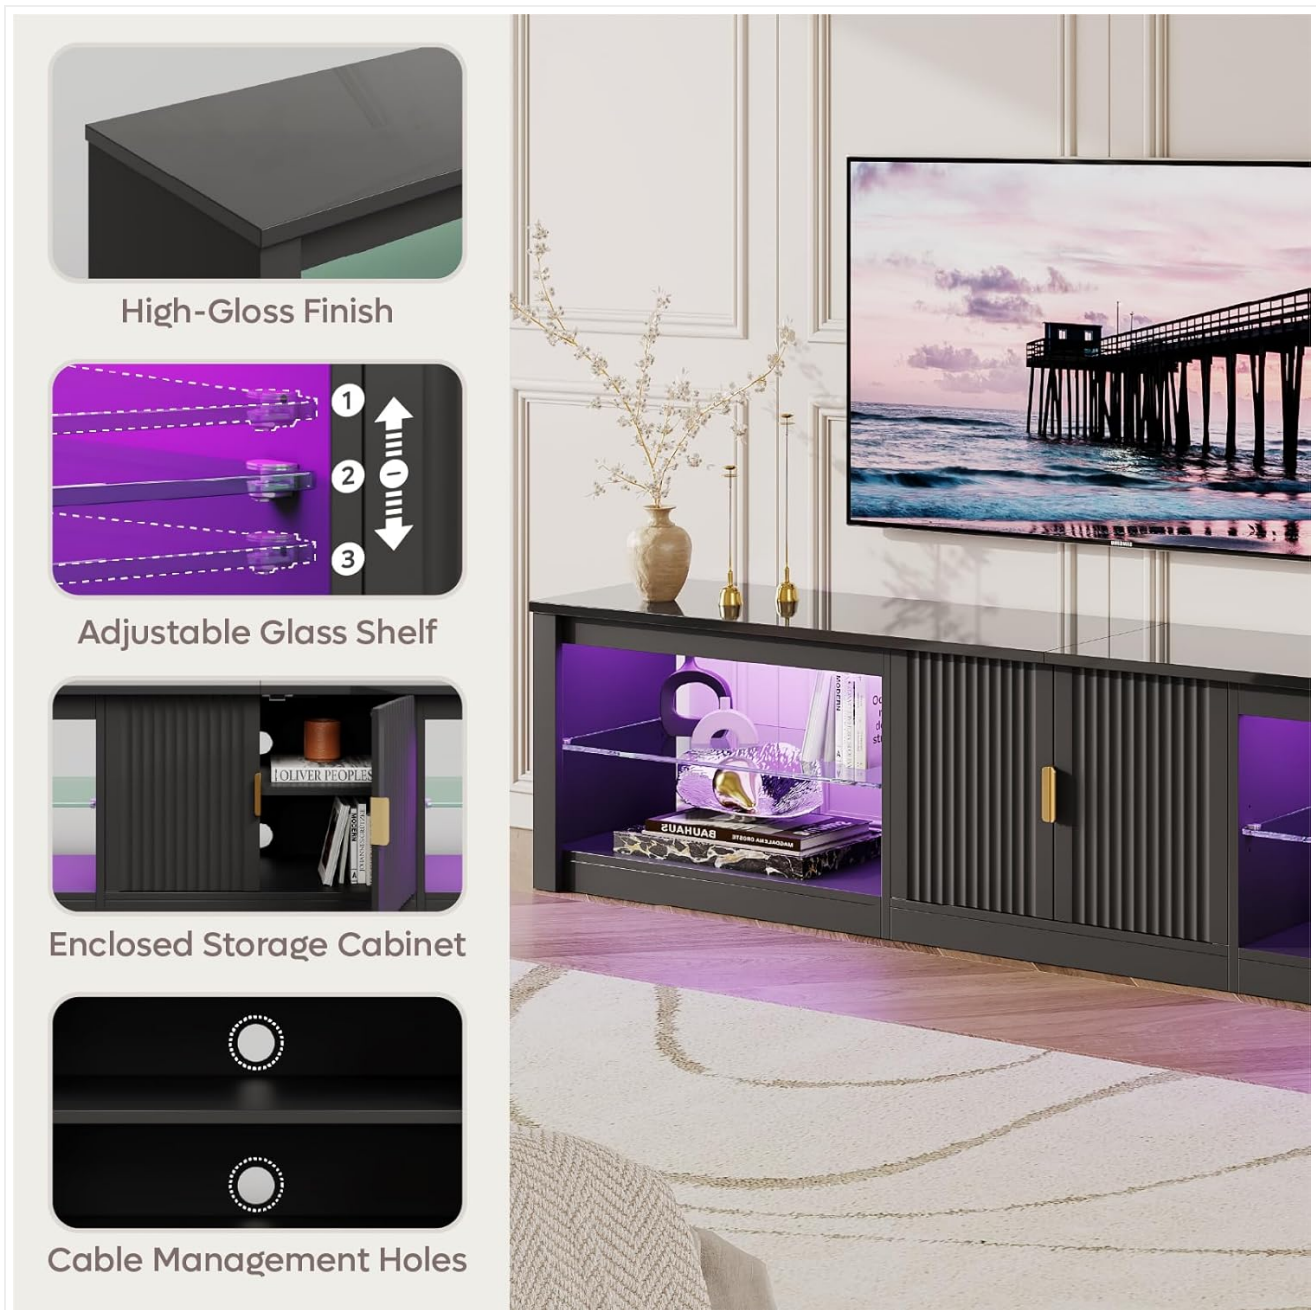


**Figure 3: LED Lighting Features.** This image displays the remote control used to operate the LED lights, illustrating the 7 main colors and 22 dynamic modes available to customize the ambiance of your entertainment area.

- **Power On/Off:** Press the power button on the remote control to turn the LED lights on or off.
- **Color Selection:** Use the color buttons on the remote to select from 7 static colors.
- **Dynamic Modes:** Cycle through 22 dynamic lighting modes using the mode selection buttons.
- **Brightness/Speed Adjustment:** Adjust the brightness of static colors or the speed of dynamic modes using the designated buttons.

### Adjustable Shelves:

The TV stand features 2 open glass shelves on both sides that can be adjusted to 3 different heights.



**Figure 4: Key Features.** This image details the high-gloss finish, the mechanism for adjusting the glass shelves, the enclosed storage cabinet, and the convenient cable management holes.

- To adjust a shelf, carefully lift it from its current position.
- Relocate the shelf supports to the desired height.
- Place the glass shelf back onto the supports, ensuring it is stable.

### **Cable Management:**

Utilize the pre-drilled cable holes in the back panels to organize and conceal wires from your electronic devices, maintaining a tidy appearance.

### **MAINTENANCE**

- **Cleaning:** Wipe the high-gloss surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish. For glass shelves, use a standard glass cleaner.
- **Dusting:** Regularly dust all surfaces with a dry, soft cloth.
- **Hardware Check:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if necessary.
- **LED Care:** If LED lights malfunction, check connections. Do not attempt to repair the LED strips yourself; contact

customer service.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
TV stand is wobbly/unstable.	Loose connections; uneven floor; anti-tip kit not installed.	Ensure all screws and cam locks are tightened. Place shims under the feet if the floor is uneven. Install the anti-tip kit as instructed.
LED lights not working.	Loose power connection; remote control battery dead; LED strip damaged.	Check all power connections. Replace remote control battery. Contact customer service if the LED strip is damaged.
Doors do not close properly.	Hinges misaligned; obstruction.	Adjust the hinges for proper alignment. Remove any obstructions.

## SPECIFICATIONS

- **Brand:** Bestier
- **Model Number:** L101820C
- **Color:** Black Glossy
- **Material:** Engineered Wood (P2 Particle Board), Metal (handles)
- **Product Dimensions:** 13.78"D x 80"W x 18.5"H (35cm D x 203cm W x 47cm H)
- **Item Weight:** 67.9 Pounds (30.8 kg)
- **Maximum Weight Capacity (Tabletop):** 266 Pounds (120 kg)
- **Number of Shelves:** 2 (Adjustable Glass Shelves)
- **Number of Doors:** 1 (Fluted Storage Cabinet)
- **Features:** Adjustable Shelf, Cable Management, LED Lights (7 colors, 22 dynamic modes), Scratch Resistant
- **Assembly Required:** Yes

## WARRANTY AND SUPPORT

Bestier is committed to providing quality products and customer satisfaction. If you encounter any issues or have questions regarding your Bestier 80-Inch LED TV Stand, please contact our professional customer service team. Any email will be replied to within 24 hours.

For support, please visit the [Bestier Store on Amazon](#) or refer to your purchase documentation for specific warranty details.