

[Manuals.plus](#) /

› [ZJchao](#) /

› ZJchao 200W 1L Ceramic Slow Cooker Instruction Manual

ZJchao ZJchao968w41i5pd-11

ZJchao 200W 1L Ceramic Slow Cooker Instruction Manual

Model: ZJchao968w41i5pd-11

1. INTRODUCTION

Thank you for purchasing the ZJchao 200W 1L Ceramic Slow Cooker. This appliance is designed for convenient and efficient stewing, featuring a ceramic inner pot for healthy cooking and a multi-function timer. Please read this manual thoroughly before use to ensure proper operation and maintenance.



Figure 1: ZJchao 1L Ceramic Slow Cooker

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the cord, plugs, or heating unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.

- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- The ceramic pot is fragile; handle with care. Avoid sudden temperature changes.
- Ensure the water level in the main unit does not exceed the maximum fill line to prevent overflow during boiling.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your ZJchao Slow Cooker:

1. **Main Host Unit:** Contains the heating element and control panel.
2. **Ceramic Inner Pot:** For holding food to be cooked.
3. **Ceramic Pot Lid:** Covers the ceramic inner pot.
4. **Transparent Outer Lid:** Covers the main host unit and ceramic pot.
5. **Control Panel:** For setting functions and time.



Figure 2: Main components of the slow cooker



Figure 3: Control Panel

4. SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials and inspect the appliance for any damage.
2. **Cleaning:** Before first use, wash the ceramic inner pot and its lid with warm soapy water. Rinse thoroughly and dry completely. Wipe the main host unit with a damp cloth. Do not immerse the main host unit in water.
3. **Placement:** Place the slow cooker on a stable, flat, heat-resistant surface, away from walls or other appliances to ensure proper ventilation.
4. **Assembly:**
 - Pour water into the main host unit, ensuring it does not exceed the maximum fill line. This water is for the water bath heating method.
 - Place the ceramic inner pot into the main host unit.
 - Place the ceramic pot lid onto the ceramic inner pot.
 - Cover the entire unit with the transparent outer lid.
5. **Power Connection:** Plug the power cord into a standard 110V US electrical outlet. The display will illuminate.

5. OPERATING INSTRUCTIONS

The ZJchao Slow Cooker utilizes a water bath heating method, which ensures even heating and preserves the nutritional value and original taste of your food.

5.1. Basic Operation

1. Prepare your ingredients and place them into the ceramic inner pot.
2. Add the appropriate amount of water to the main host unit (for water bath heating).
3. Place the ceramic inner pot with ingredients into the main host unit, cover with both lids.
4. Plug in the appliance.
5. Press the 'Function' button to select your desired cooking mode (e.g., Stew, Bird's Nest, Herbal Soup, Dessert, Baby Porridge). The selected function will be indicated on the display.
6. Use the '+' and '-' buttons to adjust the cooking time if necessary. The maximum reservation time is 24 hours.
7. The cooker will begin the cooking process after a few seconds.
8. Once cooking is complete, the appliance may switch to a 'Keep Warm' mode or turn off automatically, depending on the selected function.
9. To cancel a function, press the 'Cancel' button.

5.2. Timer Function (Appointment/Reservation)

The timer function allows you to set a delayed start for your cooking:

1. After selecting a cooking function, press the 'Appointment' button.
2. Use the '+' and '-' buttons to set the desired delay time (up to 24 hours). This is the time until cooking begins.
3. The display will show the countdown for the delay. Once the delay time is over, the cooker will automatically start the selected cooking program.

Natural white porcelain inner liner
It's more reassuring to meet infant consumption standards



Flavors don't
affect each other



Non stick pans
are easy to
clean



Thickening and
durability



Figure 4: Example of a prepared dish (Bird's Nest Soup)

Intermittent soft stew
Extract bird's nest protein nutrition



Figure 5: Illustrating the extraction of bird's nest protein nutrition

6. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and hygiene of your slow cooker.

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Ceramic Inner Pot and Lids:** Wash the ceramic inner pot and both lids with warm, soapy water using a soft sponge or cloth. Rinse thoroughly and dry completely. These parts are generally dishwasher safe, but hand washing is recommended to prolong their life.
3. **Main Host Unit:** Wipe the exterior of the main host unit with a damp cloth. Do not immerse the main host unit in water or any other liquid. Ensure no water enters the electrical components.
4. **Heating Plate:** If there are any mineral deposits on the heating plate inside the main unit, you can remove them by wiping with a cloth dampened with vinegar or a descaling solution, then rinse with a damp cloth.
5. **Storage:** Store the clean and dry slow cooker in a cool, dry place.

7. TROUBLESHOOTING

If you encounter any issues with your slow cooker, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure the power cord is securely plugged into a working outlet. Check your home's circuit breaker.
Food is not cooking properly.	Insufficient water in the main unit; incorrect function/time setting; ceramic pot not seated correctly.	Check water level in the main unit. Verify the selected function and cooking time. Ensure the ceramic pot is properly placed.
Display shows an error code.	Specific internal error.	Unplug the appliance for 5 minutes, then plug it back in. If the error persists, contact customer support.
Water boiling over from the main unit.	Too much water added to the main unit.	Ensure water level does not exceed the maximum fill line. Reduce water if necessary.

8. SPECIFICATIONS

- **Model:** ZJchao968w41i5pd-11
- **Capacity:** 1 Liter
- **Power:** 200W
- **Voltage:** 110V (US Plug)
- **Max. Reservation Time:** 24 Hours
- **Product Dimensions:** 9.45 x 9.06 x 9.06 inches (240 x 230 x 230 mm)
- **Item Weight:** 3.72 pounds (1.69 kg)
- **Material:** Ceramic, ABS
- **Color:** Green

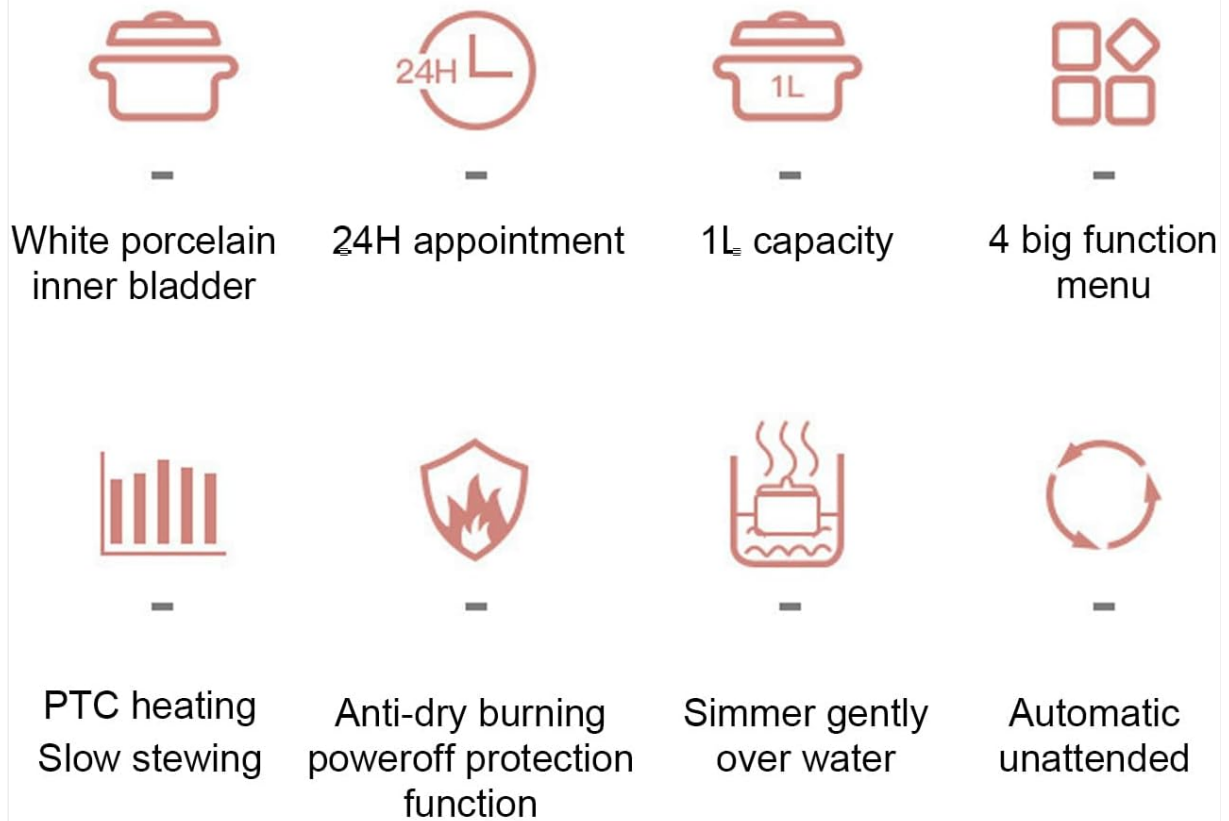


Figure 6: Key features overview

9. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For specific warranty details, please refer to the documentation included with your purchase or contact ZJchao customer support. If you have any questions, require technical assistance, or need to report a problem, please contact the retailer or manufacturer directly.