

## Lenyes S836

# Lenyes S836 Karaoke Boombox Speaker User Manual

Model: S836 | Brand: Lenyes

## INTRODUCTION

---

Thank you for choosing the Lenyes S836 300W Karaoke Boombox Speaker. This powerful and versatile audio system is designed to deliver high-quality sound for various occasions, from home entertainment to outdoor gatherings. Equipped with dual wireless UHF microphones, a long-lasting battery, and multiple connectivity options, the S836 provides an immersive audio experience. This manual will guide you through the setup, operation, and maintenance of your new speaker.



Image: The Lenyes S836 Karaoke Boombox Speaker, showcasing its sleek black design, integrated handle, and front-facing speaker grille with RGB lighting elements.

## WHAT'S IN THE BOX

---

Please check the contents of your package to ensure all items are present:

- 1 x Lenyes S836 Karaoke Boombox Speaker
- 2 x Wireless UHF Rechargeable Microphones
- 1 x Type-C Charging Cable
- 1 x Remote Control
- 1 x AUX-In Cable
- 1 x User Manual (this document)



Image: The Lenyes S836 speaker and its accessories, including the two wireless microphones, as typically packaged in the product box.

## PRODUCT FEATURES

- **Powerful 300W Sound Output:** Experience robust, room-filling audio with deep bass and clear vocals, suitable for various environments.
- **Dual Wireless UHF Microphones:** Two high-quality microphones provide stable and clear vocal transmission for karaoke or public speaking.
- **Massive 40,000mAh Battery:** Enjoy extended playtime of up to 15 hours on a single charge, ensuring long-lasting entertainment.

## Long battery life Enjoy music time

**40000** mAh battery, with a range of up to **30** hours and stable functions, no worries for outdoor entertainment



Image: The Lenyes S836 speaker highlighting its long battery life capability, indicating extended music playback without frequent recharging.

- **Seamless Connectivity:** Features Bluetooth 5.3 for fast and stable wireless connections, along with AUX and USB ports for wired input.
- **TWS Pairing:** Connect two S836 units wirelessly for a true stereo sound experience and enhanced audio coverage.
- **Dynamic RGB Lighting:** Integrated RGB lights add a vibrant visual element to your music, enhancing the party atmosphere.
- **Portable Design:** Equipped with a sturdy carry handle for easy transport, making it ideal for both indoor and outdoor use.
- **Convenient Controls:** Features a multi-key button panel and includes a remote control for easy management of settings and playback.

## Angled grip



## Enhanced diaphragm Extended RGB light strip



## Multi key button panel

**S836**



Image: Close-up views of the Lenyes S836, detailing its angled grip for portability, the extended RGB light strip for visual effects, and the multi-key button panel for comprehensive control.

## SETUP GUIDE

### 1. Initial Charging

Before first use, fully charge the speaker and microphones. The speaker's 40,000mAh battery requires approximately 15 hours for a full charge.

- Connect the provided Type-C charging cable to the speaker's charging port and to a suitable USB power adapter (not included).
- The charging indicator light will illuminate. It will change or turn off once charging is complete.
- Charge the wireless microphones using their respective charging ports and cables (if separate, or via the speaker's USB output if supported).

### 2. Microphone Setup

- Ensure microphones are charged.
- Turn on the microphones. They should automatically pair with the speaker when both are powered on and within range.
- Adjust microphone volume using the dedicated controls on the speaker or remote.

### 3. Connecting Audio Devices

#### Bluetooth Connection:

1. Power on the Lenyes S836 speaker. It will automatically enter Bluetooth pairing mode.
2. On your smartphone, tablet, or other Bluetooth device, enable Bluetooth and search for "Lenyes S836".
3. Select "Lenyes S836" from the list of available devices to pair. A confirmation sound will indicate successful pairing.

#### AUX-In Connection:

- Connect one end of the provided AUX-in cable to the speaker's AUX port.
- Connect the other end to the headphone jack or audio output of your external device (e.g., MP3 player, laptop).
- The speaker will automatically switch to AUX mode or you may need to select it using the mode button.

#### USB Playback:

- Insert a USB flash drive containing audio files (MP3, WAV, etc.) into the speaker's USB port.
- The speaker will automatically detect the USB drive and begin playing audio.

## OPERATING INSTRUCTIONS

---

### 1. Power On/Off

- Press and hold the **Power button** on the speaker's control panel to turn the unit on or off.

### 2. Volume Control

- Use the **Volume Up (+)** and **Volume Down (-)** buttons on the speaker or remote control to adjust the main speaker volume.
- Separate controls may be available for microphone volume.

### 3. Playback Controls

- Press the **Play/Pause button** to start or pause playback.
- Press the **Next Track (>>)** button to skip to the next song.
- Press the **Previous Track (<<)** button to go to the beginning of the current song or to the previous song.

### 4. Mode Selection

- Press the **Mode button** to cycle through available input modes: Bluetooth, AUX, USB.

### 5. Microphone Usage

- Ensure microphones are powered on and paired.

- Speak directly into the microphone for optimal sound pickup.
- Adjust microphone volume and echo effects (if available) using dedicated controls.

## 6. RGB Lighting Control

- The speaker features dynamic RGB lighting. Use the dedicated **Light button** (if present) or remote control to cycle through lighting modes or turn them off.

## 7. TWS (True Wireless Stereo) Pairing

To pair two Lenyes S836 speakers for a stereo experience:

1. Ensure both S836 speakers are powered on and not connected to any Bluetooth device.
2. On one speaker (this will be the primary unit), press and hold the **TWS button** (or a designated pairing button).
3. The speaker will search for another S836 unit. Once found, they will automatically pair, and you will hear a confirmation sound.
4. Now, connect your Bluetooth device to the primary S836 speaker. Audio will play in stereo through both units.

## 8. Remote Control Usage

The included remote control provides convenient access to various functions from a distance. Point the remote directly at the speaker's IR receiver for optimal performance.

- **Power:** Turn speaker on/off.
- **Mode:** Switch input modes.
- **Volume +/-:** Adjust speaker volume.
- **Play/Pause:** Control music playback.
- **Previous/Next:** Skip tracks.
- **EQ:** Cycle through equalizer presets (if available).
- **Mute:** Mute audio output.
- Other buttons may include number pad for direct track selection (on USB mode), microphone volume, and echo controls.

## MAINTENANCE

---

### 1. Cleaning

- Wipe the speaker's exterior with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, waxes, or solvents.
- Avoid getting moisture into any openings.

### 2. Battery Care

- To prolong battery life, avoid fully discharging the battery frequently.
- Charge the speaker regularly, even if not in use, to maintain battery health.
- Store the speaker in a cool, dry place when not in use for extended periods.

### 3. Storage

- Store the speaker in a dry environment, away from direct sunlight and extreme temperatures.
- If storing for a long time, charge the battery to about 50% before storage.

### TROUBLESHOOTING

| Problem                    | Possible Cause                                                       | Solution                                                                                                                               |
|----------------------------|----------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|
| Speaker does not power on. | Low battery; Power button not pressed correctly.                     | Charge the speaker fully; Press and hold the Power button for a few seconds.                                                           |
| No sound from speaker.     | Volume too low; Incorrect input mode; Device not connected properly. | Increase volume; Press Mode button to select correct input; Reconnect Bluetooth/AUX/USB device.                                        |
| Microphones not working.   | Microphones not charged; Not powered on; Out of range.               | Charge microphones; Turn on microphones; Ensure microphones are within operating range of the speaker.                                 |
| Bluetooth pairing failed.  | Speaker not in pairing mode; Device Bluetooth off; Interference.     | Ensure speaker is in Bluetooth mode; Turn Bluetooth on/off on your device; Move closer to speaker; Disconnect other Bluetooth devices. |
| TWS pairing failed.        | Speakers not in TWS pairing mode; Too far apart.                     | Ensure both speakers are in TWS pairing mode and not connected to other devices; Place speakers closer together.                       |

### SPECIFICATIONS

| Feature                 | Detail                  |
|-------------------------|-------------------------|
| Model                   | S836                    |
| Output Wattage          | 300 Watts               |
| Connectivity Technology | Bluetooth 5.3, AUX, USB |
| Battery Capacity        | 40000 mAh (Lithium Ion) |
| Battery Average Life    | Up to 15 Hours          |
| Charging Time           | Approx. 15 Hours        |

| Feature                    | Detail                                                                           |
|----------------------------|----------------------------------------------------------------------------------|
| Microphones                | 2 x Wireless UHF Rechargeable Microphones                                        |
| Special Features           | Bass Boost, Hi Res Audio, USB Port, EQ Mode, Shockproof, RGB Lights, TWS Pairing |
| Material                   | Silicone, Fabric, Acrylonitrile Butadiene Styrene (ABS)                          |
| Item Weight                | 5 kg (5000 Grams)                                                                |
| Product Dimensions (LxWxH) | 38 x 17.5 x 24.5 cm                                                              |
| Power Source               | Battery Powered                                                                  |
| Mounting Type              | Portable                                                                         |
| Manufacturer               | Shenzhen Xinzhijue Technology CO., LTD                                           |

## WARRANTY AND SUPPORT

### Warranty Information

The Lenyes S836 Karaoke Boombox Speaker comes with a **1-Year Limited Warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

Please retain your proof of purchase for warranty claims.

### Customer Support

For technical assistance, warranty claims, or general inquiries, please contact Lenyes customer support. Refer to the contact information provided on the product packaging or the official Lenyes website.

*Note: Specific contact details are not provided in this manual. Please refer to your product's packaging or the manufacturer's official website for the most up-to-date support information.*