

[manuals.plus](#) /

› [COSTWAY](#) /

› [COSTWAY 5-Drawer Dresser Instruction Manual \(Model VH33842DE\)](#)

COSTWAY VH33842DE

COSTWAY 5-Drawer Dresser Instruction Manual

Model: VH33842DE

1. INTRODUCTION

Thank you for choosing the COSTWAY 5-Drawer Dresser. This manual provides essential information for the safe assembly, operation, and maintenance of your new furniture. Please read it thoroughly before beginning assembly and keep it for future reference.



Image 1: The COSTWAY 5-Drawer Dresser, showcasing its rustic design and compact form factor suitable for various room settings.

2. SAFETY INFORMATION

To ensure safe use of this product, please observe the following precautions:

- Always assemble the dresser on a soft, clean surface to prevent scratches.
- Ensure all screws and fasteners are securely tightened before use.
- **Anti-Tip Kit:** It is crucial to install the included anti-tip kit to prevent the dresser from tipping over, especially in households with children or pets.
- Do not overload drawers. Distribute weight evenly.
- Keep small parts away from children during assembly.



Anti-Kipp-Kit

Verhindern Sie Sturzunfälle

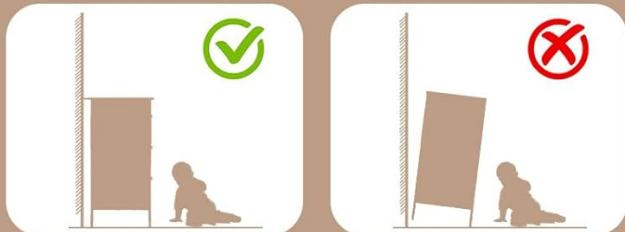


Image 2: Illustration demonstrating the correct method for installing the anti-tip kit to secure the dresser to a wall, preventing accidental tipping.

3. PACKAGE CONTENTS

Before assembly, verify that all parts listed below are present and undamaged. If any parts are missing or damaged, please contact customer service.

- 1 x Dresser Frame (Engineered Wood Components)
- 5 x Foldable Fabric Drawers
- 1 x Hardware Pack (Screws, Connectors, Drawer Knobs)
- 1 x Anti-Tip Kit
- 1 x Instruction Manual (This document)

4. SETUP AND ASSEMBLY INSTRUCTIONS

Follow these steps for assembling your COSTWAY 5-Drawer Dresser:

1. Unpack all components and lay them out on a clean, soft surface.
2. Assemble the main frame of the dresser according to the diagrams provided in the separate assembly guide (if applicable, or follow included diagrams). Ensure all wooden panels are correctly oriented.
3. Securely attach all frame components using the provided screws and tools. Do not overtighten.
4. **Drawer Assembly:** Unfold each fabric drawer. Insert the bottom panel and secure the side supports as shown in the diagram.



Image 3: Step-by-step visual guide for assembling the foldable fabric drawers, including unfolding and inserting the base.

5. Attach the drawer knobs to each fabric drawer.
6. Insert the assembled drawers into their respective slots in the dresser frame.
7. **Install Anti-Tip Kit:** Attach the anti-tip kit to the back of the dresser and secure it to a wall stud using appropriate hardware. This step is critical for safety.
8. Verify that the dresser is stable and all parts are securely fastened.

5. OPERATING INSTRUCTIONS (USAGE)

Your COSTWAY 5-Drawer Dresser is designed for organized storage in various rooms.

- **Drawer Use:** Gently pull the slim handles to open and close the fabric drawers. The drawers are suitable for storing clothing, linens, accessories, and other lightweight items.
- **Top Surface:** The spacious top surface can be used to display decorative items, lamps, or other personal belongings. Ensure items placed on top do not exceed the maximum load capacity.
- **Weight Distribution:** For optimal stability, distribute the weight of stored items evenly across all drawers. Avoid placing heavy items exclusively in the top drawers.



Image 4: The dresser with drawers partially open, illustrating its capacity for storing various household items such as socks, bedding, and personal accessories.

6. MAINTENANCE

Proper care will extend the life of your dresser:

- **Cleaning:** Wipe the wooden surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners. For fabric drawers, spot clean with a mild detergent and allow to air dry.

- **Inspection:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary.
- **Placement:** Avoid placing the dresser in direct sunlight or near heat sources to prevent material degradation.



Image 5: Detailed view highlighting the easy-to-clean surface, ergonomic slim handles, and robust support feet, all contributing to the dresser's durability and user-friendliness.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Dresser feels wobbly.	Screws are loose; uneven floor; anti-tip kit not installed.	Check and tighten all screws. Move to a level surface. Install the anti-tip kit.
Drawers do not slide smoothly.	Drawer not assembled correctly; overloaded drawer.	Ensure fabric drawers are fully unfolded and base is inserted correctly. Reduce weight in the drawer.
Missing parts.	Packaging error.	Contact COSTWAY customer service with your model number and a list of missing parts.

Problem	Possible Cause	Solution
---------	----------------	----------

8. SPECIFICATIONS

Feature	Detail
Model Number	VH33842DE
Brand	COSTWAY
Color	Grey / Brown
Material	Engineered wood, non-woven fabric, polyester
Overall Dimensions (L x W x H)	67.5 x 38.5 x 97 cm
Height from Floor	9 cm
Net Weight	18 kg
Maximum Load Capacity	61 kg
Number of Drawers	5

Abmessungen



Image 6: Dimensional drawing of the dresser, indicating overall height, width, depth, and individual drawer measurements, as well as the maximum weight capacity.

9. WARRANTY AND SUPPORT

COSTWAY products are designed for quality and durability. For warranty information, missing parts, or technical support, please contact COSTWAY customer service directly. Please have your model number (VH33842DE) and purchase details ready when contacting support.

Refer to the original purchase documentation or the COSTWAY official website for specific warranty terms and contact information.

