

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› PHILIPS /

› Philips Dual Basket Airfryer 1000 Series - 7.1L Capacity, RapidAir Technology, 10 Cooking Functions, 90% Less Fat, Compact Design, HomeID Recipe App (NA154/09) 7.1L Flexi Draw

PHILIPS NA154/09

Philips Dual Basket Airfryer 1000 Series Instruction Manual

Model: NA154/09

1. INTRODUCTION

Welcome to the Philips Dual Basket Airfryer 1000 Series. This appliance is designed to provide a healthier way to prepare your favorite meals, utilizing RapidAir Technology for crispy results with significantly less fat. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new airfryer.

2. IMPORTANT SAFETY INFORMATION

Please read this instruction manual carefully before using the appliance and save it for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Electrical Safety:** Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting. Do not immerse the appliance, cord, or plug in water or any other liquid.
- **Heat and Surfaces:** The appliance surfaces become hot during use. Always use oven mitts when handling hot components. Place the airfryer on a stable, heat-resistant surface, away from walls or other appliances to allow for proper ventilation.
- **Children and Vulnerable Persons:** This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- **Maintenance:** Always unplug the appliance before cleaning. Allow it to cool down completely before handling or storing.
- **Damage:** Do not use the appliance if the plug, the mains cord, or the appliance itself is damaged. Contact Philips customer support for repair.

3. PRODUCT OVERVIEW

The Philips Dual Basket Airfryer 1000 Series is designed for versatile cooking with its innovative dual basket system and advanced technology.



Figure 3.1: Philips Dual Basket Airfryer 1000 Series with food in both baskets.

Key Features:

- **Dual Basket Flexibility:** Cook two different dishes simultaneously or combine for a single large meal. The 7.1L capacity is ideal for family-sized portions.
- **RapidAir Technology:** Ensures even heat distribution for crispy and tender results with up to 90% less fat compared to traditional deep frying.
- **10-in-1 Cooking Functions:** Offers versatile cooking options including frying, grilling, baking, roasting, and reheating.
- **Compact Design:** Despite its large capacity, the airfryer features a compact footprint for easy placement on kitchen countertops.
- **HomeID Recipe App Integration:** Access a wide variety of recipes and cooking guidance through the dedicated HomeID app.



Figure 3.2: The flexible basket design allows for cooking two whole chickens or other large items.



RapidAir Technology

Figure 3.3: Visual representation of RapidAir Technology for optimal heat distribution.



Figure 3.4: The HomeID Recipe App provides access to numerous recipes and cooking controls.

4. SETUP

Before first use, follow these steps to prepare your airfryer:

1. **Unpacking:** Carefully remove the airfryer and all accessories from the packaging. Retain packaging for future transport or storage.
2. **Initial Cleaning:** Wash the baskets and any removable parts with hot water, dish soap, and a non-abrasive sponge. Wipe the interior and exterior of the main unit with a damp cloth. Ensure all parts are completely dry before assembly.
3. **Placement:** Place the airfryer on a stable, level, and heat-resistant surface. Ensure there is at least 10 cm (4 inches) of free space on the back and sides, and 10 cm (4 inches) above the appliance to allow for proper air circulation.
4. **Power Connection:** Plug the power cord into a grounded wall outlet.

5. OPERATING INSTRUCTIONS

Operating your Philips Dual Basket Airfryer is straightforward. Here are the basic steps:

Basic Operation:

1. **Preparation:** Place ingredients into the basket(s). For dual cooking, ensure ingredients are suitable for simultaneous cooking times or adjust accordingly.
2. **Power On:** Press the power button on the control panel.
3. **Select Function:** Choose one of the preset cooking functions or manually set the temperature and time using the digital controls.
4. **Start Cooking:** Press the start button to begin the cooking process.
5. **Shake Reminder:** For certain recipes, the airfryer may prompt you to shake the basket for even cooking. Follow the on-screen instructions.
6. **Completion:** The airfryer will beep when cooking is complete. Carefully remove the baskets and transfer food to a serving dish.



Figure 5.1: The dual basket system allows for synchronized cooking of different food items.

Using the HomeID App:

For enhanced cooking experience, download the Philips HomeID app. The app provides:

- Access to over 10,000 recipes tailored for your airfryer.
- Step-by-step cooking guidance.
- Remote control capabilities (if supported by your model and connection).

6. COOKING FUNCTIONS

Your Philips Airfryer offers 10 versatile cooking functions to prepare a wide range of dishes:

- **Fry:** Ideal for crispy foods like fries, chicken wings, and spring rolls.
- **Grill:** Perfect for meats, fish, and vegetables, achieving a grilled texture.
- **Bake:** Suitable for cakes, muffins, bread, and casseroles.
- **Roast:** For roasting meats like chicken, beef, or vegetables.
- **Reheat:** Quickly warms up leftovers without drying them out.

- Additional functions may include dehydrate, toast, defrost, and keep warm, depending on the specific model.



Figure 6.1: The air fryer supports 10 different cooking methods for diverse meal preparation.

7. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. **Unplug and Cool:** Always unplug the appliance and allow it to cool down completely before cleaning.
2. **Baskets and Trays:** The removable baskets and trays are dishwasher-safe. For hand washing, use hot water, dish soap, and a non-abrasive sponge. Remove stubborn food residue by soaking in warm soapy water.
3. **Interior:** Wipe the interior of the appliance with a damp cloth. For stubborn residue, use a non-abrasive cleaner.
4. **Exterior:** Clean the exterior with a damp cloth. Do not use abrasive cleaning agents or scouring pads.
5. **Heating Element:** Use a cleaning brush to remove any food residue from the heating element located inside the appliance.



Figure 7.1: The removable baskets and trays are designed for easy cleaning and are dishwasher-safe.

8. TROUBLESHOOTING

If you encounter issues with your air fryer, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet issue.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker.
Food is not cooked evenly.	Overfilling; not shaking basket.	Do not overfill the basket. Shake the basket(s) halfway through cooking for even results.
White smoke coming from appliance.	Grease residue; fatty ingredients.	Clean the basket and interior thoroughly. For fatty foods, drain excess fat during cooking.
Fries are not crispy.	Incorrect potato type; insufficient oil.	Use fresh potatoes suitable for frying. Ensure a light coating of oil (1/2 tbsp) for homemade fries.

If the problem persists after trying these solutions, please contact Philips customer support.

9. SPECIFICATIONS

Detailed technical specifications for the Philips Dual Basket Airfryer 1000 Series (NA154/09):

Specification	Value
Brand	PHILIPS
Model Number	NA150/09 (Note: NA154/09 is a variant of the 1000 Series)
Colour	Black
Product Dimensions (L x W x H)	43.7 x 30.1 x 29.5 cm
Capacity	7.1 litres
Power / Wattage	2450 watts
Voltage	240 Volts
Item Weight	7.3 kg
Special Features	Dual Basket Flexibility, RapidAir Technology
Recommended Uses	Roast, Grill, Bake, Fry



Figure 9.1: Product dimensions for placement reference.

10. WARRANTY AND SUPPORT

Philips products are manufactured to the highest standards and undergo rigorous quality checks. This product is covered by a standard manufacturer's warranty, details of which can be found in the warranty card included with your purchase or on the official Philips website.

For technical support, product registration, or to find a service center, please visit the official Philips support website or contact their customer service line. Keep your proof of purchase for warranty claims.

For more information, visit www.philips.co.uk