

## Celly FLIP3WH

# Celly FLIP3WH Wireless Bluetooth Earbuds User Manual

Model: FLIP3WH

## INTRODUCTION

The Celly FLIP3WH are compact, wireless in-ear earbuds designed for comfortable use with mobile phones, tablets, and computers. They feature integrated microphones for calls and media control, utilizing Bluetooth 5.2 technology for a stable connection. This manual provides essential instructions for setting up, operating, and maintaining your earbuds.



Image showing the Celly FLIP3WH wireless Bluetooth earbuds, highlighting their compact in-ear design and white color.

## PRODUCT OVERVIEW

The Celly FLIP3WH earbuds offer a secure in-ear fit and connect wirelessly via Bluetooth 5.2, providing a stable connection up to 12 meters. They include an integrated microphone for hands-free calls and remote

controls for volume and music playback. The lightweight design, weighing 33 grams, ensures comfort during extended use.

- **In-Ear Design:** Secure and comfortable fit.
- **Bluetooth 5.2:** Stable wireless connectivity up to 12 meters.
- **Integrated Microphone:** For hands-free calls.
- **Remote Controls:** For calls, volume, and music playback.
- **Lightweight:** Weighs 33 grams for extended comfort.

## SETUP

### Charging the Earbuds

Before first use, fully charge your Celly FLIP3WH earbuds. Connect the charging cable to the earbuds and a compatible USB power source. The charging indicator will show the charging status. A full charge typically takes approximately 1.5 to 2 hours.

### Pairing with a Device

To connect your Celly FLIP3WH earbuds to a mobile phone, tablet, or computer:

1. Ensure the earbuds are charged and powered on. They should automatically enter pairing mode, indicated by a flashing LED light.
2. Activate Bluetooth on your mobile phone, tablet, or computer.
3. Search for available Bluetooth devices in your device's Bluetooth settings.
4. Select 'Celly FLIP3WH' from the list of found devices to initiate pairing.
5. Once connected, the earbuds will indicate successful pairing with an audible prompt or a solid LED light.

## OPERATING

### Power On/Off

- **Power On:** Press and hold the multi-function button for approximately 3 seconds until you hear an audible prompt and the LED indicator lights up.
- **Power Off:** Press and hold the multi-function button for approximately 5 seconds until you hear an audible prompt and the LED indicator turns off.

### Music Playback

- **Play/Pause:** Press the multi-function button once.
- **Next Track:** Double-press the multi-function button.
- **Previous Track:** Triple-press the multi-function button.

### Call Management

- **Answer/End Call:** Press the multi-function button once.
- **Reject Call:** Press and hold the multi-function button for 2 seconds.

### Volume Control

Adjust the volume directly from your connected device. Some earbuds may feature dedicated volume buttons; refer to the product diagram for specific controls if available.

## Maintenance

### Cleaning

Gently wipe the earbuds with a soft, dry, lint-free cloth. Do not use abrasive cleaners, solvents, or immerse the earbuds in water, as they are not water-resistant. Regularly clean the ear tips to ensure optimal sound quality and hygiene.

### Storage

Store the earbuds in a cool, dry place away from direct sunlight, extreme temperatures, and humidity. When not in use for extended periods, charge them periodically (e.g., once every three months) to maintain battery health and prevent deep discharge.

## Troubleshooting

- **Earbuds not pairing:**

- Ensure Bluetooth is enabled on your device and the earbuds are in pairing mode.
- Check if the earbuds are sufficiently charged.
- Try restarting both the earbuds and your device.
- Ensure the earbuds are not already connected to another device.

- **No sound:**

- Check the volume level on both the earbuds and your connected device.
- Ensure the earbuds are properly paired and connected to your device.
- Try playing different audio sources or applications.

- **Poor audio quality or disconnections:**

- Ensure there are no physical obstructions between the earbuds and your device.
- Move closer to your device to reduce potential interference.
- Check for other active Bluetooth devices in the vicinity that might cause interference.

## Specifications

<b>Brand</b>	Celly
<b>Model</b>	FLIP3WH
<b>Connectivity</b>	Bluetooth 5.2
<b>Wireless Range</b>	Up to 12 meters
<b>Battery Life (Music Playback)</b>	Up to 6 hours
<b>Battery Life (Standby)</b>	Up to 30 hours
<b>Frequency Response</b>	20-20,000 Hz
<b>Weight</b>	33 grams
<b>Microphone</b>	Integrated
<b>Water Resistance</b>	No

Color	White
-------	-------

## **WARRANTY AND SUPPORT**

For detailed warranty information, technical support, and customer service, please refer to the documentation provided with your purchase or visit the official Celly website. Keep your proof of purchase for any warranty claims.