

OSRAM SMART+ DOT-IT TWIST & SHAKE

OSRAM SMART+ DOT-IT TWIST & SHAKE User Manual

Model: SMART+ DOT-IT TWIST & SHAKE (4058075849280)

1. INTRODUCTION

The OSRAM SMART+ DOT-IT TWIST & SHAKE is a versatile smart mobile lamp designed for relaxation, sleep, and creating a pleasant atmosphere. It features innovative Twist & Shake operation, individually adjustable lighting, soothing sounds, and practical timer functions. This manual provides detailed instructions for its setup, operation, and maintenance.



Image 1.1: The OSRAM SMART+ DOT-IT TWIST & SHAKE smart lamp, highlighting its innovative operation, adjustable lighting, soothing sounds, and timer functions.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x OSRAM SMART+ DOT-IT TWIST & SHAKE RGBW Lamp

3. SAFETY INFORMATION

Please read and follow these safety instructions carefully before using the product:

- Keep the device away from water and moisture.
- Do not attempt to open or repair the device yourself. Refer to qualified service personnel.
- Use only the specified charging cable and power adapter.
- Avoid extreme temperatures and direct sunlight.
- This product contains a light source of energy efficiency class G.

4. SETUP

4.1 Charging the Device

The integrated battery lasts up to 14 hours on a full charge. To charge the device:

1. Locate the USB-C port on the device.
2. Connect the provided USB-C cable to the device and a compatible USB power adapter (not included).
3. The charging indicator will show the charging status.

4.2 Flexible Mounting

The SMART+ DOT-IT TWIST & SHAKE offers flexible mounting options:

- **Magnetic Attachment:** The device features a magnetic back, allowing it to be attached to any metallic surface.
- **Adhesive Plate:** Use the included adhesive plate to mount the lamp on non-metallic surfaces. Simply peel off the protective film and press the plate firmly onto a clean, dry surface. The lamp can then be magnetically attached to this plate.



Image 4.1: Product packaging highlighting key features including 16 million colors, dimmable light, rechargeable battery, magnetic attachment, and white noise functions (Forest Rhythms, Gentle Water, Seagull, Ocean Waves).

5. OPERATING INSTRUCTIONS

 
The SMART+ DOT-IT TWIST & SHAKE can be controlled via simple press and rotation gestures.

5.1 Button Control

- **1x Press:** Press the top surface once to start the DOT-IT and activate the color mode.

Eenvoudige bediening

Door te drukken en te draaien regel je de helderheid, kleur en het geluid. Kies uit vier verschillende whitenoise-geluiden.

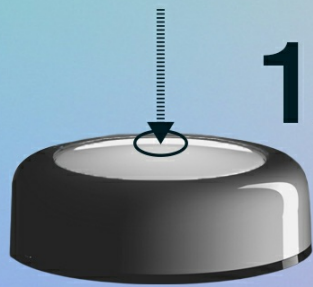

1x DRUK OP
om de DOT-IT te starten en de
kleurmodus te activeren.

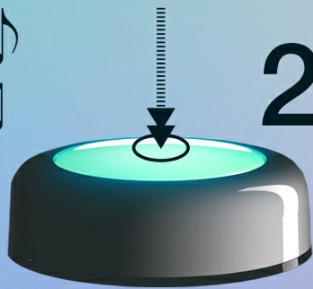 


Image 5.1: Single press action to activate color mode.

- **2x Press:** Press the top surface twice to switch to White Noise mode.

Eenvoudige bediening

Door te drukken en te draaien regel je de helderheid, kleur en het geluid. Kies uit vier verschillende whitenoise-geluiden.



2x DRUK OP
om over te schakelen naar de
modus White Noise.

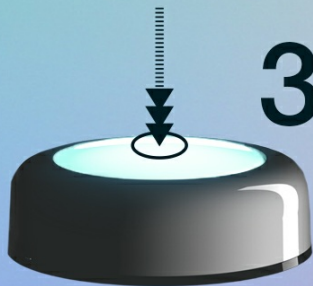 


Image 5.2: Double press action to switch to White Noise mode.

- **3x Press:** Press the top surface three times to switch between color mode and white light.

Eenvoudige bediening

Door te drukken en te draaien regel je de helderheid, kleur en het geluid. Kies uit vier verschillende whitenoise-geluiden.



3x DRUK
om te schakelen tussen de kleurenmodus
en wit licht.



Image 5.3: Triple press action to toggle between color and white light.

- **Hold for 3 Seconds:** Press and hold the top surface for 3 seconds to activate automatic color cycling.

Eenvoudige bediening

Door te drukken en te draaien regel je de helderheid, kleur en het geluid.
Kies uit vier verschillende whitenoise-geluiden.



Image 5.4: Hold for 3 seconds to activate automatic color change.

5.2 Rotation Control

Rotate the device to adjust settings:

- **Turn:** Rotate the lamp to change colors in color mode or to change the ambient sounds in White Noise mode.



Image 5.5: Rotation action to change colors or white noise sounds.

5.3 Ambient Sounds

The device offers four ambient sounds for a soothing atmosphere:

- Forest Rhythms
- Gentle Water
- Seagull
- Ocean Waves

These sounds can be cycled through using the rotation control in White Noise mode.

6. APP CONTROL

For advanced control and customization, use the OSRAM SMART+ app.



Image 6.1: The OSRAM SMART+ app interface, demonstrating features like automating light flows, grouping light sources, creating light scenes, on/off, color, dimming, interactive light sources, and synchronizing light sources.

6.1 App Features

With the SMART+ app, you can:

- Automate light flows
- Group multiple light sources
- Create custom light scenes
- Control on/off, color, and dimming
- Utilize interactive light source features
- Synchronize light sources for a unified experience

6.2 Connecting Multiple Devices

The DOT-IT can be easily connected and synchronized with other compatible devices for an even more intense sound and color experience, wherever you are.



Image 6.2: Multiple DOT-IT lamps connected and synchronized, creating a vibrant light display.

7. MAINTENANCE

7.1 Cleaning

To clean the device, wipe it with a soft, dry cloth. Do not use abrasive cleaners or solvents.

7.2 Battery Care

To prolong battery life, avoid fully discharging the device frequently. Recharge it regularly, especially if it will not be used for an extended period.

8. TROUBLESHOOTING

8.1 Device Not Turning On

- Ensure the battery is charged. Connect the device to a power source using the USB-C cable.
- Press the top surface once to attempt to power it on.

8.2 App Connectivity Issues

- Ensure Bluetooth is enabled on your smartphone.
- Make sure the device is within range of your smartphone.
- Restart the SMART+ app.
- If issues persist, try resetting the device (refer to app instructions for specific reset procedures).

8.3 Light or Sound Not Changing

- Ensure you are in the correct mode (color mode for colors, white noise mode for sounds).
- Try rotating the device more deliberately.
- If using the app, check the app settings.

9. SPECIFICATIONS

Brand	OSRAM
Model Number	4058075849280
Product Dimensions	2.3 x 6.7 x 2.3 cm
Item Weight	56 Grams
Power Source	Battery
Batteries Required	Yes
Light Source Type	LED
Material	Polycarbonate (PC)
Material of Lampshade	Polycarbonate (PC)
Switch Type	Button and Rotation
Color	White
Special Features	Energy-Efficient
Components Included	1 x SMART DOT IT TWIST N SHAKE RGBW OSRAM

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or visit the official OSRAM website. Keep your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question