

[Manuals.plus](#) /

> [VICEASE](#) /

> VICEASE Replaceable Battery for A27 Cordless Stick Vacuum User Manual

VICEASE A27 Battery

VICEASE Replaceable Battery (22.2V 2200mAh) for A27 Cordless Stick Vacuum User Manual

INTRODUCTION

Thank you for choosing the VICEASE Replaceable Battery for your A27 Cordless Stick Vacuum. This manual provides essential information for the safe and efficient use, installation, charging, and maintenance of your new battery. Please read this manual thoroughly before use and retain it for future reference.

This battery is specifically designed to be compatible with the VICEASE A27 Pink/Orange/Red Cordless Stick Vacuum models, ensuring optimal performance and extended runtime.

SAFETY INFORMATION

Always observe the following safety precautions to prevent injury or damage to the battery and vacuum cleaner:

- Use only the official VICEASE charger provided with your A27 vacuum or a compatible VICEASE charger. Using unauthorized chargers may damage the battery and void the warranty.
- Do not expose the battery to water, moisture, or high temperatures.
- Do not disassemble, crush, or puncture the battery.
- Keep the battery away from children and pets.
- If the battery shows signs of damage, leakage, or overheating, discontinue use immediately and contact customer support.
- Dispose of used batteries according to local regulations. Do not dispose of batteries in household waste.
- Avoid short-circuiting the battery terminals.

PACKAGE CONTENTS

- 1 x VICEASE Replaceable Battery (22.2V 2200mAh)

SETUP AND INSTALLATION

This section details how to install and remove the replaceable battery from your VICEASE A27 Cordless

Stick Vacuum.

Installing the Battery

1. Ensure the vacuum cleaner is turned off and disconnected from any power source.
2. Align the battery with the battery slot on the main body of the VICEASE A27 vacuum.
3. Slide the battery firmly into the slot until it clicks securely into place. Ensure there is no gap between the battery and the vacuum body.



Compatible with A27 Cordless Vacuum



Image: The VICEASE A27 Cordless Stick Vacuum battery slot and examples of the A27 vacuum in different colors (Red, Blue, Pink, Orange, Purple). The battery is designed to fit into the designated slot on the vacuum's main body.

Removing the Battery

1. Ensure the vacuum cleaner is turned off and disconnected from any power source.
2. Locate the Battery Release Button on the vacuum body, typically near the battery compartment.

3. Press and hold the Battery Release Button.
4. While holding the button, slide the battery out of the slot.

OPERATING AND CHARGING

The VICEASE replaceable battery offers flexible charging options and extended runtime.

Charging the Battery

You have two primary methods for charging your VICEASE A27 battery:

- **Charging while installed in the vacuum:** Insert the charger into the charging port on the battery while the vacuum is hanging on its wall mount.
- **Charging separately:** Remove the battery from the vacuum and connect the charger directly to the battery's charging port. This allows you to charge a spare battery while using another.

A full charge typically takes approximately 4-5 hours. The battery indicator lights will show the charging status.

Battery Runtime

With a fully charged battery, your VICEASE A27 Cordless Stick Vacuum can provide up to 80 minutes of runtime, depending on the power mode used (e.g., standard vs. max power). Having an extra battery allows for continuous cleaning without waiting for a recharge.

MAINTENANCE

Proper maintenance ensures the longevity and performance of your battery.

- **Cleaning:** Wipe the battery's exterior with a dry, soft cloth. Do not use harsh chemicals or abrasive cleaners. Ensure charging contacts are clean and free of debris.
- **Storage:** If storing the battery for an extended period, charge it to approximately 50-60% and store it in a cool, dry place away from direct sunlight and extreme temperatures. Recharge every 3-6 months to prevent deep discharge.
- **Temperature:** Operate and charge the battery within recommended temperature ranges (typically 0°C to 40°C or 32°F to 104°F).

TROUBLESHOOTING

If you encounter issues with your VICEASE replaceable battery, refer to the following common solutions:

Problem	Possible Cause	Solution
Battery not charging	Charger not properly connected; faulty charger; battery too hot/cold; damaged battery.	Ensure charger is securely connected to both the battery/vacuum and the power outlet. Try charging in a room temperature environment. If issues persist, contact customer support.
Vacuum not powering on with battery	Battery not fully inserted; battery discharged; faulty battery; vacuum issue.	Ensure the battery is fully clicked into place. Charge the battery completely. Test with another fully charged battery if available. Refer to your A27 vacuum manual for vacuum-specific troubleshooting.

Problem	Possible Cause	Solution
Reduced runtime	Battery not fully charged; battery aging; operating in max power mode continuously.	Ensure battery is fully charged before use. Battery capacity naturally decreases over time. Max power mode consumes battery faster.

For further assistance, please contact VICEASE customer support.

SPECIFICATIONS

Feature	Detail
Brand	VICEASE
Model Name	A27 Battery
Model Number	TY-A27-Battery-Black
Voltage	22.2 Volts (DC)
Capacity	2200mAh
Output Current	2.2 Amps
Compatible Devices	VICEASE A27 Pink/Orange/Red Cordless Stick Vacuum
Material	Plastic
Item Weight	15.2 ounces
Connectivity Technology	Proprietary
Power Source	AC (for charging)

WARRANTY AND SUPPORT

Warranty: This VICEASE replaceable battery comes with a 2-year warranty from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or failure to follow instructions in this manual.

Customer Support: For technical assistance, warranty claims, or any questions regarding your VICEASE product, please contact VICEASE customer support through the retailer's platform or the official VICEASE website. Please have your purchase receipt and product model information ready.