



Manuals.plus /

› CIRCLE JOY /

› CIRCLE JOY Electric Can Opener KGQ-3B User Manual

CIRCLE JOY KGQ-3B

CIRCLE JOY Electric Can Opener KGQ-3B User Manual

Model: KGQ-3B

INTRODUCTION

Thank you for choosing the CIRCLE JOY Electric Can Opener. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and retain it for future reference.



Image: The CIRCLE JOY Electric Can Opener, black in color, positioned next to several canned goods, including peaches and various meats, demonstrating its intended use.

SAFETY PRECAUTIONS

- Keep the can opener away from children.
- Do not immerse the unit in water or other liquids.
- Ensure hands are dry before operating.
- Do not attempt to open cans with pull-tabs or soda cans.
- Always remove batteries if the unit will not be used for an extended period.
- Dispose of batteries responsibly.

SETUP

Battery Installation

1. Locate the battery compartment on the underside of the can opener.
2. Gently slide open the battery cover.
3. Insert 4 AA alkaline batteries (not included), ensuring correct polarity (+/-) as indicated inside the

compartment.

4. Close the battery cover securely.

BATTERY OPERATED USING 4 AA ALKALINES BATTERIES

(NOT INCLUDED)



Image: A visual guide illustrating the process of inserting four AA batteries into the designated compartment of the electric can opener, highlighting the correct orientation.

OPERATING INSTRUCTIONS

Opening a Can

1. Place the can on a flat, stable surface.
2. Position the can opener on top of the can, ensuring the cutting wheel and gear are aligned with the can's rim. The can opener should sit flat on the can.

3. Press the start button once. The can opener will automatically grip the can and begin rotating, cutting along the side of the rim.
4. Allow the can opener to complete a full rotation around the can. It will continue to rotate until manually stopped.
5. To stop the operation, press the start button again. The can opener will release its grip after approximately 2 seconds.
6. Carefully lift the can opener from the can. The lid will be held by the built-in magnet for easy, hands-free removal.

HOW SHOULD IT BE PLACED?



RUNNING STATUS



Image: An illustration demonstrating the correct way to position the electric can opener on a can, showing the tilted blade and gear engaging the rim, and an incorrect placement example.

Side-Cut Opening and Smooth Edges

The CIRCLE JOY Electric Can Opener utilizes a side-cutting mechanism. This design cuts below the can's rim, leaving a smooth, safe edge on both the can and the removed lid. This minimizes the risk of cuts from sharp edges.



Image: A close-up diagram showing the side-cut opening process, where the can opener slices along the can's rim, not the top, resulting in smooth edges. It also shows a resealable cover and contrasts with uneven, sharp edges from traditional openers.



SMOOTH EDGE

Leave No Sharp Edge

Image: A hand holding the electric can opener with a removed can lid, demonstrating the smooth, safe edge left on the can after opening, contrasting with traditional sharp edges.

Magnetic Lid Removal

After the can is opened, the integrated magnet will securely hold the lid, preventing it from falling into the food or requiring manual handling of potentially sharp edges. Simply lift the can opener, and the lid will come with it.



Image: A person demonstrating the powerful magnet feature of the electric can opener, easily lifting a can lid after opening, ensuring no direct contact with the lid.

MAINTENANCE

Cleaning

- Wipe the exterior of the can opener with a damp cloth.
- Do not use abrasive cleaners or immerse the unit in water.
- The cutting wheel can be cleaned with a small brush if food particles accumulate.
- Ensure the unit is completely dry before storing.

Storage

Store the can opener in a dry place, away from direct sunlight and extreme temperatures. Remove batteries if storing for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Can opener does not start.	<ul style="list-style-type: none">◦ Batteries are dead or incorrectly installed.◦ Can opener not properly placed on can.	<ul style="list-style-type: none">◦ Replace batteries or check polarity.◦ Reposition the can opener to ensure it sits flat on the can's rim.
Can opener stops mid-operation.	<ul style="list-style-type: none">◦ Batteries are low.◦ Can is dented or irregularly shaped.	<ul style="list-style-type: none">◦ Replace batteries.◦ Try repositioning the can opener or use a manual opener for severely damaged cans.
Lid is not completely cut.	<ul style="list-style-type: none">◦ Can opener stopped too early.◦ Can opener not properly engaged.	<ul style="list-style-type: none">◦ Allow the can opener to complete a full rotation.◦ Ensure the can opener is firmly seated on the can's rim before starting.
Can opener leaves sharp edges.	<ul style="list-style-type: none">◦ This model is designed for smooth edges. If sharp edges occur, the can may be incompatible or the unit is malfunctioning.	<ul style="list-style-type: none">◦ Ensure the can is a standard metal can. This opener is not suitable for pull-tab or soda cans. If the issue persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	KGQ-3B
Brand	CIRCLE JOY
Color	Black
Material	Acrylonitrile Butadiene Styrene, Stainless Steel
Blade Material	Stainless Steel
Operation Mode	Automatic
Power Source	4 AA Batteries (not included)
Wattage	7 watts
Item Weight	12.32 ounces (approx. 350g)
Package Dimensions	7.87 x 3.62 x 3.11 inches
Manufacturer	KLT

WARRANTY AND SUPPORT

The CIRCLE JOY Electric Can Opener comes with a limited 12-month satisfaction service. For any questions, concerns, or support needs, please contact CIRCLE JOY customer service. They aim to provide professional service within 24 hours.

Contact information can typically be found on the product packaging or the official CIRCLE JOY website.



Image: An illustration depicting after-sales support, highlighting features like 24-hour online fast response, a limited 12-month satisfaction service, and fast delivery service.