

## Bissell 4123

# BISSELL Revolution HydroSteam Carpet Cleaner Model 4123 User Manual

Your guide to effective carpet and upholstery cleaning.

## INTRODUCTION

The BISSELL Revolution HydroSteam Carpet Cleaner, Model 4123, is an upright deep cleaner designed for carpets and area rugs. It features HydroSteam Technology for enhanced cleaning performance on tough, stuck-on, and sticky messes. The unit offers two distinct cleaning modes: Steam Pretreat Mode and SteamWash Max Mode. It also includes an XL DirtLifter PowerBrush for deep cleaning and specialized tools for upholstery and hard-to-reach areas.

## PACKAGE CONTENTS

Verify that all items are included in your package:

- BISSELL Revolution HydroSteam Carpet Cleaner Unit
- 7-foot Hose
- 4-inch Self-Cleaning Tough Stain Tool
- Spraying Crevice Tool
- Nozzle Clean Out Tool
- 2 Trial-Sized Formulas (BISSELL PRO MAX Clean + Protect, BISSELL PET PRO OXY Urine Eliminator)



Image: The BISSELL Revolution HydroSteam Carpet Cleaner shown with its main unit, 7-foot hose, 4-inch self-cleaning tough stain tool, spraying crevice tool, nozzle clean out tool, and two trial-sized cleaning formulas.

## SETUP

The BISSELL Revolution HydroSteam Carpet Cleaner is designed for quick and easy assembly.

1. **Handle Assembly:** Insert the upper handle into the main body of the cleaner until it clicks securely into place.
2. **Tank Installation:** Place the clean water tank onto the top of the unit. Ensure it is seated correctly.
3. **Filling the Clean Water Tank:** Unscrew the yellow cap on the clean water tank. Fill the tank with water up to the indicated line, then add the appropriate BISSELL cleaning formula according to the instructions on the formula bottle. Securely replace the yellow cap.



# 1-gallon clean tank

75% more tank capacity\* for fewer tank refills.

Image: A person is shown pouring BISSELL PRO MAX Clean + Protect formula into the 1-gallon clean water tank of the carpet cleaner, with an inset image showing the tank being placed onto the main unit.

The assembly process is straightforward, typically requiring only a few minutes.

Video: An official BISSELL feature video demonstrating the assembly and key features of the Revolution HydroSteam Carpet Cleaner.

## OPERATING INSTRUCTIONS

Before operating, ensure the clean water tank is filled and the dirty water tank is empty.

### Main Unit Operation (Carpet & Area Rugs)

1. **Power On:** Plug the unit into a grounded outlet and press the power button.
2. **Select Cleaning Mode:** Choose between Steam Pretreat Mode (for loosening tough, stuck-on stains) or SteamWash Max Mode (for deep cleaning with steam, water, and formula).
3. **Cleaning Pass:** Hold the spray trigger on the handle to apply solution as you push the cleaner forward. Release the

trigger and pull the cleaner backward to suction up the dirty solution. Overlap passes slightly for thorough cleaning.

4. **Steam Pretreat Mode:** For heavily soiled areas, use this mode first to penetrate and loosen stains before a full SteamWash Max clean.




# HydroSteam<sup>®</sup> technology

Powered to clean sticky messes up to 45% better.

Image: The BISSELL Revolution HydroSteam Carpet Cleaner actively cleaning a carpet, demonstrating the HydroSteam Technology with visible steam and cleaning action on a spill.

## Using Attachments (Upholstery, Stairs, Pet Beds)

1. **Attach Hose:** Locate the hose connection port on the main unit. Open the port cover and firmly insert the hose until it locks into place.
2. **Attach Tool:** Connect the desired tool (e.g., 4-inch Self-Cleaning Tough Stain Tool, Spraying Crevice Tool) to the end of the hose.
3. **Clean:** Hold the tool firmly against the surface. Press the trigger on the tool to spray solution, then release and pull the tool across the soiled area to suction. Repeat as needed.

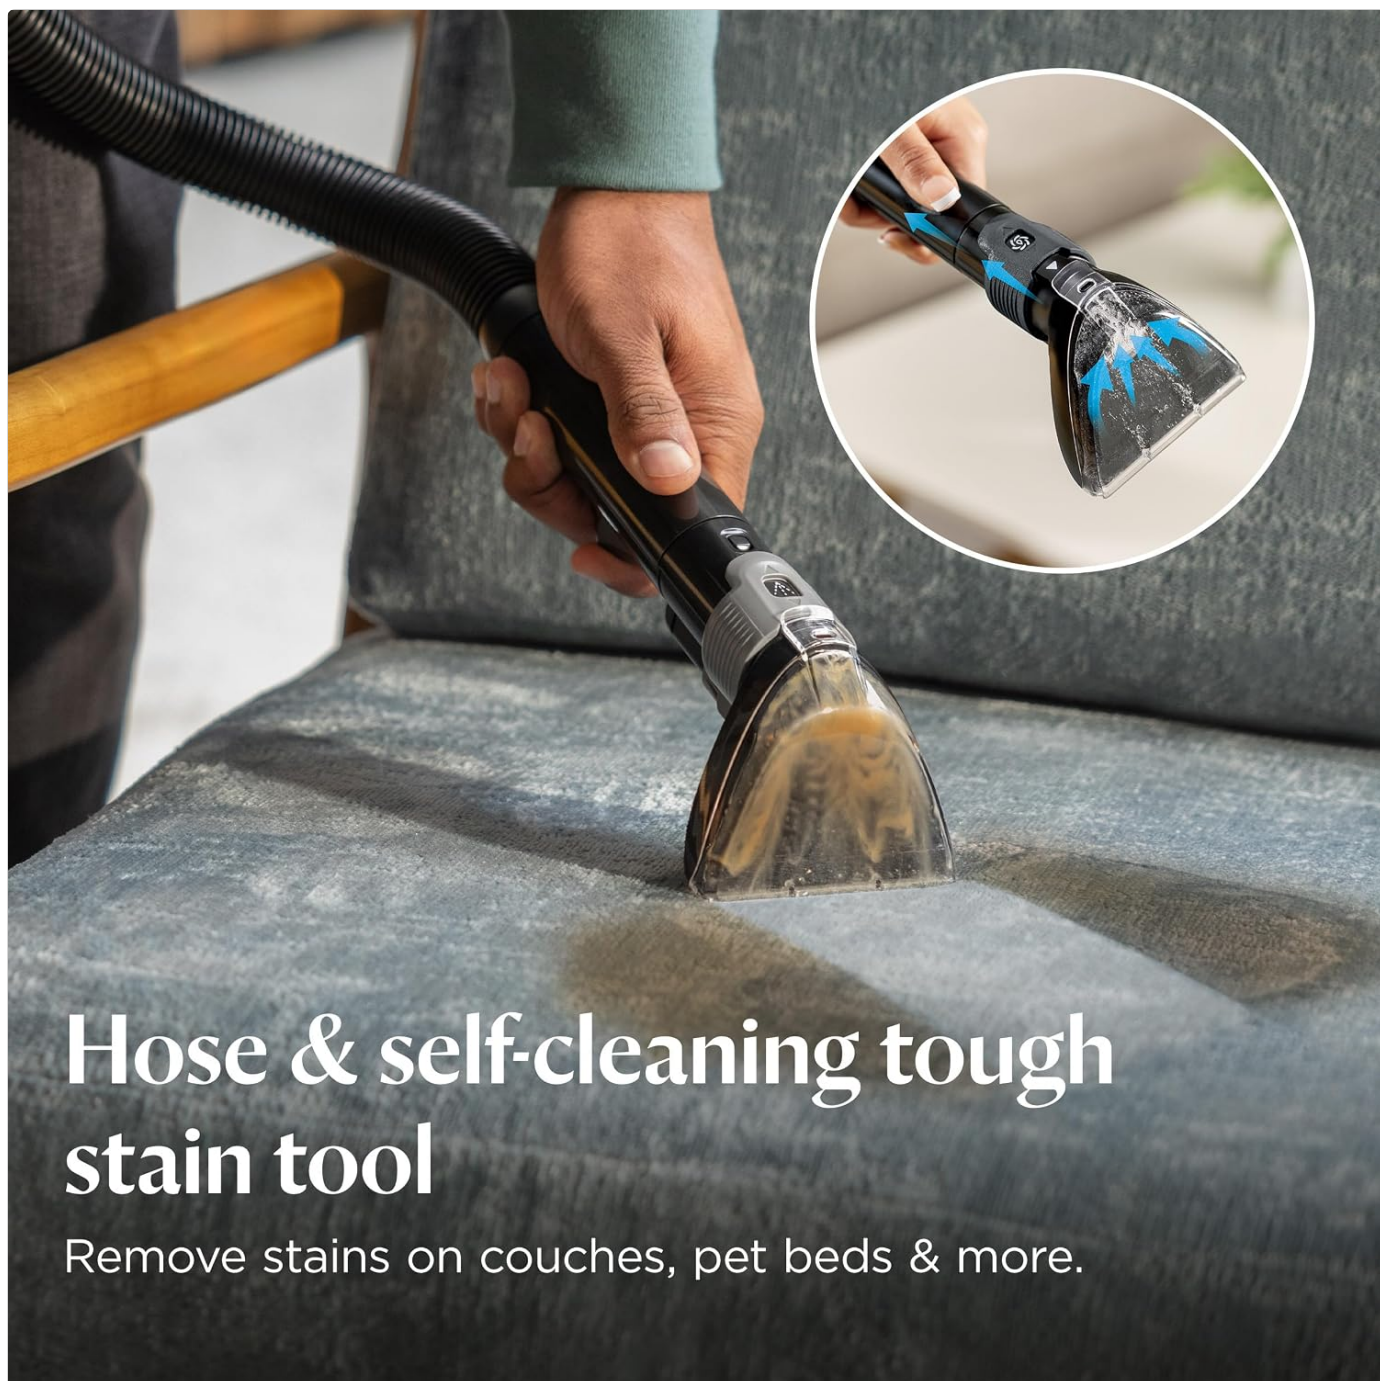

# Hose & self-cleaning tough stain tool


Remove stains on couches, pet beds & more.

Image: A person is using the flexible hose and the 4-inch self-cleaning tough stain tool to effectively remove stains from a fabric couch.

## MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your cleaner.

1. **Emptying and Rinsing Dirty Water Tank:** After each use, remove the dirty water tank. Dispose of the collected dirty water and rinse the tank thoroughly with clean water.
2. **Cleaning the Brush Roll and Nozzle:** The EZ Clean Brush Roll Cover and Catch & Clean Tray are designed for easy maintenance. Press the release buttons on the brush roll cover to remove it. Clean any trapped debris or hair from the brush roll and the nozzle area. The included Nozzle Clean Out Tool can assist with this.
3. **Hose Cleaning:** If using the hose and attachments, it is recommended to clean the hose by attaching an upholstery tool and running clean water through it to flush out any residue.

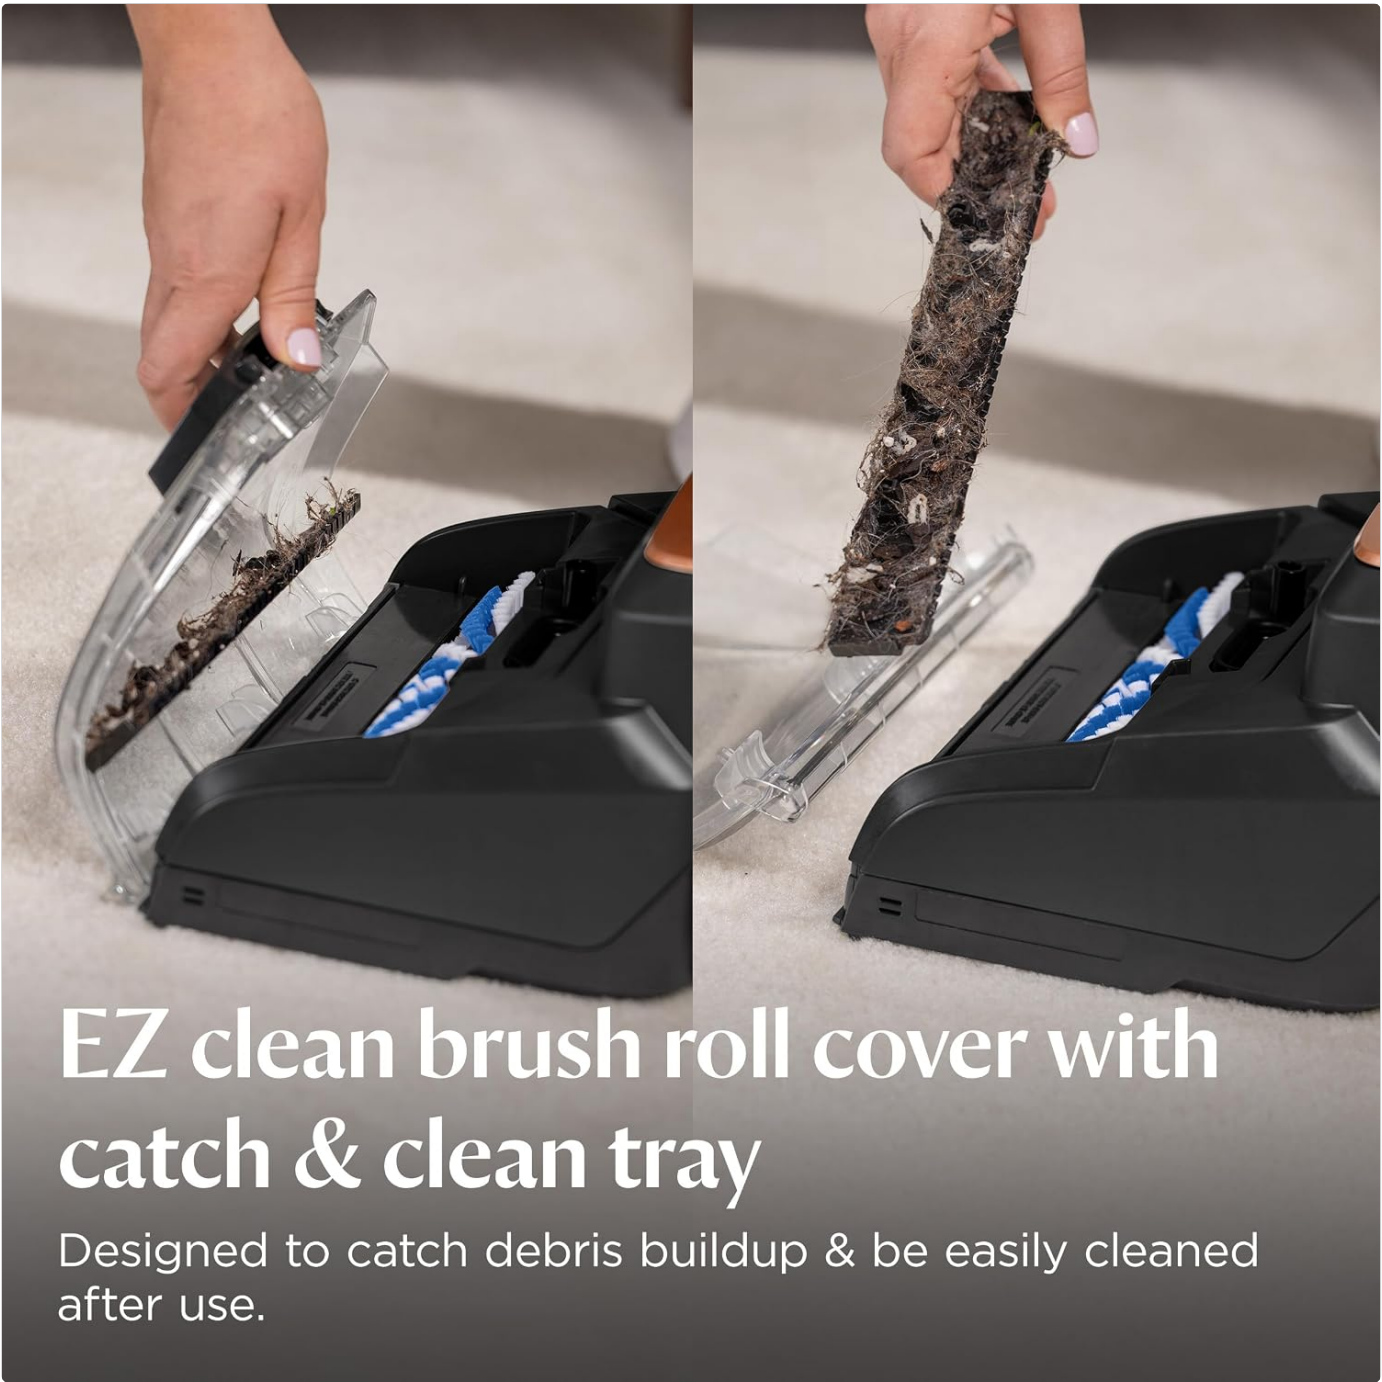

# EZ clean brush roll cover with catch & clean tray

Designed to catch debris buildup & be easily cleaned after use.

Image: A two-part image illustrating the removal of the EZ Clean Brush Roll Cover and the subsequent cleaning of the brush roll, which has collected debris and pet hair.

## SPECIFICATIONS

|                   |                               |
|-------------------|-------------------------------|
| Brand             | Bissell                       |
| Model Name        | Revolution HydroSteam         |
| Item Model Number | 4123                          |
| Color             | Black                         |
| Item Weight       | 28.2 pounds (12.84 Kilograms) |
| Capacity          | 1 Gallon                      |

|                    |                         |
|--------------------|-------------------------|
| Power Source       | Corded Electric         |
| Package Dimensions | 25.5 x 18.6 x 13 inches |
| Assembly Required  | No                      |
| Batteries Required | No                      |

## SUPPORT

For further assistance, product registration, or warranty information, please visit the official Bissell website or contact their customer support. When contacting support, please have your model number (4123) and purchase date available.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

### Answered questions about this manual

**The Bissell Revolution HydroSteam 4123 is leaking on its own. How can I take the cover off to see if there is a loose or broken hose?**

For the Bissell Revolution HydroSteam Model 4123, the manual provides instructions for removing the external maintenance covers, but does not detail the removal of the main motor housing, as this is generally not recommended...

[Read full answer](#)

