

Manuals.plus /
› MOSHAY /
› MOSHAY Foldable Bike Rear Basket Instruction Manual

MOSHAY B0DQSNRPTZ

MOSHAY Foldable Bike Rear Basket Instruction Manual

Brand: MOSHAY | Model: B0DQSNRPTZ

INTRODUCTION

This instruction manual provides essential information for the safe and effective use of your MOSHAY Foldable Bike Rear Basket. Please read this manual thoroughly before installation and operation, and retain it for future reference. This product is designed to provide convenient storage for your bicycle.

PRODUCT OVERVIEW

Key Features:

- Foldable Design:** Unique mechanism allows the basket to fold flat for compact storage when not in use.
- Large Capacity:** Approximately 32 liters of storage space.
- Durable Construction:** Made from high-quality, food-grade polypropylene, offering heat and corrosion resistance.
- Integrated Reflector:** A rear reflector is installed for enhanced visibility and safety.
- Included Cargo Net:** A quality cargo net is provided to secure items within the basket.
- Lightweight:** Weighs approximately 2.2 kg (4.8 pounds).

Product Dimensions:

PRODUCT SIZE • **Ultra-large** capacity: **34L**
• Basket weight: 2.4KG

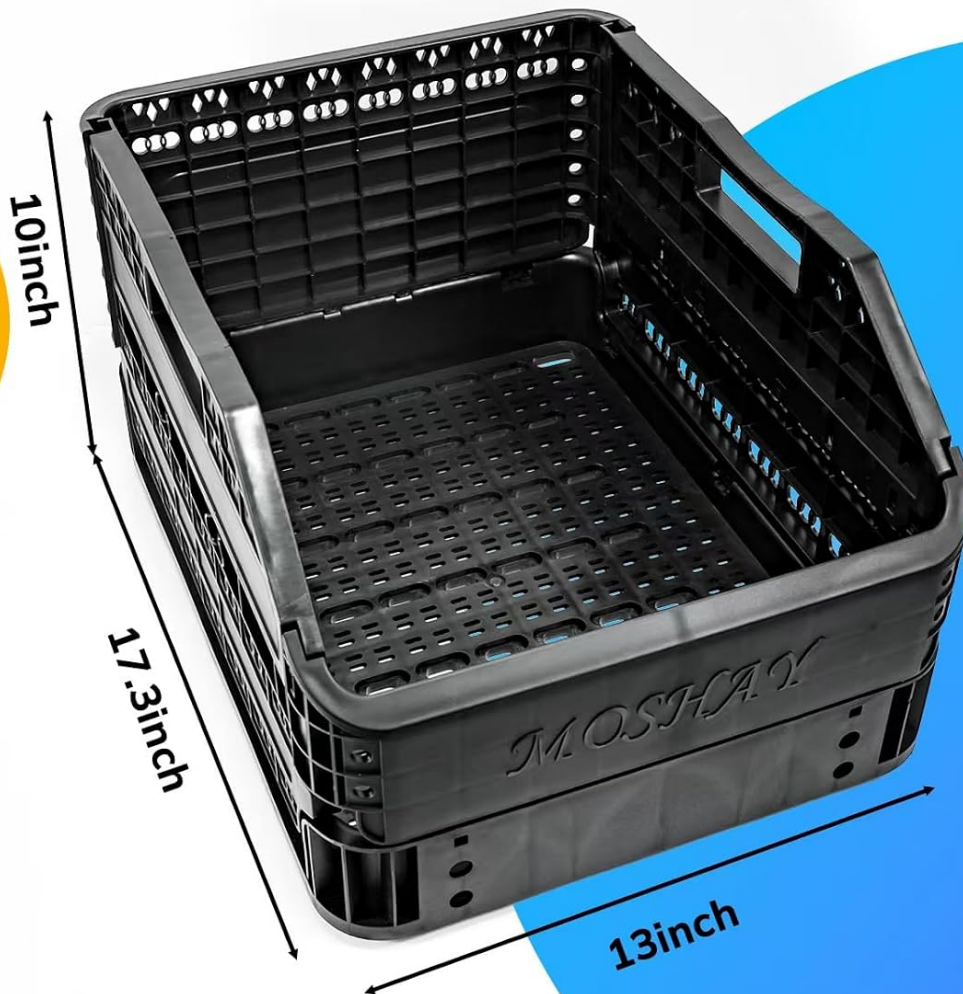


Figure 1: Product Dimensions (Approximate: 17.3" L x 13" W x 10" H)

Folded State:

PREMIUM FOLDABLE REAR BASKET

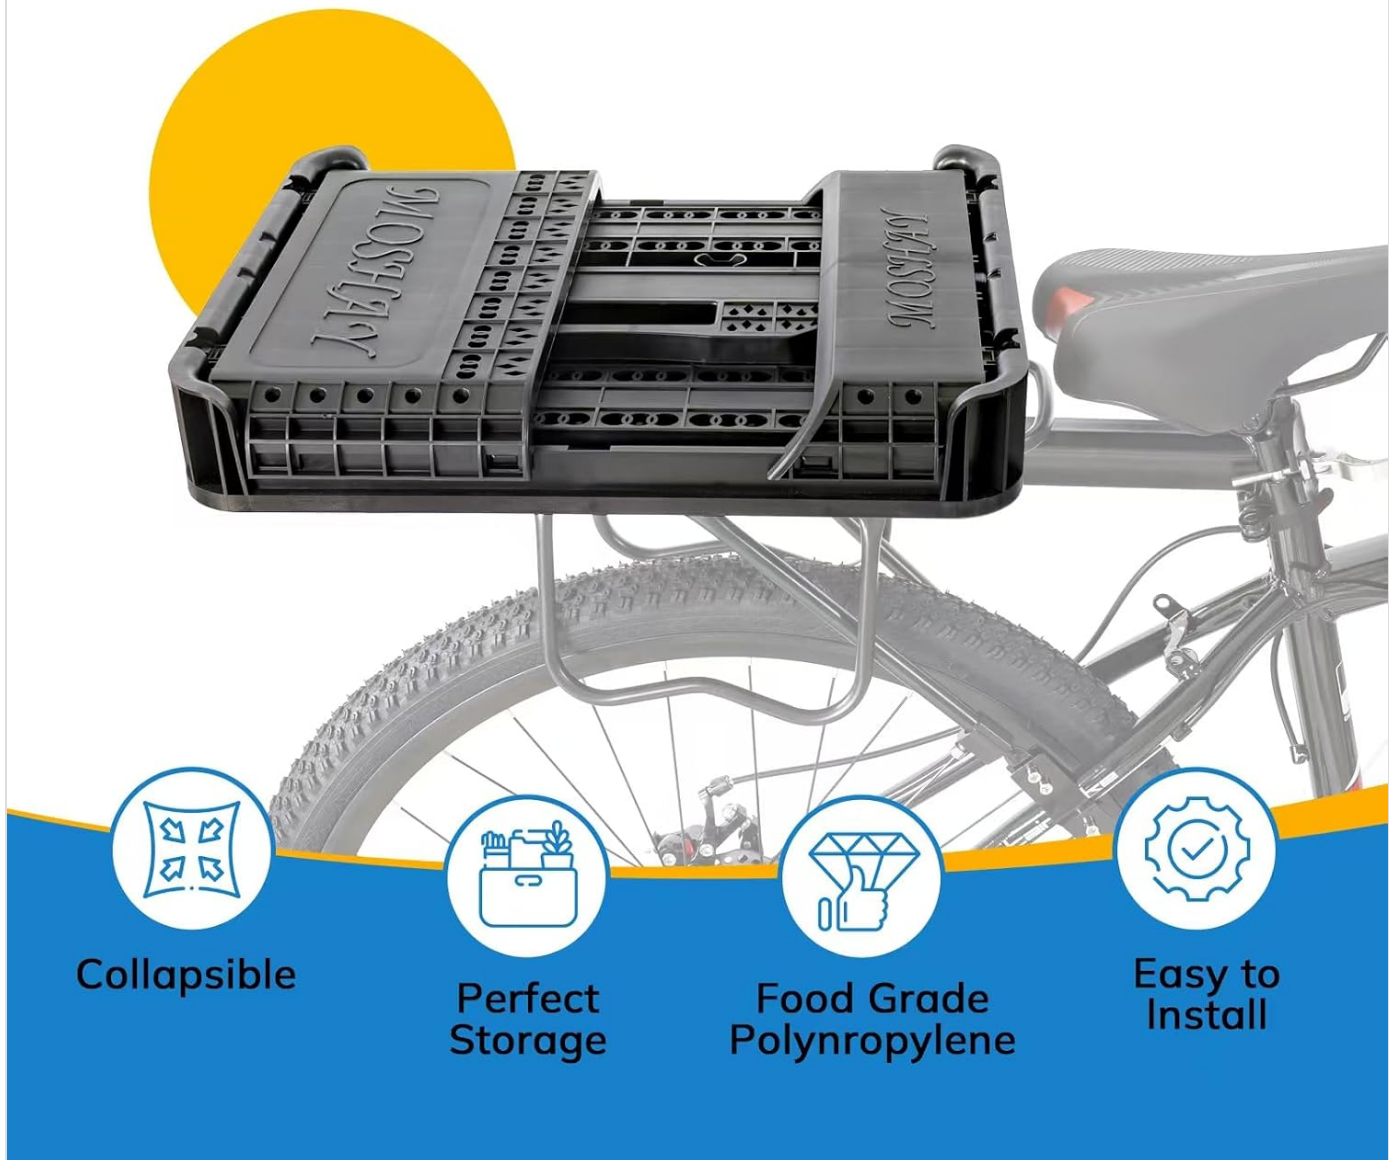


Figure 2: Folded Basket on Bicycle Rear Rack


SAFETY INFORMATION AND COMPATIBILITY

Before installing and using the basket, please review the following compatibility guidelines to ensure safe operation:

- This basket is **not suitable** for tilted rear racks.
- This basket is **not suitable** for small racks shorter than 25.4 cm (10 inches).
- This basket is **not suitable** for racks without extra space in the middle for mounting hardware.
- This basket is **not designed** for bicycles without rear racks or motorcycles with front racks.
- The maximum load weight for this basket is dependent on the weight capacity of your bicycle's rear rack. Always adhere to the rack manufacturer's specifications.
- Ensure all mounting hardware is securely fastened before each ride.
- Do not overload the basket. Distribute weight evenly to maintain bicycle stability.

Compatibility Visual Guide:

MATTERS NEEDING ATTENTION

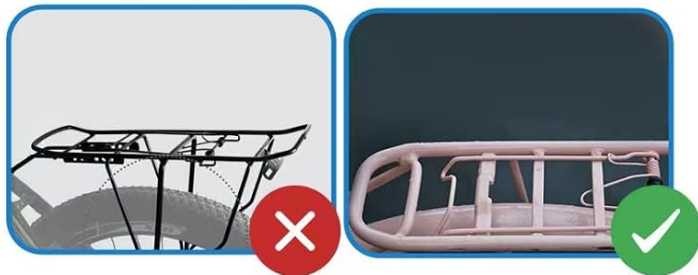

This bike rear basket is not compatible with any tilt tail basket rack, small basket rack shorter than 25.4cm /10 ", or basket rack with no extra space in the middle. It is not designed for bikes without basket racks or bikes with front basket racks.

Figure 3: Rear Rack Compatibility

SETUP AND INSTALLATION

The MOSHAY Foldable Bike Rear Basket is designed for straightforward installation on compatible bicycle rear racks. Follow these steps:

1. **Position the Basket:** Place the folded basket onto your bicycle's rear rack. Ensure the basket is centered and aligned properly.
2. **Orient the Mounting Plate:** Locate the mounting plate with the protruding side. It is crucial to ensure this **protruding side is facing downwards** during installation to secure the basket correctly to the rack.
3. **Secure with Hardware:** Use the provided U-bolts and nuts to attach the basket to the rear rack. Pass the U-bolts through the designated holes in the basket's base and around the rack tubing. Tighten the nuts securely with a wrench.
4. **Check Stability:** After tightening, gently shake the basket to ensure it is firmly attached and does not wobble. Re-tighten if necessary.
5. **Install Reflector:** The basket comes with a pre-installed rear reflector for increased visibility. Ensure it is clean and unobstructed.

Installation Detail:

EASY TO INSTALL



Figure 4: Correct Mounting Plate Orientation

Installation Video:

Your browser does not support the video tag.

Video 1: MOSHAY Bike Bicycle Foldable Rear Basket Installation Guide. This video demonstrates the step-by-step process of attaching the basket to a bicycle's rear rack and unfolding it for use.

OPERATING INSTRUCTIONS

Unfolding the Basket:

1. With the basket securely mounted in its folded position, lift the side panels upwards.
2. Push the bottom panel down firmly until it locks into place, creating the basket's base.
3. Ensure all four side panels are fully extended and locked into their upright positions.

Folding the Basket:

1. Empty the basket of all contents.
2. Locate the release mechanisms on the side panels (often small tabs or levers).
3. Press the release mechanisms and gently push the side panels inwards, allowing them to collapse.
4. Fold the basket flat for compact storage.

Using the Cargo Net:

The included cargo net is designed to secure items within the basket during transit. Stretch the net over your items and hook its elastic loops onto the basket's edges to prevent movement or loss.



Figure 5: Basket with Cargo Net in Use

MAINTENANCE

- **Cleaning:** Wipe the basket clean with a damp cloth and mild soap as needed. Avoid harsh chemicals that may damage the polypropylene material.
- **Inspection:** Regularly inspect the basket and its mounting hardware for any signs of wear, damage, or loose connections. Ensure the

folding mechanisms operate smoothly.

- **Storage:** When not in use, store the basket in a cool, dry place. If removed from the bike, store it in its folded state to save space.

TROUBLESHOOTING

Basket sides do not stay locked in place when unfolded:

Ensure the bottom panel is fully pushed down and locked. Check that the side panels are properly extended and engaged with their locking tabs. Apply firm pressure until they click into position.

Basket feels loose or wobbly on the bike rack:

Re-check all mounting hardware (U-bolts and nuts). Ensure they are tightened securely. Verify that the basket is correctly positioned on a compatible rear rack as described in the "Safety Information and Compatibility" section.

Difficulty folding or unfolding the basket:

Ensure the basket is empty. Check for any obstructions or debris in the folding mechanisms. Apply gentle, even pressure when operating the release tabs and folding the panels.

SPECIFICATIONS

Brand	MOSHAY
Model Number	B0DQSNRPTZ
Material	Food-Grade Polypropylene
Color	Black
Mounting Type	Rack Mount
Item Weight	Approx. 2.2 kg (4.8 lbs)
Capacity	Approx. 32 Liters
Included Components	Bike Storage Rear Basket, Cargo Net

WARRANTY AND SUPPORT

MOSHAY stands behind the quality of its products. This Foldable Bike Rear Basket comes with a **lifetime warranty** against manufacturing defects. For warranty claims, technical support, or any inquiries regarding your product, please contact MOSHAY customer service through the retailer where the product was purchased or visit the official MOSHAY website for contact information. Please have your model number (B0DQSNRPTZ) and purchase details ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DQSNRPTZ>

More documents and user manuals: **<https://manuals.plus/>**