

[Manuals.plus](#) /

> [ALLIMITY](#) /

> ALLIMITY VDQ7630 Replacement Remote Control User Manual for Yamaha Sound Bars

ALLIMITY VDQ7630

ALLIMITY VDQ7630 Replacement Remote Control User Manual

For Yamaha Sound Bar Models: SR-B20A, SR-C20A, SR-B20ABL, SR-C20ABL, ATS-C200

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your ALLIMITY VDQ7630 replacement remote control. This remote is designed to be compatible with various Yamaha Sound Bar models, including SR-B20A, SR-C20A, SR-B20ABL, SR-C20ABL, and ATS-C200.

Please read these instructions carefully before using the remote control to ensure proper functionality and to maximize your user experience.

SETUP

1. Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install or replace batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or in the direction indicated by an arrow to open it.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Close the battery cover by sliding it back into place until it clicks securely.

Note: Always use new alkaline batteries for optimal performance. If the remote control is not used for an extended period, remove the batteries to prevent leakage.

2. Initial Use and Compatibility

This replacement remote control is pre-programmed and does not require any setup codes. It is designed to work directly with the following Yamaha Sound Bar models:

- SR-B20A
- SR-C20A
- SR-B20ABL
- SR-C20ABL
- ATS-C200

- VDQ7630 (original remote model)

To operate your sound bar, simply point the remote control directly at the IR sensor on your Yamaha Sound Bar unit. Ensure there are no obstructions between the remote control and the sound bar's IR sensor.

OPERATING INSTRUCTIONS

The ALLIMITY VDQ7630 remote control provides access to various functions of your Yamaha Sound Bar. Below is a general overview of the buttons and their functions.



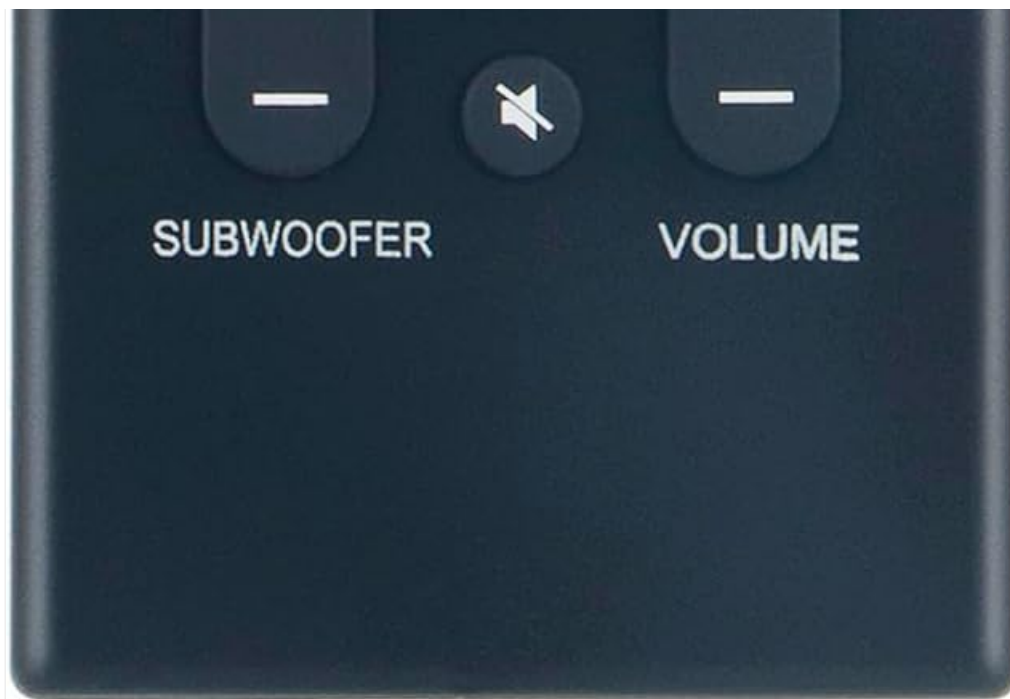


Image: Front view of the ALLIMITY VDAQ7630 replacement remote control. This image displays the layout of all buttons, including power, input selection, sound modes, and volume controls.

Button Functions:

- **Power Button ():** Turns the sound bar on or off.
- **Input Selection Buttons (TV, OPTICAL, BLUETOOTH):** Selects the audio input source for the sound bar.
- **INFO Button:** Displays information about the current status or settings of the sound bar.
- **CLEAR VOICE Button:** Enhances dialogue clarity, making voices easier to hear.
- **3D SURROUND Button:** Activates or deactivates the 3D surround sound effect.
- **Sound Mode Buttons (STEREO, STANDARD, MOVIE, GAME):** Selects different audio modes optimized for various content types.
- **BASS EXT Button:** Engages or disengages the Bass Extension feature for enhanced low-frequency sound.
- **DIM Button:** Adjusts the brightness of the sound bar's display indicators.
- **Mute Button ():** Mutes or unmutes the sound bar's audio output.
- **SUBWOOFER Volume (+/-):** Increases or decreases the volume level of the connected subwoofer.
- **VOLUME (+/-):** Increases or decreases the main volume level of the sound bar.

MAINTENANCE

Battery Replacement

If the remote control's performance degrades or it stops responding, it may be time to replace the batteries. Refer to the "Battery Installation" section under Setup for detailed instructions. Always replace both batteries simultaneously with new alkaline batteries.

Cleaning the Remote Control

To clean the remote control, gently wipe its surface with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote's finish or internal components.

TROUBLESHOOTING

If you experience issues with your ALLIMITY VDAQ7630 remote control, please consult the following troubleshooting tips:

- **Remote Control Not Responding:**

- Check the batteries: Ensure batteries are inserted correctly with the correct polarity (+/-). Replace old batteries with new alkaline batteries.
- Check the line of sight: Make sure there are no objects blocking the path between the remote control and the IR sensor on your Yamaha Sound Bar.
- Proximity: Ensure you are within a reasonable operating range of the sound bar.

- **Remote Control Only Works Intermittently:**

- Weak batteries: Replace batteries with new ones.
- Interference: Ensure no strong light sources (like direct sunlight or fluorescent lights) are interfering with the IR signal.

- **Remote Control Does Not Work with My Sound Bar Model:**

- Verify compatibility: Confirm that your Yamaha Sound Bar model is listed in the "Initial Use and Compatibility" section of this manual. This remote is specifically designed for the listed models.
- Contact support: If your model is listed and the remote still does not function, or if your model is not listed and you require assistance, please contact customer support.

SPECIFICATIONS

PRODUCT SIZE

2.17 in / 5.5 cm

4.92 in / 12.5 cm



Image: Product size diagram for the ALLIMITY VDQ7630 remote control. The image indicates a length of 4.92 inches (12.5 cm) and a width of 2.17 inches (5.5 cm).

Model Number	VDQ7630 (ZCM-M133-VDQ7630-GX)
Brand	ALLIMITY
Compatible Devices	Yamaha Sound Bars (SR-B20A, SR-C20A, SR-B20ABL, SR-C20ABL, ATS-C200)

Product Dimensions	5 x 2 x 0.6 inches (approximately 12.7 x 5.08 x 1.52 cm)
Item Weight	1 ounce (approximately 28 grams)
Color	Black
Power Source	2 x AAA Batteries (not included)

CUSTOMER SUPPORT

If you have any questions, concerns, or encounter problems with your ALLIMITY VDQ7630 replacement remote control that are not addressed in this manual, please do not hesitate to contact our customer support team.

We are committed to providing assistance and aim to respond to all inquiries within 24 hours. When contacting support, please provide your product model number (VDQ7630) and a detailed description of the issue.

For contact information, please refer to the seller's details on the platform where you purchased the product.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DQTTB5XH>

More documents and user manuals: <https://manuals.plus/>