

[Manuals.plus](#) /

› [MONOZEL](#) /

› MONOZEL Portable Cordless Car Vacuum & Air Duster Instruction Manual

MONOZEL VC026

MONOZEL Portable Cordless Car Vacuum & Air Duster

Model: VC026

1. INTRODUCTION

Thank you for choosing the MONOZEL 18000Pa 2-in-1 Portable Cordless Car Vacuum & Air Duster. This versatile device is designed to provide powerful cleaning and dusting capabilities for your car, home, and office. Featuring a 130W brushless motor and a 7800mAh battery, it offers efficient and convenient cleaning with both vacuum and blow functions. Please read this manual thoroughly before use to ensure proper operation and maintenance.

2. PRODUCT OVERVIEW & WHAT'S INCLUDED

Your MONOZEL vacuum comes with a variety of accessories to enhance its functionality.



Figure 2.1: All included accessories for the MONOZEL 2-in-1 Portable Cordless Car Vacuum & Air Duster.

Components:

- Main Machine (Vacuum/Air Duster Unit)
- Dust Bin
- Metal Filter
- HEPA Filter (2 included)
- Type-C Charging Cable

Accessories:

- Floor Brush
- Hair Brush
- Flat Nozzle
- Corrugated Hose
- Hose Connection Adapters
- Small Brush (for cleaning)
- Inflatable Nozzles (Large, Medium, Small)

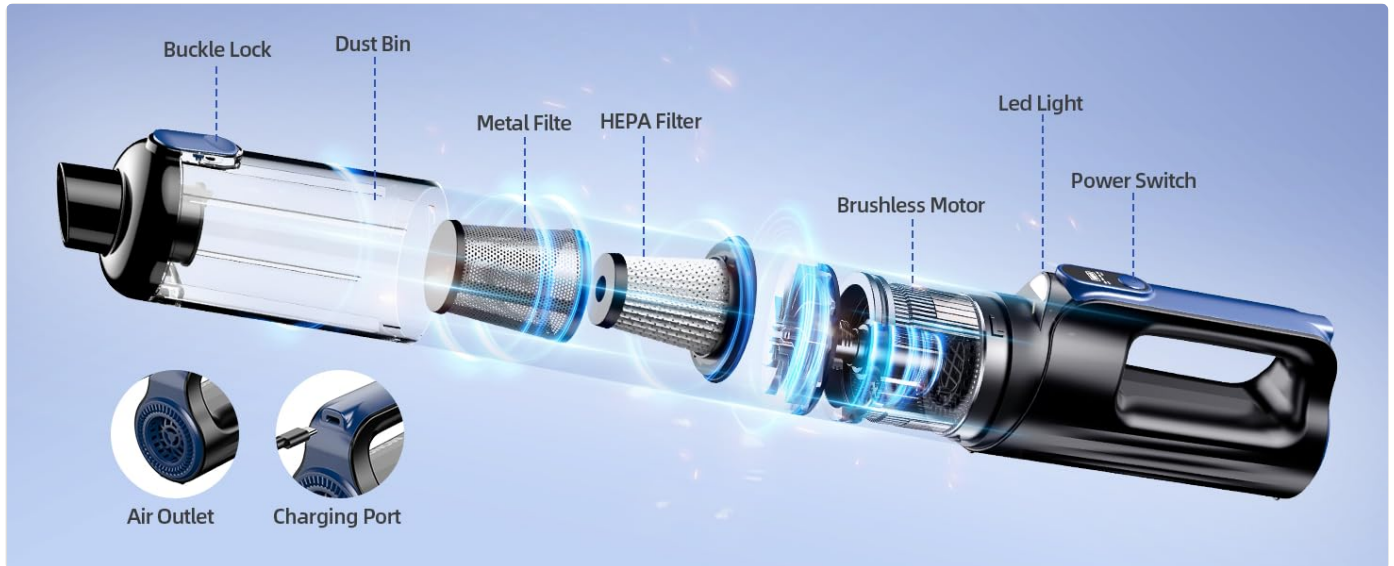


Figure 2.2: Exploded view of the vacuum components.

3. SETUP

3.1 Charging the Device

Before first use, fully charge the vacuum. The device uses a Type-C charging port and comes with a compatible cable. A full charge takes approximately 2.5-3 hours.

1. Connect the Type-C charging cable to the charging port on the vacuum (located near the handle).
2. Connect the other end of the cable to a compatible USB power source (e.g., car charger, power adapter, power bank).
3. The LED indicator lights will show charging progress. All lights will be solid when fully charged.



Figure 3.1: Charging the MONOZEL vacuum.

3.2 Attaching Accessories

To attach a nozzle or brush, simply align it with the vacuum's suction opening and push firmly until it clicks into place. For the corrugated hose, use the appropriate hose connectors.

Video 3.1: Demonstration on how to assemble the hose attachment for the vacuum.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off & Mode Selection

1. Press the power button once to turn on the vacuum in Eco Mode (9000Pa suction).
2. Press the power button a second time to switch to Max Mode (18000Pa suction).
3. Long press the power button to turn off the device.
4. The LED display will show the current battery level and selected mode.

4.2 Vacuum Function

Use the appropriate vacuum nozzle for different surfaces and debris. The LED light on the front assists in illuminating dark areas for thorough cleaning.



Figure 4.1: Effective vacuuming of various debris.



Figure 4.2: Different nozzles for specific vacuuming tasks.

4.3 Air Duster Function

To use as an air duster, attach the desired inflatable nozzle to the air outlet at the back of the vacuum. This function is ideal for blowing away dust, inflating small items, or assisting with fire starting.



Figure 4.3: Applications of the air duster function.

Video 4.1: Comprehensive overview of the MONOZEL Handheld Vacuum & Air Duster 2-in-1 functionality.

Video 4.2: Detailed look at the best features of the MONOZEL Vacuum.

5. MAINTENANCE

5.1 Emptying the Dust Bin

The dust bin has a one-click dismantling mechanism for easy emptying.

1. Press the buckle lock button on the dust bin to release it from the main unit.
2. Twist the dust bin counter-clockwise to separate it.
3. Empty the collected debris into a trash receptacle.

5.2 Cleaning the Filters

The MONOZEL vacuum uses a metal filter and a HEPA filter, both of which are washable and reusable.

1. After emptying the dust bin, remove the metal filter and then the HEPA filter.
2. Rinse both filters under running water until clean.
3. Allow the filters to air dry completely before reassembling them into the dust bin and attaching it back to the vacuum. Ensure they are completely dry to maintain suction power and prevent damage.



Figure 5.1: Steps for cleaning the dust bin and filters.

6. TROUBLESHOOTING

If you encounter any issues with your MONOZEL vacuum, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power/Device won't turn on	Low battery; Device not charged	Charge the device fully using the provided Type-C cable.
Weak suction power	Dust bin full; Filters clogged; Nozzle/Hose blocked	Empty the dust bin. Clean or replace the filters. Check nozzles and hose for blockages.
Device stops unexpectedly	Overheating; Low battery	Allow the device to cool down. Charge the battery.
Air duster function is weak	Nozzle blocked; Low battery	Check the nozzle for any obstructions. Charge the battery.

7. SPECIFICATIONS

Feature	Detail
Brand	MONOZEL
Model Name	VC026
Special Feature	Cordless
Filter Type	HEPA Filter
Motor Power	130W Brushless Motor
Max Suction Power	18000Pa
Eco Suction Power	9000Pa

Feature	Detail
Battery Capacity	7800mAh
Charging Time	2.5-3 hours (Type-C)
Runtime (Eco Mode)	Up to 32 minutes
Runtime (Max Mode)	Up to 18 minutes
Item Weight	1.43 pounds
Product Dimensions	13.94"L x 3.1"W x 3.8"H
Dust Cup Capacity	0.26 Liters
Recommended Uses	Car, Home, Office, Pet

8. WARRANTY & SUPPORT

MONOZEL products are manufactured to the highest quality standards. For warranty information, product support, or any inquiries, please refer to the warranty card included in your product packaging or visit the official MONOZEL website. You may also contact customer service via your purchase platform for assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question