

[Manuals.plus](#) /

› [MONOZEL](#) /

› MONOZEL Cordless Handheld Vacuum Cleaner & Air Duster User Manual

MONOZEL VC026

MONOZEL Cordless Handheld Vacuum Cleaner & Air Duster User Manual

Brand: MONOZEL | Model: VC026

1. INTRODUCTION

Thank you for choosing the MONOZEL Cordless Handheld Vacuum Cleaner & Air Duster. This versatile 2-in-1 device is designed for efficient cleaning in various environments, including your car, home, and office. Featuring a powerful 130W brushless motor, it offers both strong suction (up to 18000Pa) and effective blowing capabilities. This manual provides essential information for safe operation, optimal performance, and proper maintenance of your device.



Figure 1.1: The MONOZEL 2-in-1 Cordless Handheld Vacuum Cleaner and its included accessories.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package. If any items are missing or damaged, please contact customer support.

- Main Vacuum/Duster Unit
- Flat Nozzle (for narrow gaps and edges)
- Brush Nozzle (for upholstery, pet hair, and delicate surfaces)
- Floor Nozzle (for larger floor areas and car carpets)
- Extension Tube (for hard-to-reach areas)
- Corrugated Hose
- Small Inflatable Nozzle
- Medium Inflatable Nozzle
- Large Inflatable Nozzle

- Type-C Charging Cable
- HEPA Filter (pre-installed)
- Metal Filter (pre-installed)

130W STRONG BRUSHLESS MOTOR WITH 115000 RPM



ENERGY-EFFICIENT
50% Power
Consumption

MAX SUNCTION
18000 PA

ECO
9000 PA

MOTOR LIFE
3 TIMES

SUCTION LEVEL
2 TIMES

EFFICIENCY
2 TIMES

Figure 2.1: A comprehensive view of all components and accessories included in the product package.

3. SETUP AND FIRST USE

3.1 Initial Charging


Before first use, fully charge the vacuum cleaner. Connect the provided Type-C charging cable to the charging port on the device and plug the other end into a compatible USB power source (e.g., car charger, power adapter, power bank). The charging indicator light will provide status. A full charge typically takes 2.5 to 3 hours.

ACCESSORIES INSTALLATION AND USE

Install the corresponding accessories according to different occasions.

⚠ Note: Please turn off the vacuum cleaner before replacing the accessories.

Vacuum function

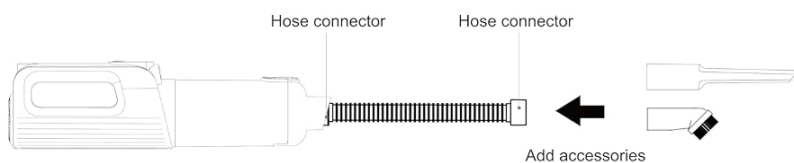

❶ Corrugated hose: It can be twisted at any angle, and other accessories can be added to clean all kinds of corners that cannot be reached.



❷ Brush: It has the dual functions of suction and wiping, and is suitable for cleaning dust on various surfaces such as cushions, floor cushions, keyboards, and air conditioning outlets.



❸ Long nozzle: It is suitable for dust cleaning in various crevices such as car doors, seats, cabinet corners, drawers and ashtrays.



❹ Small floor brush: suitable for dust cleaning of floor, trunk, mattress, sofa and all kinds of large flat surface.

Inflatable function



❺ Medium nozzle: It is suitable for inflating swimming beds, air mattresses, etc.



❻ Trumpet nozzle: It is suitable for inflating lifebuoys, balloons, yoga balls, etc.

Blowing function



❼ Large nozzle: It is suitable for cleaning dust from windows, motherboards, keyboards, cases, etc., and can also be used as a blower to light a fire for barbecues, blow water for succulents, etc., and can also be used to inflate swimming pools, kayaks, children's castles, etc.

Figure 3.1: The vacuum cleaner connected via Type-C for charging, illustrating compatible power sources.

3.2 Attaching Accessories

Ensure the vacuum cleaner is turned off before attaching or detaching any accessories. Select the appropriate nozzle or hose for your cleaning task and firmly attach it to the suction/blowing port until it clicks into place. The corrugated hose can be twisted to reach various angles.



Figure 3.2: Visual guide for attaching various accessories for both vacuum and blowing functions.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off and Mode Selection

Press the power button to turn the device on. It will start in Eco Mode (9000Pa suction). Press the power button again to switch to Max Mode (18000Pa suction) for more powerful cleaning. Press a third time to turn the device off. The integrated LED light will illuminate when the device is on, assisting in low-light conditions.

4.2 Vacuum Function

Attach the desired vacuum nozzle to the front port. For general debris, pet hair, and crumbs, use the brush or floor nozzle. The flat nozzle is ideal for narrow crevices and edges. The extension tube and corrugated hose provide flexibility for hard-to-reach areas like under seats or in tight corners.



Figure 4.1: Examples of how different nozzles are used for various vacuuming tasks, including flat, brush, floor, and extended hose applications.



Figure 4.2: The vacuum's suction capability demonstrated on various types of debris, such as dust, pet hair, and food residue.

4.3 Air Duster Function

To use as an air duster, attach one of the inflatable nozzles to the rear air outlet. This function is suitable for blowing away dust from keyboards, car vents, or inflating small items like balloons and swimming rings. Ensure the correct nozzle size is selected for the inflation task.



FLAT NOZZLE

For seats, windows, gaps, etc



BRUSH NOZZLE

For sofa, table, computer, etc



FLOOR NOZZLE

For floor carpet, car seats



EXTENDED HOSE

For hard-to-reach nooks and crannies

Figure 4.3: Various uses of the air duster function, from cleaning electronics to inflating small objects.

1.4LB LIGHTWEIGHT



Figure 4.4: Illustration of the device's dual functionality as both a vacuum cleaner and an air duster.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

5.1 Emptying the Dust Cup

To empty the dust cup, press the one-click dismantling button to detach it from the main unit. Dispose of the collected debris into a trash bin. It is recommended to empty the dust cup after each use or when it reaches its maximum capacity (0.26L).

5.2 Cleaning the Filters

The device includes a HEPA filter and a metal filter. Both are washable and reusable. After emptying the dust cup, rotate to detach the metal filter, then the HEPA filter. Rinse both filters under running water until clean. Ensure they

are completely dry before reassembling them into the dust cup and reattaching to the main unit. Do not use the vacuum cleaner with wet filters.

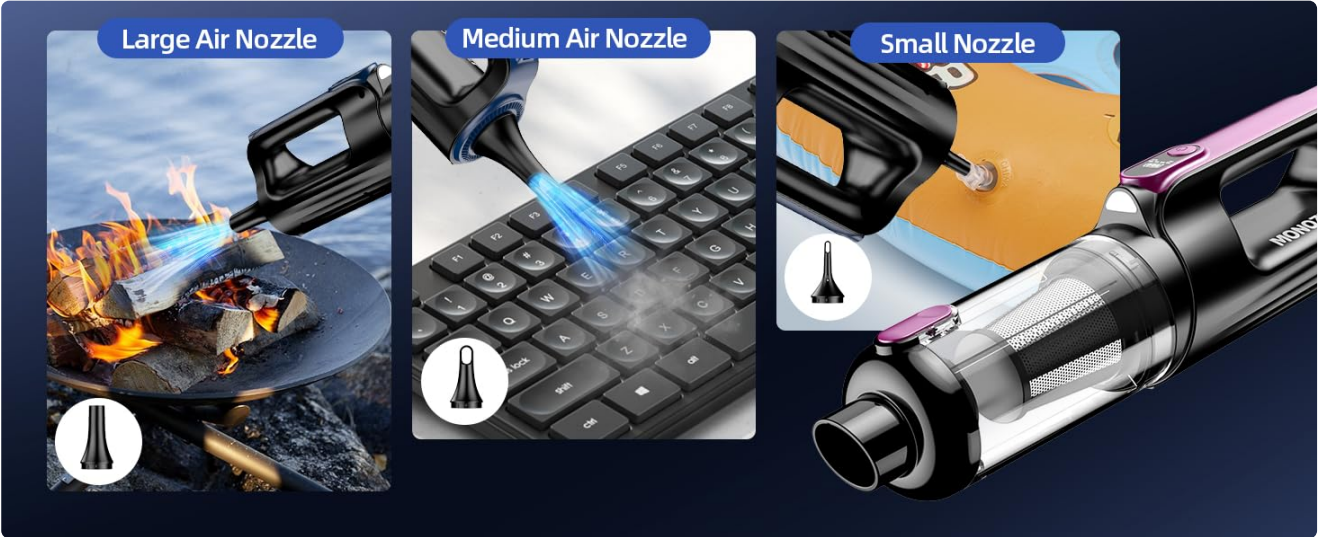


Figure 5.1: Detailed steps for disassembling the dust cup, detaching filters, and washing them for reuse.

6. TROUBLESHOOTING

If you encounter issues with your MONOZEL vacuum cleaner, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device fully (2.5-3 hours).
Low suction power.	Dust cup is full.	Empty the dust cup.
Low suction power.	Filters are clogged.	Clean and dry the HEPA and metal filters.
Low suction power.	Nozzle or hose is blocked.	Remove any obstructions from the nozzle or hose.
Device not charging.	Charging cable or adapter issue.	Ensure the Type-C cable is securely connected and try a different USB power source.
Unusual noise during operation.	Obstruction in the motor or fan.	Turn off the device immediately. Check for and remove any foreign objects. If the noise persists, contact customer support.

If the problem persists after attempting these solutions, please contact MONOZEL customer support for further assistance.

7. SPECIFICATIONS

Feature	Detail
Brand	MONOZEL
Model Name	VC026
Motor Type	Brushless Motor
Motor Power	130W
Max Suction Power	18000Pa (Max Mode)
Eco Suction Power	9000Pa (Eco Mode)
Battery Capacity	7800mAh
Charging Time	2.5 - 3 hours (Type-C)
Runtime	Up to 32 mins (Eco Mode) / 18 mins (Max Mode)
Filter Type	HEPA Filter (Washable)
Dust Cup Capacity	0.26 Liters
Item Weight	1.43 pounds (approx. 0.65 kg)
Product Dimensions	13.94"L x 3.1"W x 3.8"H
Special Features	Cordless, 2-in-1 Vacuum & Air Duster, LED Light

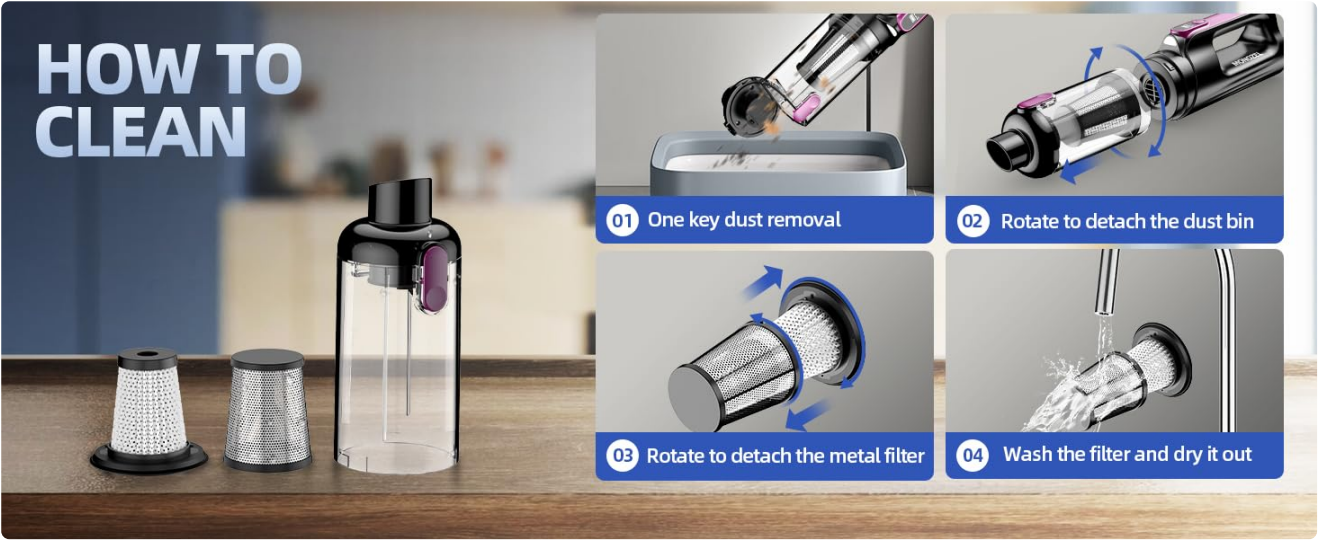 


Figure 7.1: Internal components of the vacuum cleaner, including the brushless motor, filters, and dust bin.

8. WARRANTY AND SUPPORT

MONOZEL products are manufactured to high-quality standards. For specific warranty details, please refer to the warranty card included with your product packaging or visit the official MONOZEL website. If you have any

questions, require technical assistance, or need to report an issue, please contact MONOZEL customer support through the contact information provided on the product packaging or the official website.

Please retain your purchase receipt as proof of purchase for warranty claims.

© 2025 MONOZEL. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question