

- Manuals.plus /
- > JOVELL /
 - > JOVELL DVD Player Model-168 Instruction Manual

JOVELL DVD-168

JOVELL DVD Player Model-168 Instruction Manual

Your comprehensive guide to setup, operation, and maintenance.

1. INTRODUCTION

Thank you for choosing the JOVELL DVD Player Model-168. This device is designed to enhance your home entertainment experience with its versatile features and high-quality output. This manual will guide you through the setup, operation, and maintenance of your new DVD player.



Image: The JOVELL DVD Player Model-168, accompanied by its remote control, HDMI cable, and RCA cable.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 1 x JOVELL DVD Player Model-168
- 1 x Remote Control
- 1 x HDMI Cable
- 1 x RCA Cable
- 1 x User Manual

3. SETUP

3.1 Connecting to Your TV

The JOVELL DVD Player Model-168 offers both HDMI and RCA connections for compatibility with various television models.

Using HDMI (Recommended for 1080P Upscaling)

1. Locate the HDMI OUT port on the back of the DVD player.
2. Connect one end of the included HDMI cable to the HDMI OUT port on the DVD player.
3. Connect the other end of the HDMI cable to an available HDMI IN port on your television. Note the HDMI input number (e.g., HDMI 1, HDMI 2).

Using RCA (for Older TVs)

1. Locate the RCA (red, white, yellow) output ports on the back of the DVD player.
2. Connect the corresponding colored plugs of the included RCA cable to the RCA output ports on the DVD player.
3. Connect the other end of the RCA cable to the matching colored RCA input ports on your television.

HDMI and AV Connections

HDMI Jack for Smart TV/Projector/Monitor



RCA Jacks for Older TVs Speakers/Soundbars



Image: Rear view of the DVD player highlighting HDMI and RCA connection ports.

1080P HD Upscaling



Full-HD Image

VS



Standard Image

Image: Visual guide for connecting the DVD player to a modern TV via HDMI and an older TV via RCA cables.

3.2 Power Connection

1. Plug the power cord into the AC INPUT port on the back of the DVD player.
2. Plug the other end of the power cord into a standard electrical outlet (100-240V~ 50/60Hz).
3. Press the Power button on the front panel or the remote control to turn on the player.

4. OPERATING INSTRUCTIONS

4.1 Loading and Playing Discs

The DVD player supports various disc formats including CD, DVD, DVD-R/DVD+R, DVD-RW/DVD+RW, CD-R/CD-RW, VCD, and SVCD. **Note: Blu-ray Discs are not supported.**

1. Press the OPEN/CLOSE button on the front panel or remote control to open the disc tray.
2. Place a compatible disc onto the disc tray with the label side facing up.
3. Press the OPEN/CLOSE button again to close the disc tray. The player will automatically begin loading and playing the disc.
4. Use the PLAY, PAUSE, STOP, and navigation buttons on the remote control to manage playback.



Multi-format Playback

Support Discs Format: CD,DVD,DVD-R/+R,DVD-RW/+RW, CD-R/-RW,VCD,SVCD.

Note: Not Support Blu-ray Discs!



Image: The DVD player displaying its multi-format playback feature, compatible with various disc types.

4.2 USB Playback

The built-in USB port allows you to play digital audio and video files directly from a USB 2.0 flash drive (up to 64GB). Supported video formats include AVI, MPG, MPEG4, VOB (720*480/576 resolution). **Note: USB 3.0 and MP4 file playback via USB are not supported.**

1. Insert your USB 2.0 flash drive into the USB port on the front of the DVD player.
2. The player should automatically detect the USB drive and display a menu for file selection. If not, press the USB button on the remote control (if available) or navigate to the USB input option.
3. Use the navigation buttons on the remote control to browse and select your desired files for playback.

Support USB Input

Video: AVI, DIVX, VOB, MPG, MPEG4, FLV

Audio: MP3, WMA, MPEG1



Don't Support USB 3.0 and MP4 file playback via USB.

Image: A USB flash drive being inserted into the front USB port of the DVD player.

4.3 Remote Control Functions

The included remote control provides full functionality for operating your DVD player. It requires two AAA batteries (not included).

- **Power:** Turns the player on/off.
- **OPEN/CLOSE:** Opens and closes the disc tray.
- **PLAY/PAUSE:** Starts or pauses playback.
- **STOP:** Stops playback.
- **Navigation Buttons (Up/Down/Left/Right/OK):** Navigate menus and confirm selections.
- **Fast/Slow Playback:** Adjusts playback speed.
- **Zoom:** Magnifies the picture.
- **Repeat:** Repeats a chapter, title, or entire disc.
- **Subtitle:** Selects subtitle language.

- **Audio:** Selects audio track.

4.4 Special Features

- **1080P Upscaling:** Boosts the quality of your DVD collection to near HD picture quality when connected via HDMI.



Image: The DVD player showcasing its 1080P HD picture quality on a television screen.

- **Region-Free Playback:** This DVD player is designed to play DVDs from any region (1~6), with the exception of Japan CPRM Discs.

Multi Region

Plays DVDs from All Regions and Zones



DVD
VIDEO



CD,DVD,DVD-R/+R,DVD-RW/+RW,
CD-R/-RW,VCD,SVCD.

NOTE: Not Support Blu-ray Discs!

Image: The DVD player positioned against a world map, illustrating its region-free playback capability.

- **Breakpoint Memory:** The player remembers the last stopping point of your disc, allowing you to resume playback from where you left off.

Resume-Play Function

Measuring just 8.9 in (225 mm) in length



Image: A visual representation of the resume-play function, showing a movie resuming after the player was powered off.

- **Fast Reading & Smart Error Correction:** Equipped with Progressive-scan Technology and a Sanyo drive core for improved reading speed and noise reduction. Anti-skip protection ensures a smooth viewing experience.

Read Disc In 1 Second

Original Imported Chip

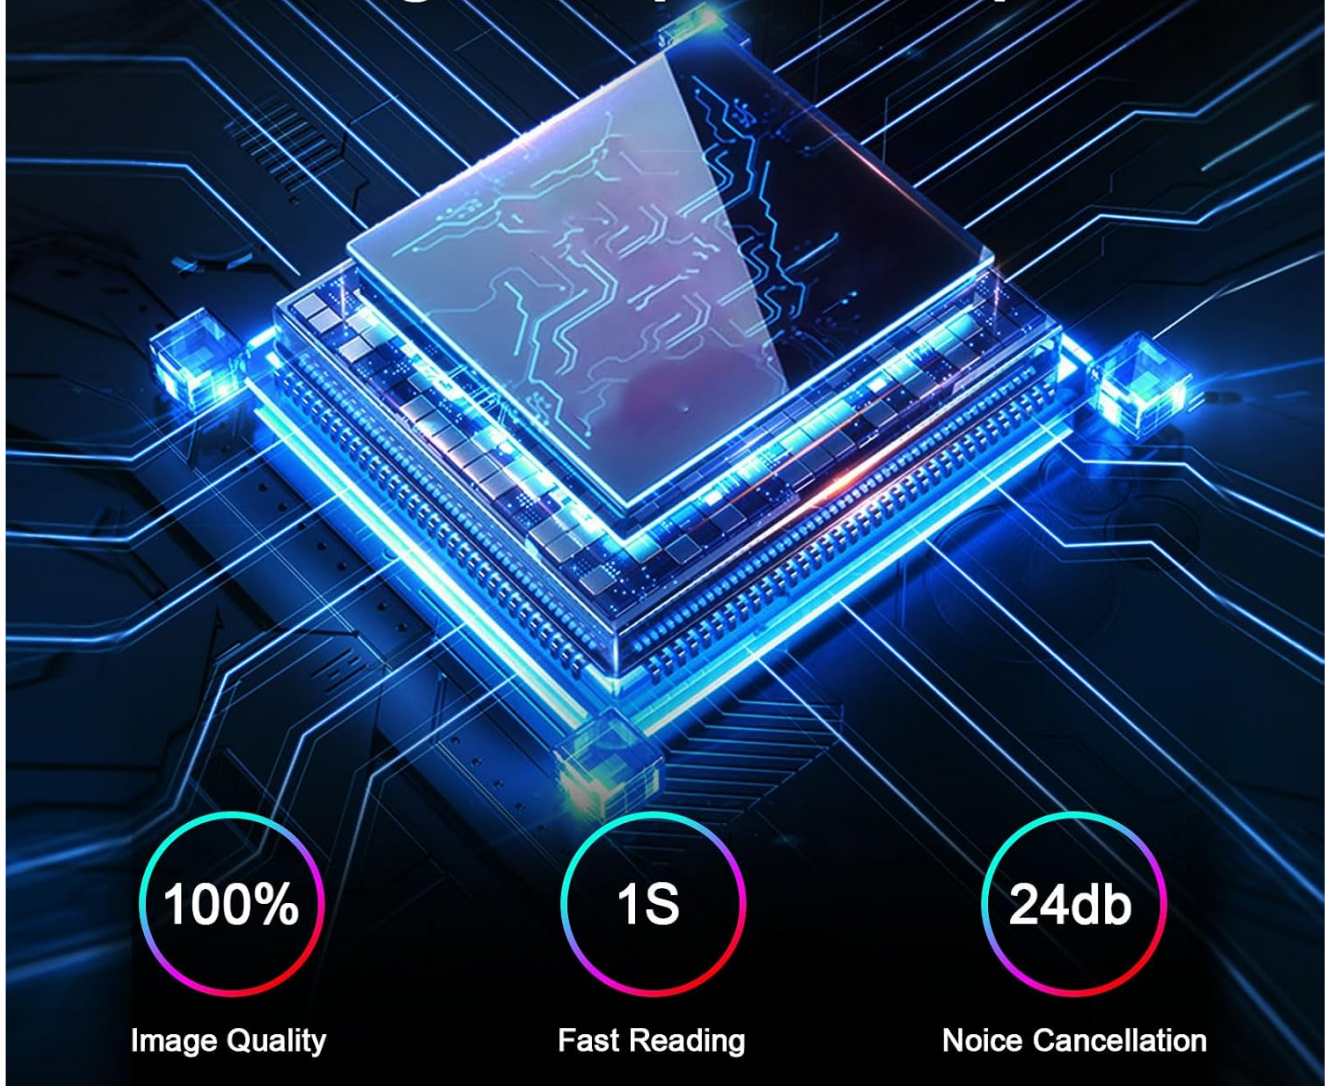


Image: An internal view of the DVD player's chip, highlighting features like image quality, fast reading, and noise cancellation.

4.5 Official Product Video

Video: An official overview of the JOVELL DVD-168 Region-Free DVD CD Player, demonstrating its features and compact design.

5. MAINTENANCE

- **Cleaning the Player:** Use a soft, dry cloth to clean the exterior of the DVD player. Do not use liquid cleaners or aerosol sprays.
- **Cleaning Discs:** Use a soft, lint-free cloth to wipe discs from the center outwards. Avoid touching the playback surface with your fingers.
- **Storage:** Store the DVD player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Disc Handling:** Always handle discs by their edges to prevent scratches and fingerprints. Return discs to their cases after use.

6. TROUBLESHOOTING

- **No Power:** Ensure the power cord is securely plugged into both the player and the electrical outlet. Try a different outlet.
- **No Picture/Sound:** Verify that the HDMI or RCA cables are correctly connected to both the player and the TV. Ensure your TV input is set to the correct HDMI or AV channel.
- **Disc Not Playing/Reading:** Check if the disc is clean and free of scratches. Ensure the disc format is supported by the player (not Blu-ray). Try a different disc.
- **USB Drive Not Recognized:** Ensure the USB drive is formatted to FAT32 and is USB 2.0 (up to 64GB). Check that the files are in supported formats (AVI/MPG/MPEG4/VOB).
- **Remote Control Not Working:** Check and replace the AAA batteries. Ensure there are no obstructions between the remote and the player's sensor.

7. SPECIFICATIONS

Feature	Description
Brand	JOVELL
Model Name	DVD-168
Product Dimensions	8.9 x 6.9 x 1.5 inches
Item Weight	2.29 pounds (1.04 Kilograms)
Color	Black
Media Type Supported	CD, DVD, DVD-R/DVD+R, DVD-RW/DVD+RW, CD-R/CD-RW, VCD, SVCD (Not Blu-ray)
Special Features	Anti-Shock, Multi-Format Playback, Noise Reduction Technology, Progressive Scan, Region Free, Breakpoint Memory
Resolution	1920x1080 (1080P Upscaling)
Connector Type	HDMI, RCA
Connectivity Technology	HDMI, RCA
Audio Output Mode	Surround
USB Input	USB 2.0 (up to 64GB), supports AVI/MPG/MPEG4/VOB. Does not support USB 3.0 & MP4.

8. WARRANTY AND SUPPORT

Your JOVELL DVD Player Model-168 comes with a **12-month return and refund policy without reason** For any inquiries or assistance, please contact our **24-hour friendly customer support**. For further support, please refer to the contact information provided in your included User Manual.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DQTXF5HR>

More documents and user manuals: <https://manuals.plus/>