

[Manuals.plus](#) /

› [Beyution](#) /

› Beyution MR24GN Magic Voice Remote Control User Manual for LG 2024 TVs

Beyution MR24GN

Beyution MR24GN Magic Voice Remote Control User Manual

For LG 2024 OLED and QNED Smart TVs

1. INTRODUCTION

This manual provides detailed instructions for setting up, operating, and maintaining your Beyution MR24GN Magic Voice Remote Control. This remote is designed as a replacement for compatible LG 2024 Smart TVs, offering voice search functionality and intuitive control.

2. PRODUCT OVERVIEW

The Beyution MR24GN remote control is engineered for ease of use and reliable performance with your LG Smart TV. It features a lightweight, ergonomic design for comfortable handling and responsive buttons.

Key Features:

- **Voice Search Functionality:** Enables convenient voice commands for TV operation.
- **Ergonomic Design:** Lightweight and comfortable to grip.
- **Responsive Buttons:** Buttons offer good elasticity for effortless pressing.
- **Advanced IR Technology:** Provides a control range of up to 30 feet (10 meters) and multi-angle control (0-180 degrees).
- **Durable Material:** Constructed from ABS plastic.

Package Contents:

- 1 x Beyution MR24GN Magic Voice Remote Control
- *Note: AAA batteries are not included and must be purchased separately.*



Figure 2.1: Front view of the Beyution MR24GN Magic Voice Remote Control, highlighting its voice search capability.



Figure 2.2: The remote control emphasizing its design for fast response, comfortable feel, and quality.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover until it clicks securely into place.



Figure 3.1: The remote control requires two AAA batteries for operation.

3.2 Pairing the Remote Control

This remote control requires pairing with your LG Smart TV to enable full functionality, especially voice search. Follow these steps to pair your remote:

1. Ensure your LG Smart TV is powered on.
2. Point the remote control towards your TV.
3. Press and hold the **HOME** button (usually depicted as a house icon) and the **BACK** button (usually depicted as a curved arrow) simultaneously for approximately 5-10 seconds.
4. Release the buttons when a pairing message appears on your TV screen, indicating that the remote is connecting.
5. Once the pairing is successful, a confirmation message will appear on the screen. The remote control is now ready for use.

Note: If pairing fails, ensure the batteries are correctly installed and try the pairing process again. Move closer to the TV if necessary.

4. OPERATING INSTRUCTIONS

The Beyution MR24GN remote control provides intuitive access to your LG Smart TV's features.

4.1 Basic Navigation

- **Power Button:** Turns the TV on or off.
- **Number Buttons (0-9):** Directly input channel numbers.
- **Volume Up/Down:** Adjusts the TV volume.
- **Channel Up/Down:** Changes TV channels.
- **Directional Pad (Up, Down, Left, Right) and Scroll Wheel:** Navigate menus and select items. The scroll wheel can also be pressed for selection.
- **Home Button:** Accesses the TV's main menu or Smart Home dashboard.
- **Back Button:** Returns to the previous screen or menu.
- **Quick Access Buttons:** Dedicated buttons for popular streaming services like Netflix, Prime Video, Disney+, Sling, and Alea.

4.2 Using Voice Search

After successful pairing, you can use the voice search feature:

1. Press and hold the **Microphone Button** (usually depicted as a microphone icon) on the remote control.
2. Speak clearly into the remote control's microphone.
3. Release the Microphone Button when you have finished speaking.
4. Your TV will process the voice command and display relevant results or perform the requested action.

FREE CONTROL WITH ADVANCED IR TECHNOLOGY



Figure 4.1: The remote offers a 30ft long-range control and 0-180 degree multi-angle control for flexible use.

5. MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops working. Always replace both batteries at the same time with new AAA batteries.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, remove the batteries to prevent leakage.
- **Avoid Drops:** While durable, repeated drops can damage internal components. Handle the remote with care.

6. TROUBLESHOOTING

If you encounter issues with your Beyution MR24GN remote control, refer to the following solutions:

6.1 Remote Not Responding

- **Check Batteries:** Ensure batteries are correctly inserted with the correct polarity (+/-) and are not depleted. Replace with fresh AAA batteries if necessary.
- **Line of Sight:** Ensure there are no obstructions between the remote control and the TV's infrared receiver.
- **Re-pair Remote:** If the remote was previously working but stopped, try re-pairing it with your TV as described in Section 3.2.
- **TV Power:** Confirm that your TV is powered on and not in standby mode.

6.2 Voice Search Not Working

- **Pairing Status:** Voice search requires the remote to be successfully paired with the TV. Refer to Section 3.2 for pairing instructions.
- **Microphone Button:** Ensure you are pressing and holding the Microphone Button while speaking.
- **Speak Clearly:** Speak clearly and at a normal volume directly into the remote's microphone.
- **Internet Connection:** For some voice commands, your TV may require an active internet connection. Check your TV's network settings.

6.3 Buttons Are Sticky or Unresponsive

- **Clean Remote:** Dust or debris might be under the buttons. Refer to the cleaning instructions in Section 5.
- **Battery Check:** Low batteries can sometimes affect button responsiveness. Replace batteries.

If these troubleshooting steps do not resolve your issue, please contact customer support for further assistance.

7. SPECIFICATIONS

Model Number	MR24GN
Compatible Models	LG 2024 OLED evo TV Series G4 / C4 / B4, QNED TV 99T / 90T / 85T / 80T Series, UT80 UT75 Series 4K Smart TVs (e.g., OLED42C4AUA, OLED48B4PUA, OLED55C4PUA, OLED65G4SUB, OLED77C4AUA, OLED83G4WUA, 55QNED80TUC, etc.)
Connectivity Technology	Infrared (IR)
Special Feature	Voice Search, Ergonomic Design
Maximum Range	33 Feet (10 Meters)
Power Source	2 x AAA Batteries (Alkaline recommended)
Material	ABS Plastic
Color	Black
Item Weight	1.9 Ounces

Item	
Dimensions (L x W x H)	5" x 1" x 0.5" (Approximately 7.56" x 1.75" based on image)



Figure 7.1: Dimensions and material features of the remote control.

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This Beyution MR24GN remote control comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

8.2 Customer Support

If you experience any issues with your remote control that cannot be resolved using the troubleshooting guide, or if the remote control you received is damaged or does not work, please contact the seller directly through your purchase platform. Provide your order details and a description of the issue for prompt assistance.

For general inquiries or to verify compatibility with a TV model not listed, please reach out to customer support before purchasing.

© 2024 Beyution. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DQTZFQ41>

More documents and user manuals: <https://manuals.plus/>