



Manuals.plus /

- › Fujifilm /
- › Fujifilm Instax Mini Instant Camera Film Instruction Manual

Fujifilm INSTAX MINI FILM VALUE PACK

Fujifilm Instax Mini Instant Camera Film Instruction Manual

Model: INSTAX MINI FILM VALUE PACK

PRODUCT OVERVIEW

The Fujifilm Instax Mini Instant Camera Film is designed exclusively for FUJIFILM INSTAX MINI cameras and printers. This film produces compact, credit card-sized prints with vibrant, true-to-life colors and superior sharpness.



Image: The Fujifilm Instax Mini Instant Film 20-sheet pack, accompanied by a 6AVE Microfiber Cleaning Cloth. The film box features a simulated image of two smiling individuals, highlighting the instant print capability.

Each pack contains 20 sheets of ISO 800 speed, daylight-balanced film, ensuring excellent results in various lighting conditions. The glossy surface enhances color depth and detail, making it ideal for capturing everyday moments and artistic projects.

SETUP: LOADING THE FILM

Proper film loading is crucial for optimal performance and to prevent light exposure. Follow these steps carefully:

1. **Unpack the Film:** Remove the film cartridge from its foil packaging. Avoid exposing the film to direct sunlight or bright light before loading.
2. **Open Camera Film Compartment:** Ensure your Instax Mini camera is turned off. Open the film compartment door on the back of the camera.
3. **Align and Insert:** Locate the yellow mark on the film cartridge and align it with the yellow mark inside the camera's film compartment. Gently slide the cartridge into place. Do not force it.



Image: A hand demonstrates the correct way to insert the Fujifilm Instax Mini film cartridge into the camera's film compartment, aligning the yellow marks.

4. **Close Compartment:** Close the film compartment door firmly until it clicks. Do not open the door again until all exposures are used, as this will expose the remaining film and render it unusable.
5. **Eject Dark Slide:** Turn on your camera. The camera will automatically eject the dark protective slide. This indicates the film is loaded correctly and ready for use.

The included 6AVE Microfiber Cleaning Cloth can be used to gently clean your camera lens or the surface of your prints without scratching.

OPERATING GUIDELINES

Film Compatibility

This Instax Mini film is designed for use with a wide range of Fujifilm Instax Mini cameras and printers. Ensure your device is listed below or confirmed compatible before use.

Compatible with...

Fujifilm Instax Mini Cameras & Fujifilm Instax mini printers

FUJIFILM INSTAX MINI 11
FUJIFILM INSTAX MINI 12
FUJIFILM INSTAX MINI 8
FUJIFILM INSTAX Mini 40
FUJIFILM INSTAX Mini 7+
FUJIFILM INSTAX Mini 70
FUJIFILM INSTAX Mini 7S
FUJIFILM INSTAX Mini 8
FUJIFILM INSTAX Mini 90
FUJIFILM INSTAX Mini 90 Neo Classic
FUJIFILM INSTAX Mini 99

FUJIFILM INSTAX LINK
FUJIFILM INSTAX MINI LINK 2
FUJIFILM INSTAX MINI LINK 3
FUJIFILM INSTAX Mini Link
Leica SOFORT
Leica Sofort
Lomography Diana F+
Lomography Lomo'Instant
Lomography Lomo'Instant Automat
Lomography LomoInstant Square
Mint Camera InstantFlex TL70
Mint Camera InstantFlex TL70 2.0
Mint Camera Rolleiflex
Polaroid 300

and many more....



Image: A comprehensive chart displaying the compatibility of Instax Mini film with various Fujifilm Instax Mini camera models (e.g., Mini 11, Mini 12, Mini 40) and Instax Mini printers (e.g., Instax Link, Instax Mini Link 2).

Photo Development and Handling

- **Development Time:** After taking a photo, the print will eject from the camera. Development typically takes a few minutes, with full development occurring within 5-10 minutes, depending on ambient temperature.
- **Temperature Range:** For best results, use and develop film within a temperature range of 41-104°F (5-40°C). Extreme temperatures can affect development quality.
- **Avoid Bending:** Do not bend, shake, or press on the developing print. This can interfere with the chemical process and damage the image.
- **Print Size:** Each print measures 2.1" x 3.4" (54mm x 86mm), with the image area being 1.8" x 2.4" (46mm x 62mm).



Image: A visual representation of the Fujifilm Instax Mini print dimensions, indicating the overall print size of 2.1" x 3.4" and the image area of 1.8" x 2.4".

- **Light Sensitivity:** Instant film is highly sensitive to light. Once ejected, avoid exposing the developing print to strong direct light until the image fully appears.

MAINTENANCE AND STORAGE

- **Film Storage:** Store unused film packs in a cool, dry place, away from direct sunlight and high temperatures. Refrigeration (not freezing) can extend shelf life, but allow film to return to room temperature before use.
- **Avoid X-rays:** Do not put film through airport X-ray machines, as this can fog the film. Hand-check film when traveling.
- **Cleaning Prints:** Once developed, prints are durable. For minor smudges, gently wipe with the provided 6AVE Microfiber Cleaning Cloth. Avoid harsh chemicals or abrasive materials.
- **Disposal:** Dispose of used film cartridges and packaging according to local recycling guidelines.

TROUBLESHOOTING

If you encounter issues with your Instax Mini film, consider the following common problems and solutions:

Problem	Possible Cause	Solution
Blank or Overexposed Print	Film exposed to light before or during loading; too much light in scene.	Ensure film compartment is closed tightly. Check camera's flash/exposure settings. Load film in dim light.
Underexposed or Dark Print	Insufficient light in scene; flash not firing.	Use flash in low light. Check camera's battery and flash settings.
Streaks or Discoloration	Film damaged by pressure or bending; expired film; extreme temperatures during development.	Handle film and prints gently. Check film expiration date. Ensure proper temperature for development.
Film Not Ejecting	Film loaded incorrectly; camera malfunction; empty cartridge.	Re-check film loading. Ensure camera batteries are fresh. If problem persists, consult camera manual or Fujifilm support.

SPECIFICATIONS

Feature	Detail
Product Name	Fujifilm Instax Mini Instant Film
Model Name	INSTAX MINI FILM VALUE PACK
Film Type	Instant Film
Film Format Type	Instax Mini
Film Color	Color
Exposures per Pack	20 (2 x 10-sheet packs)
Film Speed	ISO 800
Print Size (W x H)	2.1" x 3.4" (54mm x 86mm)
Image Size (W x H)	1.8" x 2.4" (46mm x 62mm)
Product Dimensions	3.9 x 2.6 x 1.7 inches
Item Weight	3.2 ounces
Date First Available	December 16, 2024

WARRANTY AND SUPPORT

This Fujifilm Instax Mini Instant Film is manufactured by Fujifilm. For product-specific inquiries or technical support related to the film, please contact Fujifilm customer service.



IS AN AUTHORIZED USA DEALER OF

FUJIFILM

**YOUR FUJIFILM USA WARRANTY IS
VAILD IF PURCHASED FROM 6TH AVE**

Image: The 6AVE logo, stating "IS AN AUTHORIZED USA DEALER OF FUJIFILM" and "YOUR FUJIFILM USA WARRANTY IS VAILD IF PURCHASED FROM 6TH AVE".

If you purchased this product from an authorized Fujifilm dealer like 6AVE, your Fujifilm USA warranty is valid. Please retain your proof of purchase for any warranty claims.

For more information about Fujifilm products or to find contact details for support, please visit the official Fujifilm Store on Amazon.