

Manuals.plus /

› Spares2go /

› SPARES2GO Pressure Switch for AEG Dishwashers Instruction Manual

## Spares2go 04-SHB-280

# SPARES2GO Pressure Switch for AEG Dishwashers

Model: 04-SHB-280

## 1. PRODUCT OVERVIEW

This document provides essential information regarding the SPARES2GO Pressure Switch, a compatible replacement component for various AEG dishwasher models. The pressure switch is a critical component in a dishwasher's operation, responsible for detecting water levels within the appliance.

**Important Note: This product is designed to be compatible with the indicated brands and is not an original manufacturer's part. Original manufacturer names, model names, and part numbers are used solely for reference and are not associated with the original parts or manufacturer.**

## 2. WHAT'S IN THE BOX

- 1 x SPARES2GO Pressure Switch (Model: 04-SHB-280)

## 3. COMPATIBILITY

This pressure switch is compatible with a wide range of AEG dishwasher models. Please verify your dishwasher's model number against the list below to ensure compatibility before installation.

### Compatible Models Include:

F26302VI0, F34500IM0, F34500VI0, F34502VI0, F46300IM0, F46300UM0, F55302M0, F55312VI0, F55320VI0, F55329VI0, F55329VI0, 5334VI0, F55340VI0, F55343VI0, F55350VI1, F55412M0, F55412W0, F56302M0, F56302W0, F56312M0, F56312W0, F56322M0, F566322M0, 322W0, F56329W0, F56332M0, F56332W0, F78705IM0P, F87792M0P, F87792W0P, F88450VI1P, F88702M0P, F88705VI1P, F88709M0P, F887779M0P, F887779M0P, F887779M0P, F887779M0P, F887742M0P, F95533VI0, F96541VI0, F96542VI0, F988709W0P, FAV55BVI1P, FAV55BVI2P, FAV55IM0P, FAV55VI1P, FD360V, FD390V, FD560V, FD590V, FD640VP, FD640VP, FD660V, 60 VP, FD770VP, FD790V, FEB31400ZM, FEB31600ZM, FEB41600ZM, FEB51400ZM, FEB52600ZD, FEB52600ZM, FEB52600ZW, FEB52610ZM, FEB52613ZM,

FEE52613ZM, FEE52600ZM, 910ZM, FEE53600ZM, FEE53605ZM, FEE53627ZM, FEE53670ZM  
FEE62400PM, FEE62600PM, FEE62700PM, FEE62706PM, FEE62800PM, FEE63400PM, FEE63600PM,  
FEE63600ZM, FEE63607PM, FEE63616PM, FEE63666PM, 20PM, FEME63700PM, FEE63716PM,  
FEE63720PM, FEE63727PM, FEE63800PM, FEE64606PM, FEE64917ZM, FEE73600PM, FEE83700PM,  
FEE83716PM, FEE84716PM, FEE8471119:00, FEK53627ZM, FES5260AZM, FES5261XZD, FES5261XZM,  
FES5261XZW, FES5360CZM, FES5360XZM, FES5361UZM, FES5367XZM, FES5392AZM, FES5392CZM,  
FES5395XZM, FES66260XPM, FES6270CPM, FES6280XPM, FES6360XPM, FES6370XPM,  
FES63727CPM, FES6375XPM, FES6380XPM, FFB41600ZM, FFB41600ZW, FFB51400ZM, FFB51400ZW,  
FFB52600ZM, FFB52600ZW, FFB52601ZM, FFB52601ZW, FFB52610ZM, FFB52610ZW, FFB52620ZM,  
FFB52620ZW, FFB52910ZM, FFB52910ZW, FFB53600ZM, FFB53600ZW  
FFB53610ZM, FFB53610ZW, FFB53617ZM, FFB53617ZW, FFB53620ZM, FFB53620ZW, FFB53630ZM,  
FFB53630ZW, FFB53640ZM, FFB53640ZW, FFB53640ZW, FFB53666650ZM, FFB53650ZW, FFB53900ZM,  
FFB53900ZW, FFB53910ZM, FFB53910ZW, FFB53920ZM, FFB53920ZW, FFB53937ZM, FFB53937ZW,  
FFB53940ZM, FFB539440ZM, FFB53944440ZW, FFBB61600PM, FFB61600PW, FFB62400P, FFB62400PM,  
FFB62400PW, FFB62407ZW, FFB62417ZW, FFB62620PM, FFB62620PW, FFB62630PW, FFB62700PWW,  
FFB62700PW, FFB62720PM, FFB62720PW, FFB63400PM, FFB63400PW, FFB63600PM, FFB63600PW,  
FFB63606PM, FFB63606PW, FFB63700PM, FFB63700PW, FFB63706PM, FFB63706PW, FFB63720PM,  
FFB63720PW, FFB63726PM, FFB63726PW, FFB63806PM, FFB63806PW, FFB64606PM, FFB64606PW,  
FFB64706PM, FFB64706PW, FFB65394ZM, FFB74707PM  
FFB83700PM, FFB83707PM, FFB83720PM, FFB83730PM, FFB83730PW, FFB83740PM, FFB83740PW,  
FFB83806PM, FFB93700PM, FFB93706PM, FFB9388806PM, FFB938806PM, 19:00, FFE62620PM,  
FFE62620PW, FFE62800PM, FFE62800PW, FFE63700PM, FFE63700PW, FFE63806PM, FFE63806PW,  
FFE83700PM, FFS5260AZW, FFS5260LZW, FFS52610ZW, W, FFS5261XZW, FFS5360CZW, FFS5360XZW,  
FFS53630ZW, FFS6360LPM, FFS6360LPW, FFX32617ZW, FFX52507ZW, FFX52607ZW, FSB31400Z,  
FSB31600Z, 610Z, FSCB32620Z, FSB41600Z, FSB42607Z, FSB51400Z, FSB52600Z, FSB52610Z,  
FSB52617Z, FSB52620Z, FSB52637P, FSB52637Z, FSB52907Z, FSB52917Z, FSB53607Z, FSB5360CZ,  
FSB53617Z, FSB53627P, FSB53627Z, FSB53637P, B53637Z, FSB53907Z, FSB53927Z, FSB64907Z,  
FSE51600P, FSE52600P, FSE52600P, FSE5225252607P  
FSE52610P, FSE52700P, FSE52705P, FSE52707P, FSE52910Z, FSE53600Z, FSE53605Z, FSE53610Z,  
FSE53630Z, FSE53650Z, FSE53670Z, FSE537000Z, P, FSE61607P, FSE62400P, FSE62407P, FSE62417P,  
FSE62600P, FSE62605P, FSE62700P, FSE62800P, FSE63400P, FSE63600P, FSE63607P, FSE63616P,  
FSE63616P, FSE6666P, 3617P, FSE63620P, FSE63626P, FSE63637P, FSE63700P, FSE63705P,  
FSE63707P, FSE63716P, FSE63717P, FSE63720P, FSE63726P, FSE63727P, FSE63736P, FSE63737P,  
FSE63747P, FSE63757P, FSE63767P, FSE63777P, FSE63800AP, FSE63800P, FSE63806P, FSE63807P,  
FSE64606P, FSE72507P, FSE72517P, FSE72517P, FSE72517P, 72527P, FSE72610P, FSE72710P,  
FSE73300P, FSE73407P, FSE73507P, FSE73517P, FSE73600P, FSE73610P, FSE73700P, FSE74747P,  
FSE75737P, FSE827110P, FSE82827P  
FSE83400P, FSE83600P, FSE83617P, FSE83700P, FSE83706P, FSE83707P, FSE83710P, FSE83716P,  
FSE83720P, FSE83727P, FSE83800P, FSE83807P, FSE833810P, FSE83816P, FSE83817P, FSE83837P,  
FSE84607P, FSE84706P, FSE84708P, FSE84716P, FSE84717P, FSILENC2VI, FSILENCM3,  
FSILENCM4, FSILENCEW3, FSILENZA W4, FSILENCM2P, FSILENCW2P, FSILENIM0P, FSK31400Z,  
FSK31600Z, FSK31610Z, FSK32610Z, FSK51601P, FSK52600P, FSK5260PP, FSK52610Z, FSK52617P,  
FSK52617P, SK52617Z, FSK52637P, FSK52637Z, FSK52727P, FSK52907Z, FSK5290PZ, FSK52917Z,  
FSK53600Z, FSK53627P, FSK53950Z, FSK61607P, FSK62607P, FSK6363600P, FSK63607P, FSK63627P,  
FSK63700P, FSK63707P, FSK63737P, FSK63800P, FSK63807P, FSK73400P, FSK73700P, FSK73917Z  
FSK75757P, FSK75778P, FSK76738P, FSK83700P, FSK83717P, FSK83727P, FSK83828P, FSK84707P,  
FSK84716P, FSK93600P, FSK93606P, FSK937000P, P, FSK93705P, FSK93706P, FSK93707P,  
FSK93800P, FSK93807P, FSK93847P, FSK93848P, FSK94858P, FSM31400Z, FSR52610Z, FSR62400P,  
FSR63600P, FSR883400P, FSR83700P, FSR83800P, FSR93800P, FSS52600Z, FSS5260AZ, FSS5260LP,  
FSS52615Z, FSS5261XZ, FSS5262LZ, FSS53600Z, FSS5360XZ, FSS5361UZ, FSS53627P, FSS53627Z,  
FSS53637Z, FSS5367XZ, FSS53907Z, FSS62600P, FSS6260XP, FSS62700P, FSS62737P, FSS62800P,

FSS62807P, FSS6280XP, FSS63400P, FSS63607P, FSS6360XP, FSS63707P, FSS6370XP,  
FSS63727CPM, FSS63757XP, FSX52927Z

FSS63807XP, FSS6380XP, FSS73700P, FSS73717P, FSS73718P, FSS82827P, FSS83708P, FSX51407Z,  
FUB41600ZM, FUB52600ZD, FUB52600ZM, FUB52600ZM, FUB5266600ZM, 00ZW, FUFUB52610ZM,  
FUE52600PM, FUE53600ZM, FUE53610ZM, FUE62600PM, FUE62700PM, FUE63620PM, FUE63720PM,  
FUS5260AZM, FUS5261AZM, FUS5261XZZM, M, FUS5360CZM, FUS5360XZM, FUS5361XZM,  
FUS6370XPM, GG360VI, GG370VI, GG560VI, GG570VI, GG670VI, GG760VIP, GG770VIP, GS45AV,  
GS45BV, GS55AIW, GS60AFSWEC, GS600AIB, GS60AIM, GS60AIW, GS60AV, GS60BFSW, GS60BISM,  
GS60BV, GS60GVS

## 4. SETUP AND INSTALLATION

---

Installation of a dishwasher pressure switch typically involves accessing internal components of the appliance. Due to the complexity and potential safety risks associated with appliance repair, it is highly recommended that installation be performed by a qualified technician.

If you possess the necessary technical expertise and tools, ensure the dishwasher is completely disconnected from the power supply and water source before beginning any work. Refer to your specific dishwasher model's service manual for detailed, step-by-step instructions on how to locate and replace the pressure switch.



Image 1: Top-down view of the pressure switch, highlighting its main body and hose connection point.



Image 2: Angled view of the pressure switch, showing the electrical connector pins and a small green indicator.



Image 3: Close-up front view of the pressure switch's electrical connector, showing the multiple pins.

## 5. OPERATING PRINCIPLE

---

The pressure switch in a dishwasher monitors the water level inside the wash tub. As water fills the tub, the increasing pressure is sensed by the switch. Once the water reaches the appropriate level for the selected wash cycle, the pressure switch sends a signal to the dishwasher's control board, indicating that the fill process is complete. This signal prevents overfilling and allows the wash cycle to proceed to the next stage, such as heating or washing.

## 6. MAINTENANCE

---

Pressure switches are generally sealed units and do not require routine maintenance. However, to ensure optimal performance and longevity of your dishwasher, consider the following:

- **Regular Cleaning:** Periodically clean your dishwasher's filters and spray arms to prevent debris buildup, which can indirectly affect water pressure and the pressure switch's function.
- **Water Quality:** Hard water can lead to mineral deposits over time. Using dishwasher detergents designed for hard water or a water softener can help prevent scale buildup on internal components, including the pressure switch.
- **Professional Inspection:** If you suspect issues with water levels or filling, consult a qualified appliance technician for diagnosis and repair.

## 7. TROUBLESHOOTING

---

A faulty pressure switch can manifest in several ways. If you experience any of the following issues, the pressure switch may need inspection or replacement:

- **Dishwasher Overfilling:** If the dishwasher continues to fill with water beyond the normal level, or overflows, the pressure switch may not be signaling the control board correctly.
- **Dishwasher Underfilling:** If the dishwasher does not fill with enough water, or stops filling prematurely, the pressure switch might be signaling the control board too early.
- **No Water Fill:** In some cases, a completely failed pressure switch might prevent the dishwasher from filling with any water at all, as it may incorrectly signal that the tub is already full.
- **Error Codes:** Your dishwasher's display may show specific error codes related to water level issues. Consult your dishwasher's user manual for a list of error codes and their meanings.

**Always disconnect power to the dishwasher before attempting any troubleshooting or inspection.**

## 8. SPECIFICATIONS

---

Attribute	Detail
Manufacturer	SPARES2GO
Model Number	04-SHB-280
ASIN	B0DQVGH5DM
Color	Black, White
Included Components	Pressure Switch
First Available	December 18, 2024

## 9. WARRANTY AND SUPPORT

---

For information regarding returns, warranty, or support for this product, please refer to the retailer's website where the purchase was made. Standard return and warranty policies apply. Specific details for defective or

damaged products, as well as marketplace purchases, can be found on the retailer's dedicated help pages.