

Multilaser GO123

Multilaser Electric Omelet Maker GO123 User Manual

Model: GO123 | Brand: Multilaser

INTRODUCTION

Thank you for choosing the Multilaser Electric Omelet Maker GO123. This appliance is designed to provide a convenient and efficient way to prepare omelets and other dishes. Please read this manual carefully before using the appliance to ensure safe and optimal operation. Keep this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.

- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off,” then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

PRODUCT OVERVIEW

The Multilaser Electric Omelet Maker GO123 features a compact design with non-stick cooking plates for easy food release and cleaning. It is equipped with indicator lights for power and readiness, and a cool-touch handle for safe operation.



Image: Top view of the Multilaser Electric Omelet Maker GO123, closed, displaying the power (red) and ready (green) indicator lights on the lid.

Components:

- Non-stick cooking plates (2 sections)
- Cool-touch handle
- Power indicator light (Red)
- Ready indicator light (Green)
- Non-slip feet
- Power cord

SETUP

1. **Unpacking:** Carefully remove the omelet maker from its packaging. Retain the packaging for storage or disposal.
2. **Initial Cleaning:** Before first use, wipe the cooking plates with a damp cloth or sponge. Dry thoroughly. Do not immerse the appliance in water.
3. **Placement:** Place the appliance on a stable, flat, heat-resistant surface, away from walls and other heat-sensitive materials. Ensure there is adequate ventilation around the unit.
4. **Power Connection:** Ensure the appliance is unplugged. Check that your household voltage matches the 220V rating of the appliance.

OPERATING INSTRUCTIONS

Before First Use:

It is recommended to operate the omelet maker empty for approximately 5-10 minutes during its first use. This will burn off any manufacturing residues. A slight odor or smoke may be present; this is normal. Ensure the area is well-ventilated. After this initial cycle, unplug the appliance and allow it to cool completely before cleaning.

Cooking Process:

1. **Preheating:** Close the omelet maker and plug it into a 220V electrical outlet. The red power indicator light will illuminate, indicating the appliance is heating.
2. **Ready Indicator:** Wait for the green ready indicator light to illuminate. This signifies that the omelet maker has reached its optimal cooking temperature.
3. **Prepare Ingredients:** While the appliance preheats, prepare your omelet mixture or other ingredients. The non-stick plates allow for oil-free cooking, promoting healthier meals.
4. **Add Ingredients:** Carefully open the omelet maker using the cool-touch handle. Pour your mixture evenly into the two cooking sections. Do not overfill.
5. **Cooking:** Close the lid. The green light may turn off and on during cooking as the thermostat maintains the temperature. Cook for approximately 3-7 minutes, or until your omelets are golden brown and cooked to your preference. Cooking time may vary based on ingredients and desired doneness.
6. **Remove Food:** Once cooked, carefully open the lid. Use a heat-resistant, non-metallic utensil (e.g., plastic or wooden spatula) to remove the omelets. Do not use metal utensils, as they can damage the non-stick coating.
7. **Repeat (if necessary):** If cooking additional portions, close the lid and wait for the green ready light to illuminate again before adding more ingredients.
8. **Finish:** When finished cooking, unplug the appliance from the outlet.



Image: The Multilaser Electric Omelet Maker GO123 shown open, revealing two perfectly cooked omelets in its non-stick cooking sections.



Image: A freshly cooked omelet, prepared using the Multilaser Electric Omelet Maker GO123, served on a plate with a side of lettuce. The closed omelet maker is visible in the background.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your Multilaser Electric Omelet Maker GO123.

1. **Cool Down:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Wipe Plates:** Use a soft, damp cloth or sponge to wipe the non-stick cooking plates. For stubborn residue, a small amount of mild dish soap can be used, followed by wiping with a clean, damp cloth.
3. **Exterior Cleaning:** Wipe the exterior of the appliance with a soft, damp cloth.
4. **Do Not Immerse:** Never immerse the omelet maker, its cord, or plug in water or any other liquid.
5. **Avoid Abrasives:** Do not use abrasive cleaners, scouring pads, or metal utensils, as these can damage the non-stick coating and exterior finish.
6. **Storage:** Ensure the appliance is clean and dry before storing. Store it in a cool, dry place.

TROUBLESHOOTING

If you encounter issues with your omelet maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; appliance malfunction.	Ensure the power cord is securely plugged into a working 220V outlet. Check the circuit breaker. If the issue persists, contact customer support.
Food sticks to the plates.	Plates not properly cleaned; non-stick coating damaged; not preheated sufficiently.	Ensure plates are clean before use. Always preheat until the green ready light illuminates. Avoid using metal utensils that can scratch the coating.
Omelets are not cooking evenly.	Uneven batter distribution; appliance not fully preheated.	Ensure batter is spread evenly across both cooking sections. Allow the appliance to fully preheat until the green light is steady.
Smoke or odor during initial use.	Manufacturing residues burning off.	This is normal for first use. Ensure good ventilation. If smoke or odor persists after initial use, unplug and contact support.

SPECIFICATIONS

- **Model:** GO123
- **Brand:** Multilaser
- **Product Type:** Electric Omelet Maker
- **Voltage:** 220 Volts
- **Power:** 850W
- **Color:** Black
- **Special Features:** Non-stick coating, Cool-touch handle, Indicator lights, Non-slip feet
- **Material:** Electronic Components, Metal, Polymers
- **Cooking Capacity:** Up to 2 portions simultaneously
- **Included Components:** 1 Electric Omelet Maker, 1 Product Manual
- **Country of Origin:** Brazil

WARRANTY AND SUPPORT

The Multilaser Electric Omelet Maker GO123 comes with a **1-year warranty** from the date of purchase, covering manufacturing defects. Please retain your proof of purchase for warranty claims.

For technical support, warranty claims, or any questions regarding your appliance, please contact Multilaser customer service through their official channels. Refer to the product packaging or Multilaser's official website for contact information.

