

Braun AIO3540

Braun All-in-One Series 3 Trimmer AIO3540 User Manual

Model: AIO3540 | Brand: Braun

1. IMPORTANT SAFETY INFORMATION

Before using the Braun All-in-One Series 3 Trimmer AIO3540, please read this instruction manual thoroughly. Retain this manual for future reference.

- This appliance is suitable for cleaning under running water.
- Do not use the appliance with a damaged foil or comb, as this may result in injury.
- Keep the appliance dry.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Only use the power supply provided with the appliance.

2. PRODUCT OVERVIEW

The Braun All-in-One Series 3 Trimmer AIO3540 is an 8-in-1 grooming kit designed for precise beard and hair trimming. It features an ultra-sharp blade and 14 length settings for versatile styling.

2.1 Package Contents

- 1x Braun All-in-One Series 3 Trimmer
- 6x Attachment Combs (various lengths)
- 1x Cleaning Brush
- 1x Storage Pouch
- 1x Power Supply (charger)



Image 1: Braun All-in-One Series 3 Trimmer with all included accessories.



Image 2: Detailed view of the Braun AIO3540 trimmer and its various attachment combs and tools.

3. SETUP AND CHARGING

3.1 Initial Charge

Before first use, fully charge the trimmer for approximately 8 hours. A full charge provides up to 50 minutes of cordless trimming time. The charging indicator light will show the charging status.

3.2 Attaching Combs

To attach a comb, align it with the trimmer head and push it on until it clicks into place. To remove, pull it off gently.

4. OPERATING INSTRUCTIONS

The Braun All-in-One Series 3 Trimmer is designed for both beard and hair trimming. Ensure your hair is clean and dry before trimming for best results.

4.1 Power On/Off

Press the power button to turn the trimmer on or off.

4.2 Selecting Length Settings

The trimmer offers 14 length settings (3-21 mm) using the various attachment combs. Select the appropriate comb for your desired length.

- **Short to Long Beards (3-21 mm):** Use the adjustable beard combs for various beard lengths.
- **Stubble (1-2 mm):** Use the dedicated stubble comb for a short, even stubble look.
- **Contour & Edge:** Use the precision trimmer head without a comb for sharp lines and edges.
- **Detail Trimming:** Use the detail trimmer attachment for intricate styling.
- **Skin Sensitive:** Use the sensitive comb for gentle trimming on sensitive areas.



Image 3: Examples of different trimming styles and corresponding attachments for beard and hair.

4.3 Trimming Technique

Move the trimmer against the direction of hair growth, ensuring the flat part of the comb rests against the skin. For precise lines, remove the comb and use the trimmer blade directly.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your trimmer.

5.1 Cleaning the Trimmer Head and Combs

The trimmer head and attachment combs are washable. After each use:

1. Turn off the trimmer and detach the comb.
2. Rinse the trimmer head and combs under warm running water.
3. Use the provided cleaning brush to remove any stubborn hair particles.
4. Allow all parts to air dry completely before reassembling or storing.

5.2 Blade Care

For best performance, regularly oil the trimmer blades with light machine oil (not included) to maintain sharpness and smooth operation.

Ultra sharp

Ultra Sharp Blade

Efficient & precise trim.



Short to Long
Beards 3-21 mm



Contour
& Edge



Stubble
1 | 2 mm



Detail



Skin
Sensitive



Image 4: Close-up view of the ultra-sharp blade for efficient and precise trimming.

6. TROUBLESHOOTING

If you encounter issues with your Braun All-in-One Series 3 Trimmer, please refer to the following common solutions:

- **Trimmer not turning on:** Ensure the trimmer is fully charged. Connect it to the power supply and allow it to charge for at least 30 minutes before attempting to turn it on again.
- **Reduced trimming performance:** Clean the trimmer head and blades thoroughly. Ensure no hair is lodged in the cutting elements. Oil the blades if necessary.
- **Battery not holding charge:** Ensure the power supply is correctly connected to both the trimmer and a working power outlet. If the issue persists, contact customer support.

7. SPECIFICATIONS

| Feature | Detail |
|------------------------|---------------------------------|
| Model Number | AIO3540 |
| Brand | Braun |
| Power Source | Battery Powered |
| Battery Life | Up to 50 minutes (cordless) |
| Charging Time | Approx. 8 hours for full charge |
| Length Settings | 14 (3-21 mm) |
| Blade Material | Stainless Steel |
| Washable | Trimmer head and combs |
| Dimensions (L x W x H) | 13 x 6 x 25.2 cm |
| Weight | 110 Grams |
| Country of Origin | China |

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included in your product packaging or visit the official Braun website. You may also scan the QR code below for additional tips and support.

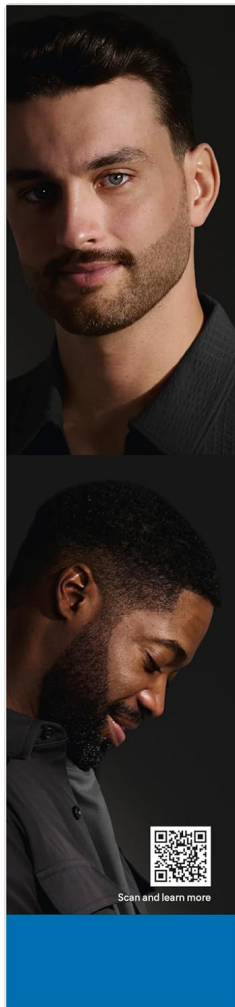


Image 5: Scan this QR code for additional product information and tips.

For more tips, visit: [Braun Official Website](#)