

[manuals.plus](#) /

› [MECHEN](#) /

› [MECHEN Digital Voice Recorder V01 User Manual](#)

MECHEN V01

MECHEN Digital Voice Recorder V01 User Manual

Model: V01

1. INTRODUCTION

Thank you for choosing the MECHEN Digital Voice Recorder V01. This manual provides detailed instructions for the proper setup, operation, and maintenance of your device. Please read this manual thoroughly before use to ensure optimal performance and longevity of your recorder.

2. PRODUCT OVERVIEW

The MECHEN V01 is a portable digital voice recorder designed for high-quality audio capture in various environments, including interviews, classes, and meetings. It features a compact design, intuitive controls, and a large storage capacity.





Image 2.1: Front view of the MECHEN Digital Voice Recorder V01, showing the display and main control buttons.

2.1 Device Layout and Controls

Familiarize yourself with the buttons and ports on your recorder:

Intuitive and Easy to Navigate

Main keys locate on the front panel, easy and fast to recording

xxx



Image 2.2: MECHEN Digital Voice Recorder V01 highlighting the REC, PLAY, STOP, and MENU buttons on the front panel.

- **REC Button:** Initiates recording.
- **PLAY Button:** Starts playback of recordings. Also functions as a confirmation button in menus.
- **STOP Button:** Stops recording or playback. Also functions as a return button in menus.
- **MENU Button:** Accesses the device settings and options.
- **Volume/Navigation Buttons:** Adjusts volume during playback and navigates through menu options.
- **USB-C Port:** For charging and data transfer.
- **Headphone Jack:** For private listening to recordings.

3. SETUP

3.1 Charging the Device

Before first use, fully charge the recorder. The device uses a USB-C charging interface.

1. Connect the included USB-C cable to the recorder's USB-C port.
2. Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The battery indicator on the display will show charging status. A full charge typically takes approximately 1.5 hours.
4. The device includes an automatic low-battery save function to protect your recordings from data loss.

Einfache Dateiverwaltung
Schließen Sie das Gerät mit dem mitgelieferten USB-Kabel an Ihren Computer an, um Dateien einfach zu übertragen

Typ C USB 2.0
Hohe Übertragungsgeschwindigkeit

 **2Std**
Aufladezeit

 **30Std**
Aufzeichnung in 512kbps BitRate

Image 3.1: The recorder connected to a laptop via USB-C for charging and file transfer.

3.2 Powering On/Off

- **To Power On:** Press and hold the PLAY button for a few seconds until the screen illuminates.
- **To Power Off:** Press and hold the STOP button for a few seconds until the screen turns off.

4. OPERATING INSTRUCTIONS

4.1 One-Touch Recording

The MECHEN V01 supports instant recording and saving with a single press.

1. Ensure the device is powered on.
2. Press the **REC** button to start recording. The display will show the recording status and time.
3. To stop and save the recording, press the **STOP** button. The recording will be saved automatically.

4.2 Voice Activated Recording (VOR)

This feature automatically starts recording when sound is detected and pauses during silence, conserving storage space and ensuring important moments are captured without manual intervention.

Voice Activated Recording

No manual switch required, No long silent gaps

× × ×



Image 4.1: The recorder demonstrating Voice Activated Recording, showing sound waves and battery life benefits.

1. To enable/disable VOR, navigate to the device's menu using the **MENU** button.
2. Locate the 'VOR' or 'Voice Activated' setting.
3. Select 'On' or 'Off' as desired. You may also be able to adjust sensitivity levels.
4. When VOR is active, the recorder will automatically start and stop recording based on sound detection.

4.3 Playback

To listen to your recordings:

1. From the main screen, navigate to your list of recordings.

2. Use the navigation buttons to select the desired recording.
3. Press the **PLAY** button to start playback.
4. Adjust the volume using the volume buttons.
5. Press the **STOP** button to end playback.

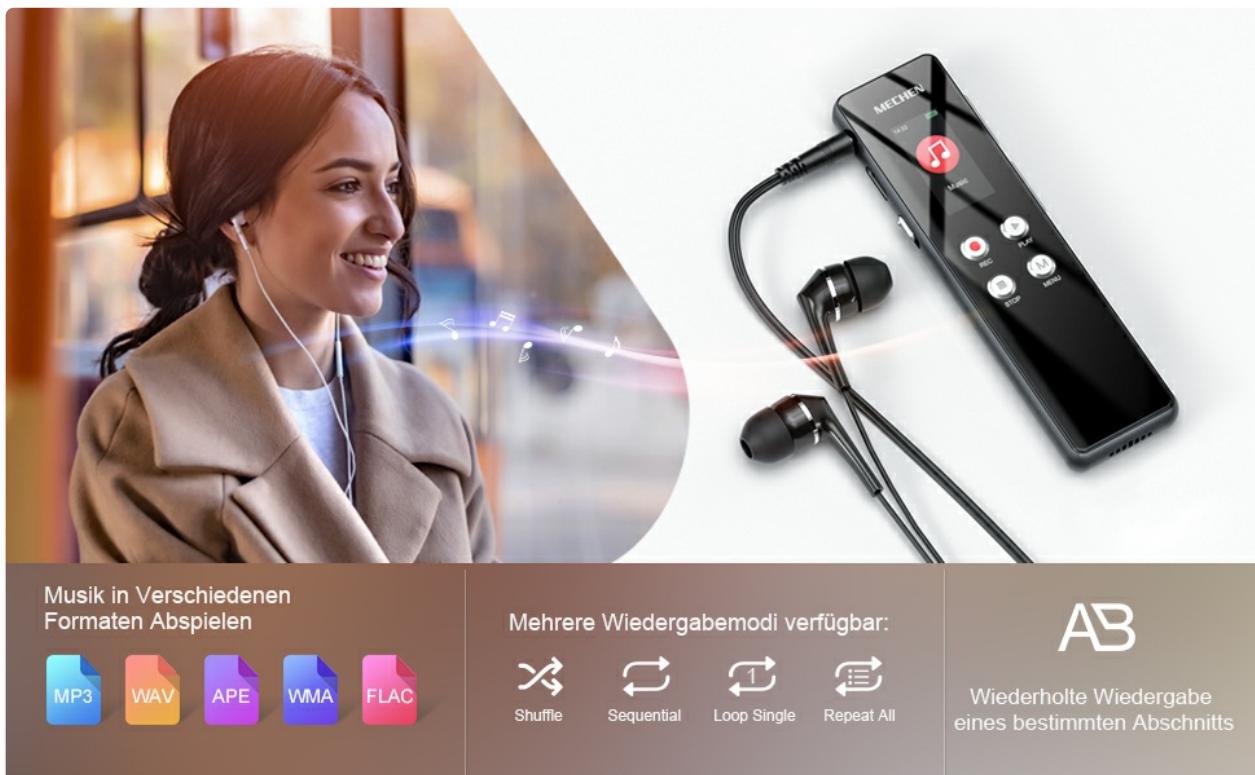


Image 4.2: The recorder connected to headphones for audio playback, also showing support for various music formats.

4.4 File Management and Transfer

You can easily access and manage your recordings by connecting the device to a computer.

1. Connect the recorder to your computer using the USB-C cable.
2. The recorder will appear as a removable disk drive on your computer.
3. Open the drive to access your recorded files (typically in WAV format).
4. You can copy, move, or delete files as you would with any other storage device.

4.5 Advanced Recording Features

- **PCM HD Recording:** The recorder supports high-fidelity PCM recording at up to 1536kbps, ensuring clear and detailed audio capture.

PCM HD Recording

Omnidirectional surround high sensitivity microphone

× × ×



Image 4.3: The recorder's display showing 1536kbps recording in progress, indicating high-definition audio capture.

- **Line-in Recording:** The device supports line-in recording, allowing you to record audio directly from external sources like smartphones, MP3 players, or computers.

Line in Recording Available

Low gain capacity, High volume signal

× × ×



Image 4.4: The recorder connected via a 3.5mm audio cable to a smartphone for line-in recording. Compatible devices include MP3 players, tablets, laptops, desktops, and CD players.

- **Segment Recording:** This feature allows you to split long recordings into manageable segments (e.g., 30, 60, 90, 120 minutes), making file organization easier.

Efficient Segment Recording

Split recording tasks makes recording files management easier!

× × ×

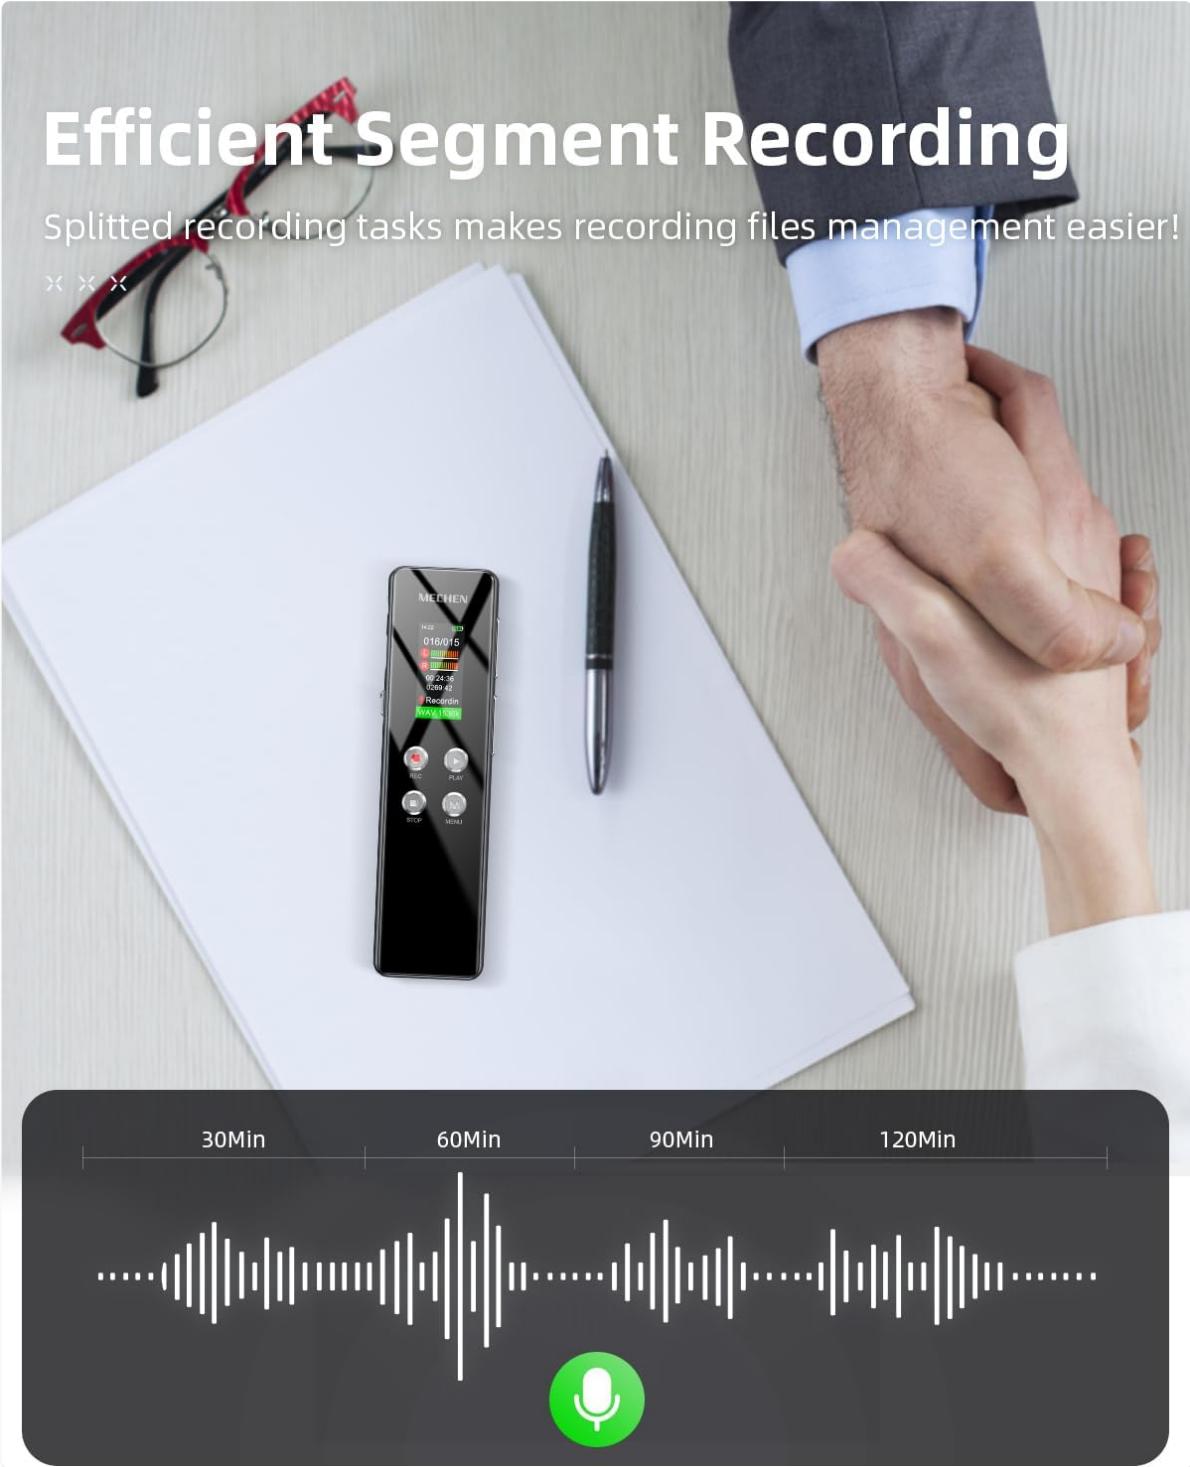


Image 4.5: Visual representation of segment recording, showing how audio is divided into fixed durations for easier management.

5. MAINTENANCE

5.1 Battery Care

- Avoid fully discharging the battery frequently.
- Charge the device regularly, even if not in use, to maintain battery health.
- Store the device in a cool, dry place when not in use for extended periods.

5.2 Cleaning

- Use a soft, dry cloth to clean the exterior of the device.

- Do not use liquid cleaners or solvents, as they may damage the device.
- Keep the microphone and ports free from dust and debris.

6. TROUBLESHOOTING

If you encounter issues with your MECHEN V01, please refer to the following common problems and solutions:

- **Device does not power on:**
 - Ensure the battery is charged. Connect the device to a power source and try again.
 - Press and hold the power button for a longer duration (5-10 seconds).
- **Cannot record:**
 - Check if the device has sufficient storage space. Delete old files if necessary.
 - Ensure the microphone is not obstructed.
 - Verify that VOR is not set too high, preventing recording in quiet environments.
- **Poor audio quality:**
 - Ensure the recording environment is quiet and free from excessive background noise.
 - Check microphone placement relative to the sound source.
 - Adjust recording quality settings in the menu to a higher bitrate (e.g., 1536kbps).
- **Device not recognized by computer:**
 - Ensure the USB-C cable is securely connected to both the recorder and the computer.
 - Try a different USB port or cable.
 - Restart your computer and the recorder.

7. SPECIFICATIONS

Feature	Description
Brand	MECHEN
Model Number	V01
Memory Storage Capacity	128 GB (approx. 800 hours of recording)
Recording Format	WAV
Max Recording Bitrate	1536 kbps
Battery Composition	Lithium-ion
Rechargeable Battery	Yes (1 C battery included)
Charging Time	Approx. 1.5 hours (via USB-C)
Digital Recording Time (Battery Life)	Up to 8 hours
Compatible Devices	MP3 Player, Personal Computer, Earphone

Hardware Interface	3.5 mm Audio, USB-C
Microphone Form Factor	Integrated
Headphone Jack	3.5 mm
Product Dimensions	104P x 11I x 28H millimeters

8. WARRANTY AND SUPPORT

MECHEN products are designed for reliability and performance. For warranty information, please refer to the documentation included with your purchase or contact MECHEN customer support through the retailer where the product was purchased. Please retain your proof of purchase for warranty claims.

For technical assistance or further inquiries, please visit the official MECHEN website or contact their customer service department.


© 2025 MECHEN. All rights reserved.

Related Documents - V01

 <p>MECHEN USER MANUAL Voice recorder</p> <p>Sorry for your confusion. Please do not hesitate to contact us if you have any questions. MECHEN customer support team</p>	<p>MECHEN V06 Voice Recorder User Manual</p> <p>User manual for the MECHEN V06 Voice Recorder, detailing its features, operation, specifications, and troubleshooting.</p>
 <p>USER GUIDANCE MECHEN M3</p> <p>Sorry for your confusion. Please do not hesitate to contact us if you have any questions. MECHEN customer support team</p>	<p>MECHEN M3 MP3 Player User Guidance and Troubleshooting</p> <p>Comprehensive user guide for the MECHEN M3 MP3 player, covering music playback, Bluetooth connectivity, ebook reading, settings, recording, FM radio, and detailed troubleshooting steps for common issues.</p>
 <p>MECHEN USER MANUAL Digital Player</p> <p>Sorry for your confusion. Please do not hesitate to contact us if you have any questions. MECHEN customer support team</p>	<p>MECHEN H11 Digital Player User Manual: Setup, Features, and Troubleshooting</p> <p>Comprehensive user manual for the MECHEN H11 digital player. This 80GB MP3 player features a 5-inch IPS full touch screen, Android 9.0, HiFi sound, and Wi-Fi/Bluetooth. Learn how to set up your device, configure languages, connect to networks, use streaming services like Spotify and Amazon Music, and troubleshoot common issues.</p>

	<p>MECHEN H1 Digital Player User Manual User manual for the MECHEN H1 Digital Player, covering setup, features, specifications, and troubleshooting.</p>
	<p>MECHEN D53 Bluetooth MP3 Player User Manual User manual for the MECHEN D53 Bluetooth MP3 Player, covering features like music playback, video, FM radio, Bluetooth connectivity, recording, e-books, and device settings. Includes specifications and usage instructions.</p>
	<p>MECHEN H1 Pro Digital Player User Manual User manual for the MECHEN H1 Pro digital player, covering setup, settings, specifications, and troubleshooting.</p>

Documents - MECHEN – V01

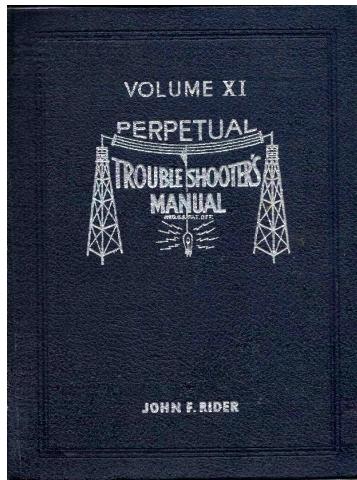

[\[pdf\] Troubleshooting Guide](#)

RIDER's PERPETUAL TROUBLESHOOTER'S Radio set service manuals 1930 to 1954 Rider 1941 PQR
worldradiohistory Archive 41 |||
- ,= -: - -:1M--s :l nee _y -v- - _4 at-- PACIFIC RADIO CORI . PACIFIC PAGE 11-1
MODEL 102,Ear ... 4e:F-KCY VE Wxd 2V4222 2x2222242e n m m m nmF n o .- Z 4 e
M 2 q. 9 el 0e tn.l M M v01 m 2, l N n N n m 88 z : h E- 3 3 3 E R -. 99 3 R - EEE = n -
o ar ;11ir ,a...
lang:it score:10 filesize: 29.69 M page_count: 297 document date: 2016-07-04