

Goetland RSC0008-02

Goetland 4x32 Prism Sight Rifle Scope Instruction Manual

Model: RSC0008-02

INTRODUCTION

This manual provides detailed instructions for the proper installation, operation, and maintenance of your Goetland 4x32 Prism Sight Rifle Scope. Please read this manual thoroughly before using the product to ensure safe and effective operation. Retain this manual for future reference.

PRODUCT OVERVIEW


The Goetland 4x32 Prism Sight Rifle Scope is designed for versatile shooting applications, featuring a fixed 4x magnification and a 32mm objective diameter. It incorporates a rangefinding BDC reticle with red, green, and blue illumination options, each with 3 brightness levels. Constructed from aerospace-grade aluminum alloy, the scope is O-ring sealed and nitrogen-filled for waterproof and fogproof performance.

Included Components:

- Goetland 4x32 Prism Sight Rifle Scope
- Gift Box
- Wrench (for mounting)
- Cleaning Cloth
- User Manual (this document)

4-32X

Zoom Magnification

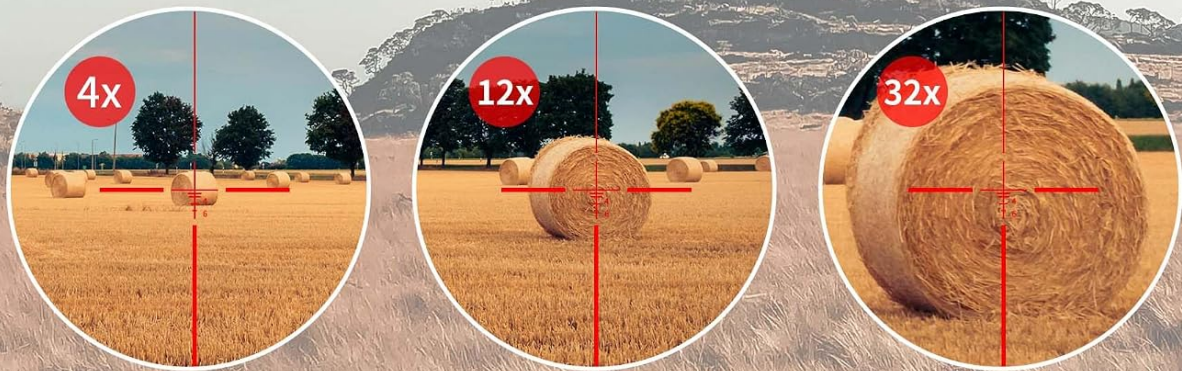

For Reference Only



Image: The Goetland 4x32 Prism Sight Rifle Scope with its packaging and accessories, including a wrench, cleaning cloth, and user manual.

SETUP

Mounting the Scope:

1. Ensure your firearm is unloaded and pointed in a safe direction.
2. The scope is compatible with most equipment requiring a 20mm Weaver/Picatinny Rail.
3. Loosen the mounting screws on the scope's base.
4. Position the scope on the rail, ensuring proper eye relief for comfortable viewing.
5. Tighten the mounting screws evenly using the provided wrench until secure. Do not overtighten.

Battery Installation:

The illumination system requires one CR2032 battery (not included due to shipping policies). To install:

1. Locate the battery compartment cap, typically on the illumination control knob.
2. Unscrew the cap.
3. Insert a fresh CR2032 battery with the positive (+) side facing outwards.
4. Replace the cap and tighten it securely to maintain waterproof integrity.




Image: Detailed view of the scope's mounting mechanism and adjustment turrets.

OPERATING INSTRUCTIONS

Reticle Illumination:

The scope features red, green, and blue reticle illumination. The illumination control knob is located on the top of the scope.

- Rotate the knob to select between red, green, or blue illumination.
- Each color has 3 brightness levels. Continue rotating the knob to cycle through the brightness settings.
- Turn the knob to the 'OFF' position when illumination is not required to conserve battery life.

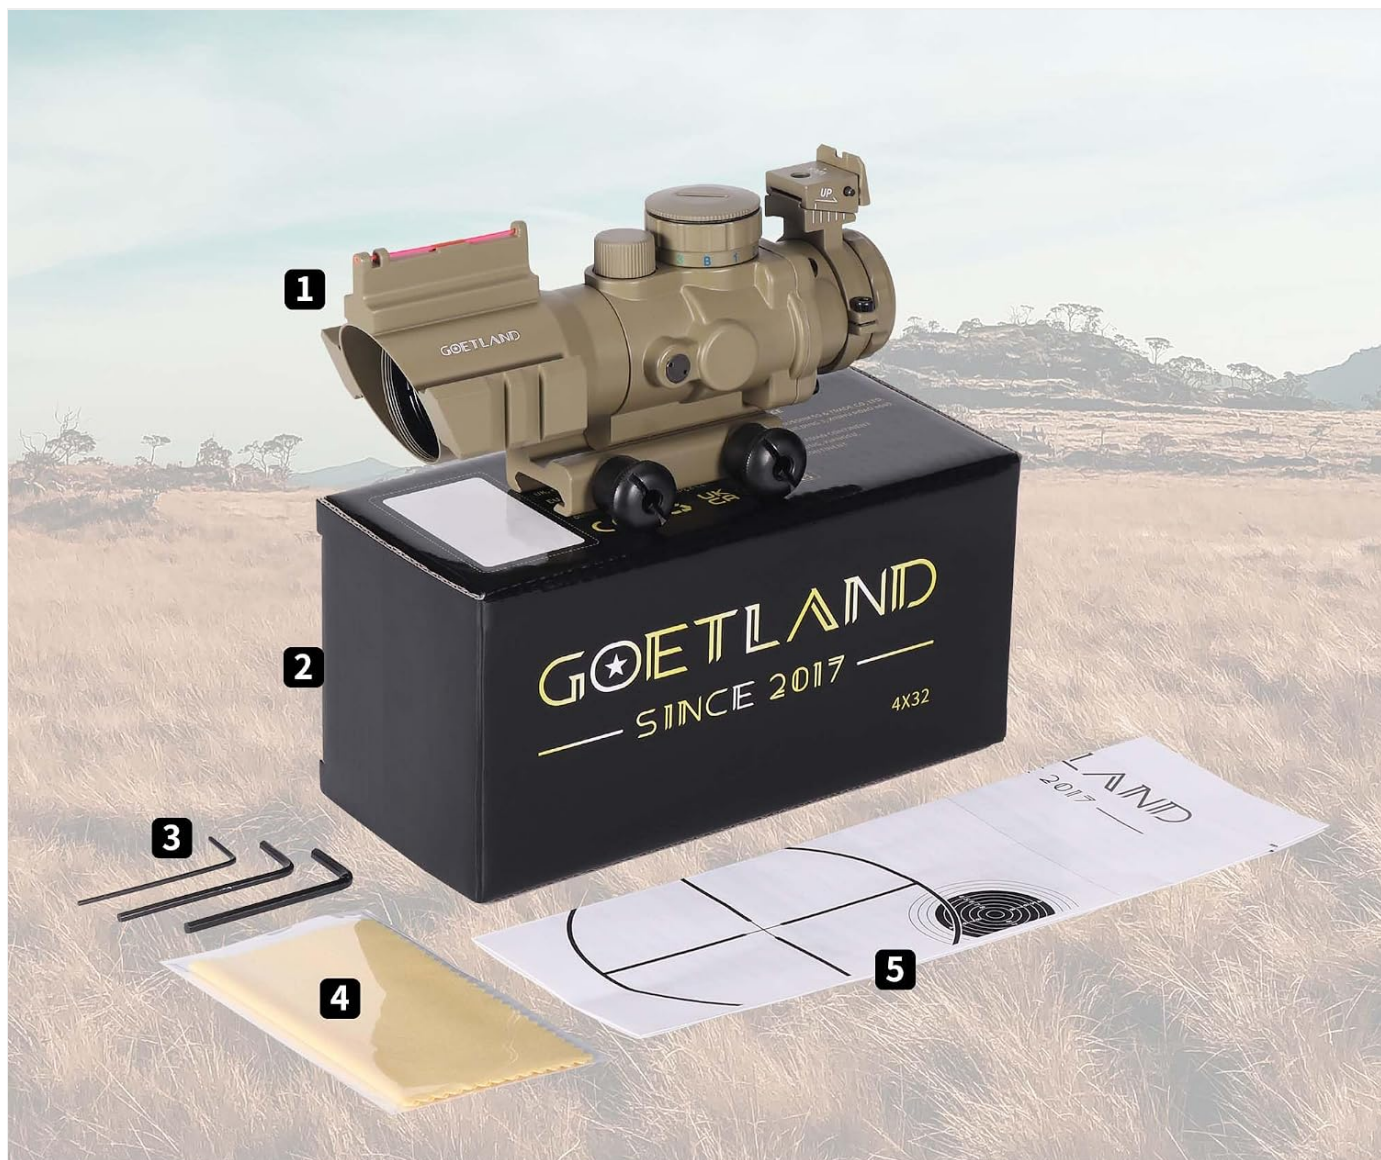

1. Rifle Scope

2. Gift Box

3. Wrench

4. Cleaning Cloth

5. User Manual

Image: The scope displaying its red, green, and blue illuminated reticles.

Windage and Elevation Adjustments:

The scope features precise windage and elevation adjustments to zero your reticle.

1. Remove the protective caps from the windage (side) and elevation (top) adjustment turrets.
2. Use a coin or flat-head screwdriver to turn the adjustment dials. Each click typically represents a specific change in point of impact (e.g., 1/4 MOA).
3. Turn the elevation turret 'UP' to move the point of impact up, and 'DOWN' to move it down.
4. Turn the windage turret 'R' (Right) to move the point of impact right, and 'L' (Left) to move it left.
5. After zeroing, replace the protective caps to prevent accidental adjustments and protect the turrets.

Focus Adjustment:

The eyepiece features a diopter adjustment ring to sharpen the reticle focus for your individual vision.

- Point the scope at a plain, bright background (e.g., a clear sky).
- Look through the scope and quickly glance at the reticle.
- Adjust the diopter ring on the eyepiece until the reticle appears sharp and clear.

MAINTENANCE

Proper maintenance ensures the longevity and performance of your Goetland scope.

Cleaning:

- Use the provided cleaning cloth or a soft, lint-free cloth to wipe external surfaces.
- For lenses, gently brush away any dust or debris with a soft lens brush. Then, use a lens cleaning solution and a clean lens cloth, wiping in a circular motion from the center outwards.
- Avoid using harsh chemicals or abrasive materials on any part of the scope.

Storage:

- Store the scope in a cool, dry place, away from direct sunlight and extreme temperatures.
- Ensure flip-up lens covers are closed to protect the lenses from dust and scratches.
- Remove the battery if storing for extended periods to prevent leakage.



RED/GREEN/BLUE Illuminations 3-Brightness

Image: The scope highlighting its waterproof, shockproof, and fogproof construction.

TROUBLESHOOTING

If you encounter issues with your Goetland scope, consider the following common solutions:

- **Unclear Reticle:** Adjust the diopter ring on the eyepiece until the reticle is sharp.
- **No Illumination:** Check if the CR2032 battery is correctly installed and has sufficient charge. Replace if necessary.
- **Loose Mounting:** Ensure all mounting screws are securely tightened to the 20mm Weaver/Picatinny rail.
- **Fogging:** While the scope is nitrogen-filled and fogproof, extreme temperature changes can sometimes cause external condensation. Allow the scope to acclimate to the ambient temperature.

For persistent issues, please contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	RSC0008-02
Magnification	4x
Objective Diameter	32 mm
Reticle Illumination	Red/Green/Blue, 3 levels
Material	Aluminum Alloy
Color	Sand
Product Dimensions	15.2 x 6.5 x 7.8 cm
Item Weight	450 g
Compatible Devices	Rifle
Mounting Type	Picatinny Editing, Weaver Mount
Batteries Included	No (Requires 1x CR2032)

WARRANTY AND SUPPORT

Warranty Information:

Your Goetland 4x32 Prism Sight Rifle Scope is backed by a 1-year replacement warranty from the date of purchase. This warranty covers manufacturing defects and ensures product reliability under normal use. Please retain your proof of purchase for warranty claims.

Customer Support:

For any questions, technical assistance, or warranty inquiries, please contact Goetland customer support:

- Email: cs@goetland.com

Our support team is committed to providing responsive assistance for any issues you may encounter.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question