

[Manuals.plus](#) /

› [BTSEURY](#) /

› BTSEURY 61 Keys Keyboard Piano User Manual

## BTSEURY BTSEURY2ayhmec7oz

# BTSEURY 61 Keys Keyboard Piano User Manual

Model: BTSEURY2ayhmec7oz

## INTRODUCTION

---

This manual provides essential instructions for the safe and efficient operation of your BTSEURY 61 Keys Keyboard Piano. Please read this manual thoroughly before using the instrument and retain it for future reference.

## SAFETY INFORMATION

---

To prevent electric shock, fire, or damage to the instrument, please observe the following precautions:

- Do not expose the instrument to rain or moisture.
- Do not place containers with liquids on the instrument.
- Do not open the casing. Refer all servicing to qualified personnel.
- Use only the specified power supply.
- Keep out of reach of small children.

## PACKAGE CONTENTS

---

Verify that all items are present in the package:

- 1 x Keyboard Piano
- 1 x Microphone
- 1 x Power Supply
- 1 x User Manual (this document)

## SETUP

---

### Power Connection

Connect the provided power supply to the DC IN port on the back of the keyboard. Plug the power adapter into a standard electrical outlet.



Figure 1: Bottom view of the keyboard, illustrating the battery compartment and power input area.

Alternatively, the keyboard can be powered by batteries (not included). Open the battery compartment on the bottom of the unit and insert the required batteries, observing polarity.

## Microphone Connection

Insert the microphone plug into the MIC IN jack, typically located on the control panel.

## OPERATING INSTRUCTIONS

---



Figure 5: Full view of the BTSEURY 61 Keys Keyboard Piano, highlighting the layout of keys and control panel.

This section details how to use the various features of your keyboard piano.

## Power On/Off

Press the **POWER ON/OFF** button to turn the keyboard on or off. The display will illuminate when powered on.



Figure 2: Left side of the control panel, highlighting the power button and digital display.

## Volume Control

Adjust the overall sound level using the **VOLUME** buttons (up/down arrows).

## Selecting Tones (Instruments)

The keyboard features 200 different tones. To select a tone:

1. Press the **TONE** button.
2. Use the number combination keys or the up/down arrow buttons to select the desired tone number. The selected tone number will appear on the display.



Figure 3: Right side of the control panel, showing tone selection and effect buttons.

## Selecting Rhythms

The keyboard includes 200 rhythms. To select a rhythm:

1. Press the **RHYTHM** button.
2. Use the number combination keys or the up/down arrow buttons to select the desired rhythm number.
3. Press **START/STOP** to begin or end the rhythm.
4. Adjust the tempo using the **TEMPO** buttons.

## Demonstration Songs

The keyboard has 60 demonstration songs.

- Press **DEMO ONE** to play a single demonstration song.
- Press **DEMO ALL** to cycle through all demonstration songs.
- Press **START/STOP** to stop playback.

## Special Effects and Functions

- **Sustain:** Press the **SUSTAIN** button to lengthen the decay of notes. Press again to deactivate.
- **Tremor (Vibrato):** Press the **VIBRATO** button to add a slight pitch variation to notes. Press again to deactivate.
- **Recording:**
  1. Press **REC** to start recording your performance.
  2. Play your desired melody.
  3. Press **PLAY** to listen to your recorded performance.
- **Transpose:** Use the **TRANPOSE +/-** buttons to shift the pitch of the entire keyboard up or down.
- **Keyboard Drum:** Activate the **KEYDRUM** function to assign drum sounds to the keyboard keys.
- **Split:** The **SPLIT** function divides the keyboard into two sections, allowing different tones to be played on each side.
- **Chord Function:** Engage the chord function to play chords with single keys. Refer to the on-screen display or specific chord mode instructions for details.



Figure 4: Overview of the keyboard and its central control panel.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the keyboard. Do not use liquid cleaners, waxes, or solvents.
- **Storage:** When not in use for extended periods, store the keyboard in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries if storing for a long time.
- **Handling:** Avoid dropping or subjecting the keyboard to strong impacts.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound	Power not connected or batteries low. Volume set too low. Headphones connected (if applicable).	Check power supply/replace batteries. Increase volume. Disconnect headphones.
Keys not responding	Keyboard may be in a specific mode (e.g., demo mode). Internal malfunction.	Restart the keyboard. If problem persists, contact customer support.
Distorted sound	Volume too high. Low battery power.	Reduce volume. Replace batteries or use power adapter.

## SPECIFICATIONS

<b>Model Number</b>	BTSEURY2ayhmec7oz
<b>Keys</b>	61
<b>Tones</b>	200
<b>Rhythms</b>	200
<b>Demonstration Songs</b>	60
<b>Functions</b>	Chord, Sustain, Tremor (Vibrato), Recording, Rhythm Control, Keyboard Drum, Double Keyboard, Transfer Control
<b>Dimensions (L x W x H)</b>	Approx. 74.3 x 17.2 x 4.8 cm (29.3 x 6.8 x 1.9 inches)
<b>Weight</b>	Approx. 1.38 kg (3.04 pounds)
<b>Material</b>	ABS
<b>Color</b>	Black

## CUSTOMER SUPPORT

For further assistance or inquiries, please refer to the contact information provided with your purchase or visit the official BTSEURY website.