

Manuals.plus /

> iPower /

> iPower Air Fryer KZ-D6QT-GY Instruction Manual

iPower KZ-D6QT-GY

iPower Air Fryer Model KZ-D6QT-GY Instruction Manual

Brand: iPower | Model: KZ-D6QT-GY

1. INTRODUCTION

Thank you for choosing the iPower 6.34 QT Digital Air Fryer. This manual provides essential information for the safe and efficient operation of your appliance. Please read it thoroughly before first use and keep it for future reference.

Important Safety Instructions

- Always place the air fryer on a stable, heat-resistant surface, away from walls or other appliances to allow adequate air circulation.
- Do not immerse the main unit, cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance matches your local power supply before connecting.
- Supervise children closely when the appliance is in use.
- Do not operate the air fryer if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way.
- Unplug the air fryer from the outlet when not in use and before cleaning. Allow it to cool completely before handling.
- Do not block the air intake or outlet vents during operation.
- Exercise extreme caution when removing the hot basket or crisper plate and when disposing of hot grease.
- Do not use accessories or attachments not recommended by the manufacturer.

2. PRODUCT OVERVIEW

The iPower Digital Air Fryer is designed for healthier cooking with rapid air circulation technology. It features a generous 6.34-quart capacity, a visible cooking window, and 12 preset functions for versatile meal preparation.

Key Features

- **6.34 Quart Capacity:** Ideal for family-sized meals.
- **12 Preset Functions:** Simplifies cooking with pre-programmed settings.
- **Visible Window with Oven Light:** Monitor cooking progress without opening the basket.
- **Nonstick & Dishwasher-Safe Basket:** Easy cleanup.
- **1700 Watts Power:** Ensures fast and efficient cooking.
- **Up to 95% Less Oil:** Enjoy fried foods with significantly reduced fat.



Image: The iPower Air Fryer shown in a kitchen setting with a family, highlighting its 6.34 QT capacity suitable for family meals.

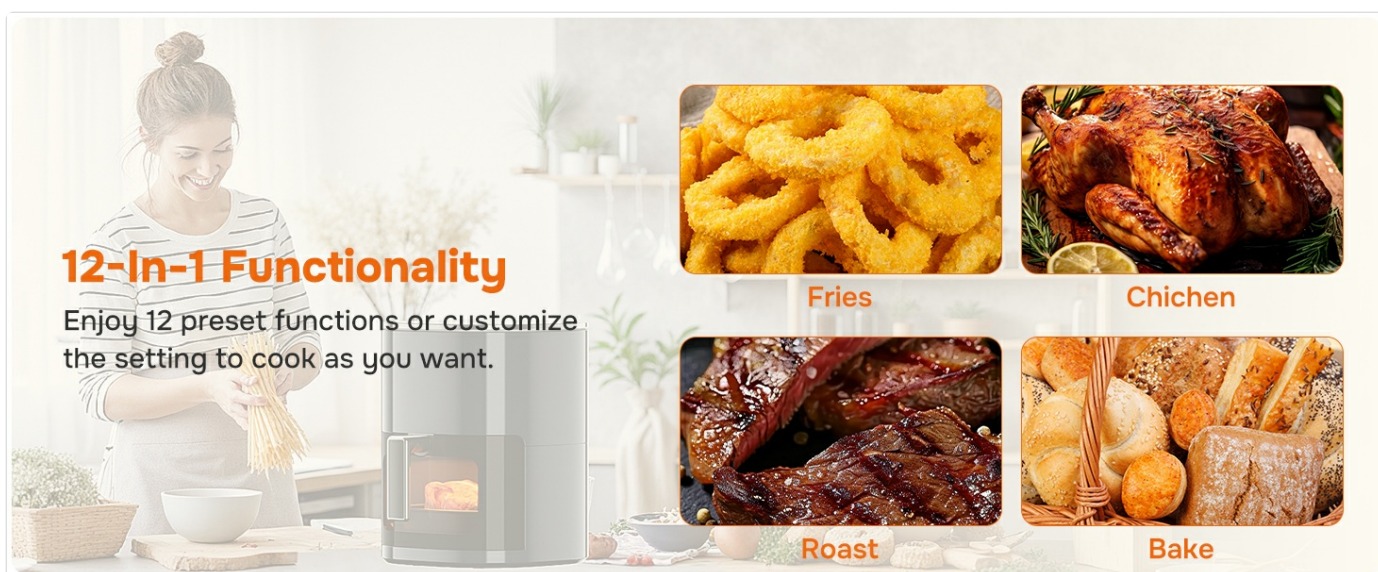


Image: An internal diagram of the air fryer illustrating its rapid air circulation technology, 1700W heating, and maximum temperature of 400°F.

3. SPECIFICATIONS

Model Name	AIR FRYER
Model Number	KZ-D6QT-GY
Capacity	6.34 Quarts
Output Wattage	1700 Watts
Voltage	120 Volts (AC)
Max Temperature Setting	400 Degrees Fahrenheit
Control Method	Touch
Product Dimensions (D x W x H)	10.5" x 12.9" x 13.6"
Item Weight	10 Pounds

Material	Plastic, Stainless Steel
Nonstick Coating	Yes
Dishwasher Safe	Yes (Basket/Accessories)
Special Feature	Programmable



Image: A visual representation of the air fryer's dimensions for placement and storage reference.

4. SETUP

Unpacking

1. Remove all packaging materials, stickers, and labels from the air fryer.
2. Check that all components are present and undamaged.

Initial Cleaning

1. Wipe the exterior of the air fryer with a damp cloth.
2. Wash the air fryer basket and crisper plate with hot water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry completely. These parts are also dishwasher safe.
3. Never immerse the main unit in water.

Placement

1. Place the air fryer on a stable, level, and heat-resistant surface.
2. Ensure there is at least 6 inches (15 cm) of clear space around the back and sides of the appliance to allow for proper air circulation.
3. Do not place the air fryer directly under cabinets or near flammable materials.

5. OPERATING INSTRUCTIONS

Basic Operation

1. Plug the power cord into a grounded electrical outlet. The control panel will illuminate.
2. Carefully pull out the air fryer basket. Place ingredients onto the crisper plate inside the basket. Do not overfill.
3. Slide the basket back into the air fryer until it clicks into place.
4. Use the touch control panel to select a preset function or manually set the temperature and time.
5. Press the 'Start/Cancel' button to begin cooking.



Image: The digital touch control panel displaying the 12 preset cooking functions for easy selection.

Using Preset Functions

The air fryer comes with 12 convenient preset functions. To use them:

1. Press the 'Menu' button repeatedly to cycle through the available presets: Air Fry, Roast, Bake, Reheat, Dehydrate, Chicken, Fries, Steam, Custard Tart, Wings, Seafood, Vegetables.

2. Once the desired preset is selected, the default time and temperature will display.
3. You can adjust the time and temperature using the '+' and '-' buttons if needed.
4. Press 'Start/Cancel' to begin cooking.

Monitoring Cooking with Visible Window

The built-in visible window and oven light allow you to check your food without interrupting the cooking cycle. Press the light bulb icon on the control panel to turn the internal light on or off.



Image: The air fryer's visible window allows users to monitor food as it cooks, ensuring perfect results.

Cooking Video Demonstration

Your browser does not support the video tag.

Video: A demonstration of the iPower Air Fryer in use, showing how to prepare and cook a whole chicken, highlighting the visible window and touch controls.

6. MAINTENANCE

Cleaning

Clean the air fryer after every use to prevent food residue buildup.

1. Unplug the air fryer and allow it to cool completely before cleaning.
2. **Basket and Crisper Plate:** These parts are dishwasher safe. For hand washing, use hot water, dish soap, and a non-abrasive sponge. Ensure all food residue is removed.
3. **Interior:** Wipe the interior with a damp cloth. For stubborn residue, use a mild detergent and a soft brush. Avoid abrasive cleaners.
4. **Exterior:** Wipe the exterior with a damp cloth. Do not use harsh chemicals or abrasive materials.
5. Ensure all parts are completely dry before reassembling and storing.



Image: The air fryer basket and crisper plate are shown being cleaned, emphasizing their dishwasher-safe and nonstick properties.

Storage

Store the air fryer in a cool, dry place. Ensure the power cord is neatly wrapped and secured to prevent damage.

7. TROUBLESHOOTING

If you encounter issues with your iPower Air Fryer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker.
Food is not cooked evenly.	Basket is overcrowded; food not shaken/flipped.	Do not overfill the basket. Shake or flip ingredients halfway through cooking for even results.
White smoke comes from the appliance.	Grease residue from previous use; fatty ingredients.	Clean the basket and crisper plate thoroughly after each use. For fatty foods, drain excess oil from the basket.
E1 Error Code.	Internal sensor issue or malfunction.	Unplug the air fryer, wait 10 minutes, then plug it back in. If the error persists, contact customer support.
Food is not crispy.	Too much moisture; insufficient cooking time/temperature.	Pat food dry before air frying. Increase cooking time or temperature slightly. Ensure a thin layer of oil is applied if necessary.

8. WARRANTY AND SUPPORT

Warranty Information

The iPower Air Fryer is covered by a manufacturer's warranty against defects in material and workmanship under normal household use. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact iPower customer support. Contact details can typically be found on the product packaging, the official iPower website, or through your retailer.

When contacting support, please have your product model number (KZ-D6QT-GY) and purchase date available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question