

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Fockety](#) /
- › [Fockety Chess Piece Holder Instruction Manual \(Model: Focketyv18gryeuid\)](#)

## Fockety Focketyv18gryeuid

# Fockety Chess Piece Holder Instruction Manual

Model: Focketyv18gryeuid

For assistance, please refer to the sections below.

## INTRODUCTION

---

Thank you for choosing the Fockety Chess Piece Holder. This instruction manual provides important information regarding the assembly, operation, maintenance, and specifications of your new chess piece holder. Please read this manual thoroughly before use to ensure proper handling and to maximize the product's lifespan.



**Secure the pieces to prevent tipping over  
Hard iron material, not easy to deform  
Panel and legs for easy assembly**

Image: The Fockety Chess Piece Holder providing a stable platform for chess piece molds, with a scene of children playing chess in the background, illustrating its purpose in crafting chess pieces.

## **SAFETY INFORMATION**

---

- Keep out of reach of small children to prevent accidental injury.
- Handle with care to avoid dropping the product, which may cause damage or injury.
- Ensure the holder is placed on a stable, flat surface during use to prevent tipping.
- Do not expose the product to extreme heat sources beyond its intended use for crafting, as this may affect its material integrity.

## **PACKAGE CONTENTS**

---

Please verify that all components are present in your package:

- 1 x Panel (with 16 holes)
- 4 x Legs

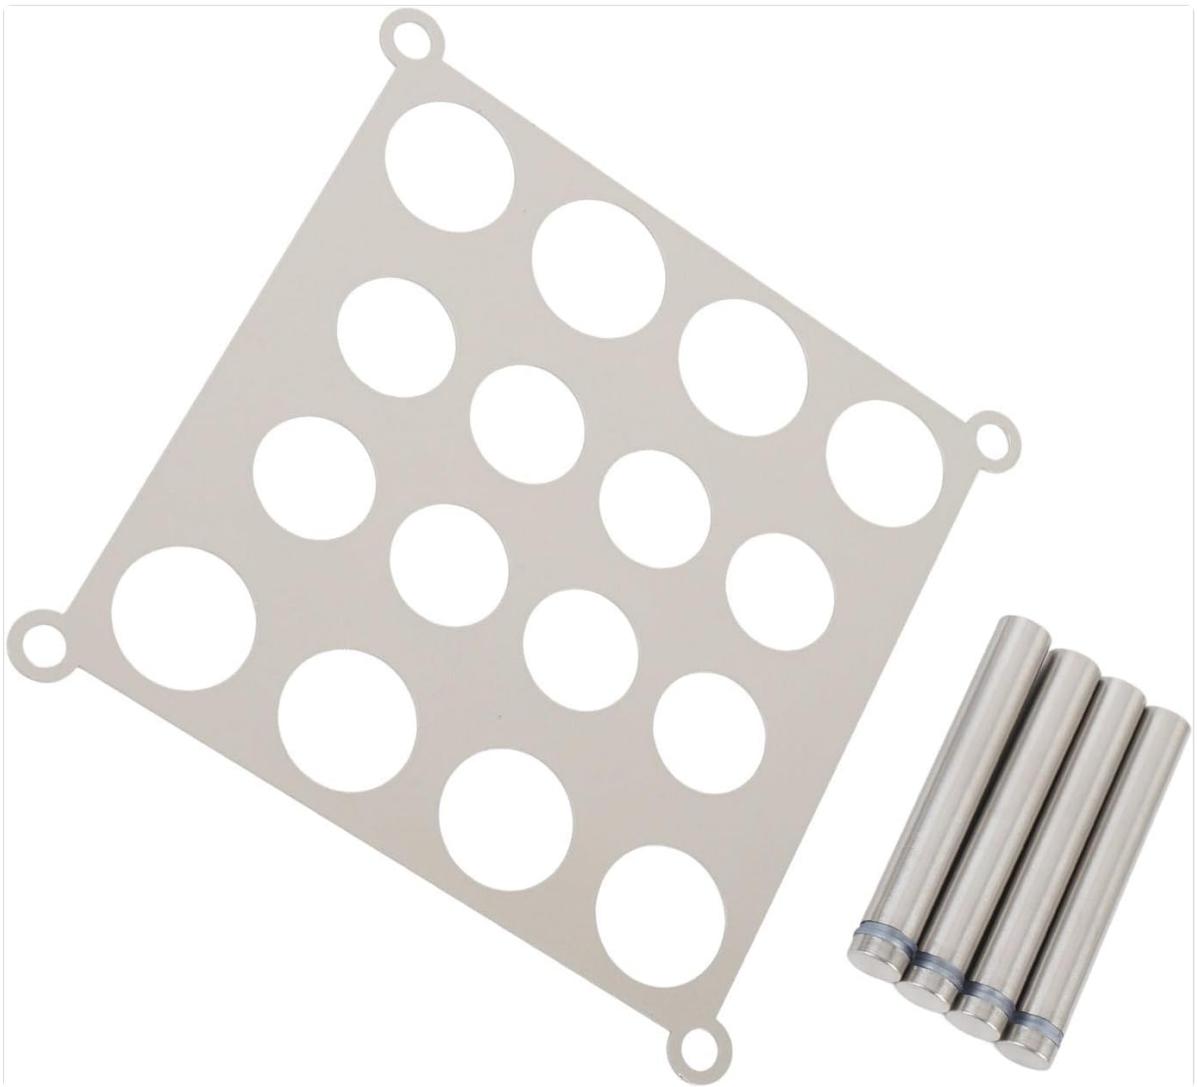


Image: The individual components of the chess piece holder, showing the main panel with holes and the four separate support legs, ready for assembly.

## SETUP AND ASSEMBLY

---

The Fockety Chess Piece Holder is designed for easy assembly. Follow these steps:

1. Unpack all components: one panel and four legs.
2. Identify the four corner holes on the panel.
3. Take one leg and align its threaded end with one of the corner holes on the underside of the panel.
4. Gently screw the leg into the panel until it is securely fastened. Do not overtighten.
5. Repeat this process for the remaining three legs.
6. Ensure all four legs are firmly attached and the holder stands level before use.



Image: A detailed view of one of the cylindrical legs being screwed into the corner of the metal panel, demonstrating the simple assembly mechanism.

## OPERATING INSTRUCTIONS

---

The chess piece holder provides a stable platform for crafting silicone chess pieces. Use it as follows:

1. Place the assembled holder on a flat, stable work surface.
2. Insert your silicone chess piece molds into the holes on the panel. The holder features 16 holes of varying diameters to accommodate different mold sizes: 2 holes at 3cm, 6 holes at 2.8cm, and 8 holes at 2.5cm.
3. Ensure the molds are seated securely within the holes to prevent movement.
4. Proceed with pouring your chosen material (e.g., resin, silicone) into the molds. The holder's stable structure prevents tipping and spilling during this process.
5. Allow the material to cure or set according to its specific instructions while the molds remain supported by the holder.
6. Once cured, carefully remove the molds and finished chess pieces from the holder.



Image: A user carefully pouring a liquid crafting material into silicone chess piece molds that are securely held within the Fockety Chess Piece Holder, demonstrating the pouring process.



Image: A user adding decorative glitter to silicone chess piece molds while they are held steady by the Fockety Chess Piece Holder, showcasing customization during the crafting process.

## MAINTENANCE

---

To ensure the longevity and optimal performance of your Fockety Chess Piece Holder, follow these maintenance guidelines:

- **Cleaning:** After each use, wipe down the holder with a soft, damp cloth to remove any residue from crafting materials. For stubborn stains, a mild soap solution can be used, followed by thorough rinsing and drying.
- **Drying:** Always ensure the holder is completely dry before storing to prevent rust, as it is made of iron.
- **Storage:** Store the holder in a dry environment away from excessive moisture or corrosive substances.
- **Inspection:** Periodically check the leg attachments to ensure they remain tight. Retighten if necessary.

## TROUBLESHOOTING

---

If you encounter any issues with your chess piece holder, consider the following:

- **Holder is unstable:** Ensure all four legs are securely tightened to the panel. Verify that the holder is placed on a flat, even surface.
- **Molds do not fit:** Check the diameter of your molds against the specified hole sizes (2 x 3cm, 6 x 2.8cm, 8 x 2.5cm). Some molds may not be compatible if their base diameter is outside these ranges.
- **Material spillage:** Ensure molds are properly seated and stable within the holes before pouring. Pour materials slowly and carefully.

## SPECIFICATIONS

Feature	Detail
Model Number	Focketyv18gryeuid
Product Material	Iron
Panel Size (L x W)	Approx. 15 x 15 cm (5.9 x 5.9 inches)
Overall Dimensions (L x W x H)	7.09 x 7.09 x 0.79 inches (assembled height will be greater due to legs)
Leg Height	Approx. 8 cm (3.1 inches)
Number of Holes	16
Hole Diameters	2 x 3cm (1.2in), 6 x 2.8cm (1.1in), 8 x 2.5cm (1in)
Item Weight	Approx. 230g (8.1 ounces)
Manufacturer	Fockety

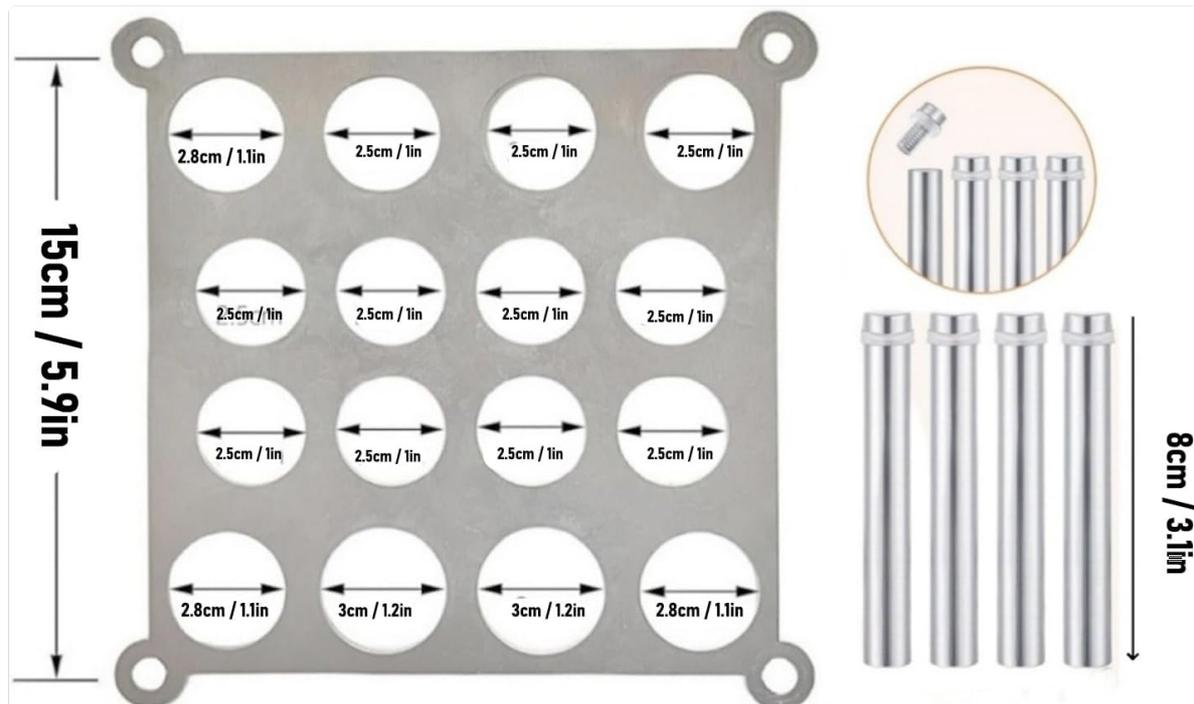


Image: A visual representation of the holder's dimensions, detailing the panel size, leg height, and the various diameters of the 16 holes for different chess piece molds.

## WARRANTY AND SUPPORT

---

For any questions, concerns, or support regarding your Fockety Chess Piece Holder, please contact the seller or manufacturer directly through your purchase platform. Please have your model number (Focketyv18gryeuid) and purchase details ready for faster assistance.