

[Manuals.plus](#) /

› [eKids](#) /

› eKids Wicked Karaoke Microphone WK-B12 User Manual

eKids WK-B12

eKids Wicked Karaoke Microphone WK-B12 User Manual

Model: WK-B12 | Brand: eKids

INTRODUCTION

Thank you for choosing the eKids Wicked Karaoke Microphone. This device is designed to provide an engaging and interactive singing experience for children, featuring Bluetooth connectivity for streaming music, a built-in song, echo effects, and a dynamic light show. This manual provides essential information for proper setup, operation, and maintenance of your microphone.





Figure 1: eKids Wicked Karaoke Microphone, showcasing its vibrant design and controls.

SETUP

1. Battery Installation

The microphone requires 3 AA batteries (included). Follow these steps for installation:

1. Locate the battery compartment on the back of the microphone.
2. Use a Phillips head screwdriver to open the battery compartment cover.
3. Insert 3 fresh AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and tighten the screw.



WICKED

MICROPHONE

Microphone

LIGHTS
FLASH
WITH THE
MUSIC

Bluetooth®:
Wirelessly streams
audio from any
compatible device
(device sold separately)

Built-in Song
Echo Effect
Mic On/Off

Speaker


SING
ALONG TO
BUILT-IN
MUSIC

"Defying Gravity" from the film WICKED Performed by Cynthia Erivo Music and Lyrics by Stephen Schwartz
Copyright © 2003 Stephen Schwartz All rights reserved. Used by permission of Grey Dog Music (ASCAP)
Courtesy of Universal Pictures

Bluetooth® is a registered trademark of Bluetooth SIG Inc. Bluetooth technology is incorporated under license from Bluetooth SIG Inc.

CONSUMER INFORMATION • PRODUCT: Bluetooth® Microphone • **WARRANTY** One year limited warranty. Visit www.eKids.com/support for details. Valid only in U.S.A. • **CONTENTS:** Bluetooth Microphone & Instruction Manual. • **AGE GRADE:** Ages 5 and over

• **REQUIRES:** 3 x "AA" (LR6) batteries (included). The batteries included in this box are for demonstration purposes only. Do not mix old and new batteries, and do not mix alkaline, carbon-zinc, or rechargeable nickel-cadmium batteries. Insert batteries with correct polarity (+/-) as indicated. Do not attempt to recharge non-rechargeable batteries. To prevent battery leakage or damage, remove batteries from product if it will not be used for a month or longer. Use extreme caution handling leaking batteries (avoid direct contact with eyes and skin). If battery leakage comes in contact with eyes, IMMEDIATELY flush the eyes gently with flowing, lukewarm water for at least 30 minutes. If skin contact occurs, wash skin with clean water for at least 15 minutes. Seek medical attention if any symptoms occur. Follow applicable laws and local regulations for the disposal and transportation of batteries. DO NOT DISPOSE OF BATTERIES IN A FIRE; BATTERIES MAY EXPLODE OR LEAK. • Product specifications and colors may vary from photo. • Packaging should be kept as it contains important information.

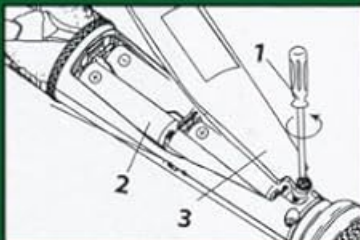

BATTERY INSTALLATION

Note: Batteries should always be installed by an adult.

1. Use a Phillips screwdriver to open the battery compartment door located on the back of the unit.
2. Install 3 "AA" (LR6) batteries with + and - terminals as indicated in the compartment.
3. Replace the compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten the screw.



This product supports Bluetooth wireless technology enabled devices and secure simple pairing profiles.



© Universal City Studios LLC
All Rights Reserved.



Distributed by eKids, LLC • 1299 Main Street
Rahway, NJ 07065 • www.eKids.com
MANUFACTURED IN CHINA

WK-B12.EMv24M



0 92298 96180 4

Figure 2: Back of the microphone packaging with a diagram illustrating battery installation.

2. Initial Power On & Demo Mode

Upon first use or after battery replacement, the microphone may be in demo mode. To exit demo mode and enable full functionality:

1. Locate the ON/OFF switch on the side of the microphone.
2. Slide the switch to the OFF position, then back to the ON position. This will activate the microphone's full features.

3. Bluetooth Pairing

To wirelessly stream audio from a compatible device (smartphone, tablet, laptop):

1. Ensure the microphone is powered on.
2. Press the Bluetooth button (**Bluetooth icon**) on the microphone. The microphone will enter pairing mode, indicated by a flashing light.
3. On your device, enable Bluetooth and search for available devices.
4. Select "eKids Wicked Mic" (or similar) from the list of devices to pair.
5. Once paired, you can stream music from your device through the microphone's speaker.

OPERATING INSTRUCTIONS



Figure 3: Close-up of the microphone's control panel with labeled buttons.

1. Power On/Off

- Slide the ON/OFF switch on the side of the microphone to turn it on or off.

2. Microphone Function

- Press and hold the Microphone button (**microphone icon**) to amplify your voice. Release the button to stop amplification.

3. Echo Effect

- Press the Echo button (**sound waves icon**) to toggle the echo effect for your voice. Press once for on, press again for off.

4. Built-in Music

- Press the Song button (**music note icon**) to play an extended clip of the song 'Defying Gravity'. Press again to stop.

5. Light Show

- The microphone features a built-in light show that flashes along with the music, enhancing your performance. This feature activates automatically when music is played or when you sing into the microphone.

6. Product Demonstration Videos

Your browser does not support the video tag.

Video 1: Unboxing, Testing, and Usage of the eKids Wicked Bluetooth Karaoke Microphone. This video demonstrates the initial setup and basic functions of the microphone.

Your browser does not support the video tag.

Video 2: Detailed Look at the Functions and Options of the eKids Wicked Karaoke Microphone. This video provides a closer look at each button and its corresponding feature.

MAINTENANCE

1. Cleaning

- Wipe the microphone with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid exposing the microphone to excessive moisture.

2. Battery Care

- Always use fresh AA batteries. Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the device will not be used for an extended period to prevent leakage.
- Dispose of used batteries responsibly according to local regulations.

3. Storage

- Store the microphone in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Solution
No sound from microphone/speaker.	Ensure the microphone is powered on. Check battery levels and replace if necessary. Verify Bluetooth connection if streaming.
Bluetooth not connecting.	Ensure the microphone is in pairing mode (Bluetooth button pressed). Make sure your device's Bluetooth is enabled and within range (approx. 30 feet). Try restarting both devices.
Echo effect not working.	Press the Echo button to ensure the effect is activated.
Built-in music not playing.	Press the Song button. Ensure the microphone is not in demo mode.

SPECIFICATIONS

Brand:

eKids

Model Name:

WK-B12

Connectivity Technology:

Bluetooth

Connector Type:

Wireless

Special Feature:

Echo Control

Compatible Devices:

Laptop, Smartphone, Tablet

Color:

Wicked 1

Included Components:

3 AA batteries

Power Source:

Battery Powered

Number of Batteries:

3 AA batteries required (included)

Enclosure Material:

Plastic

Manufacturer:

KIDdesigns

UPC:

092298961804

Mfr Part Number:

WK-B12

Your browser does not support the video tag.

Video 3: Full Measurements, Height, Width, and Depth of the Wicked Bluetooth Karaoke Microphone. This video provides detailed dimensions of the product.

WARRANTY & SUPPORT

Warranty Information

This eKids Wicked Karaoke Microphone comes with a **1-year limited warranty**. Please retain your proof of purchase for warranty claims.

Customer Support

For further assistance, troubleshooting, or to explore more eKids products, please visit the official [eKids Brand Store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question