

eKids B0DQYSN5W

eKids Wicked Karaoke Microphone with Boombox Instruction Manual

Brand: eKids | Model: B0DQYSN5W

INTRODUCTION

Thank you for choosing the eKids Wicked Karaoke Microphone with Boombox. This device is designed to provide an engaging and fun karaoke experience for children aged 3 and up, featuring built-in music from the Wicked film, a working microphone, and Bluetooth connectivity for streaming additional music. Please read this manual carefully to ensure proper use and maintenance of your product.

PRODUCT FEATURES

- **Bluetooth Speaker:** Connect any music device via Bluetooth to stream popular karaoke playlists and more.
- **Karaoke Microphone:** Sing along with your favorite Wicked music using the wired microphone to amplify your voice.
- **Wicked Design:** Features cute and colorful graphics inspired by the new film, Wicked, along with a colorful light show.
- **Built-in Music:** Includes extended clips of the songs 'Defying Gravity' and 'Popular'.
- **Portable Design:** Lightweight and designed with a built-in handle for easy transport.

SETUP

Battery Installation

The eKids Wicked Karaoke Microphone with Boombox requires 3 AA batteries (included). To install or replace batteries:

1. Locate the battery compartment on the back of the unit.
2. Using a screwdriver, open the battery compartment cover.
3. Insert 3 new AA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover and secure it with the screw.



Image: Rear view of the boombox, highlighting the battery compartment and volume controls.

Microphone Connection

The wired microphone is permanently attached to the boombox. Ensure the microphone cable is not tangled or obstructed for optimal performance.

OPERATING INSTRUCTIONS

Power On/Off

To turn the boombox on or off, press the **Power button** (usually marked with a circle and a vertical line) located on the front panel.

Playing Built-in Music

Press the **Music Note button** on the front panel to play the pre-loaded songs from the Wicked film, including 'Defying Gravity' and 'Popular'. Press again to cycle through the songs.

Your browser does not support the video tag.

Video: An official product video demonstrating the eKids Wicked Karaoke Microphone with Bluetooth Speaker, including built-in music playback and light effects.

Using the Microphone

To use the microphone, ensure the boombox is powered on. Your voice will be amplified through the speaker. Press the **Microphone On/Off button** (often depicted as a microphone icon) to activate or deactivate the microphone function.

Bluetooth Connectivity

To connect an external device via Bluetooth:

1. Turn on the boombox.
2. Press the **Bluetooth button** (usually marked with the Bluetooth symbol) on the front panel. The unit will enter pairing mode.
3. On your external device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
4. Select "eKids Wicked Karaoke" or a similar name from the list of devices to pair.
5. Once paired, you can stream music from your device through the boombox speaker and sing along with the microphone.



Image: Product overview highlighting Bluetooth connectivity with a smartphone.

Volume Control

Adjust the volume using the **Volume switch** located on the back of the unit. It typically offers Low, Medium, and High settings.

Light Show

The boombox features a colorful light show that enhances the performance. The lights activate automatically when the unit is in use.

MAINTENANCE

- **Cleaning:** Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Storage:** When not in use, store the boombox in a cool, dry place away from direct sunlight.
- **Battery Care:** Remove batteries if the unit will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

Problem	Solution
Unit does not power on.	Check if batteries are correctly installed and not depleted. Replace with new AA batteries if necessary.
Microphone is not amplifying voice.	Ensure the Microphone On/Off button is activated. Check if the microphone cable is securely connected and undamaged.
Cannot connect via Bluetooth.	Ensure the boombox is in Bluetooth pairing mode. Make sure your external device's Bluetooth is enabled and within range. Try restarting both devices.

Problem	Solution
Sound is distorted or too low/high.	Adjust the Volume switch on the back of the unit. Check the volume settings on your connected Bluetooth device.

SPECIFICATIONS

Feature	Detail
Item Weight	1.43 pounds
Product Dimensions	10.63 x 2.24 x 8.17 inches
Batteries	3 AA batteries (included)
Power Source	Battery Powered
Compatible Devices	Smartphone, Tablet, Laptop
Special Features	Built-In Handle, Built-In Microphone, Built-In Song Track, Portable

SAFETY INFORMATION

- This product is intended for children aged 3 and up.
- Adult supervision is recommended during use.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Dispose of batteries properly according to local regulations.
- Keep the microphone cord away from young children to prevent strangulation hazards.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the packaging or visit the official eKids website. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DQYSN56W>

More documents and user manuals: <https://manuals.plus/>